

THE WHITE BOILER COMPANY

Instructions for Use

Installation and Servicing

To be left with the user

HIGH EFFICIENCY

CONDENSING

COMBINATION BOILER

WH 80 (T)

Natural Gas (G20) I_{2H} - II_{2H3+} G. C. No. 47-506-05

LPG (G30-31) I_{2H} - II_{2H3+} G.C. No. 47-506-06

WH 90 (T)

Natural Gas (G20) I_{2H} - II_{2H3+} G. C. No. 47-506-07

LPG (G30-31) I_{2H} - II_{2H3+} G.C. No. 47-506-08



Listed by The United Kingdom Water
Fitting Byelaws Scheme




CE 1312



Technical and illustrative data are not binding and can be modified without prior notice.
The descriptions and illustrations in the present booklet are for guidance purposes only.

THE WHITE BOILER COMPANY
A Ravenheat Group Company
CHARTISTS WAY, MORLEY, LEEDS, LS27 9ET
TEL. 0113 252 7007 - FAX: 0113 238 0229
Website : www.ravenheat.co.uk - E-mail : sales@ravenheat.co.uk



HIGH EFFICIENCY CONDENSING BOILER FOR CENTRAL HEATING AND DOMESTIC HOT WATER

This new highly efficient turbo-modulating boiler is designed to meet domestic hot water and central heating requirements at super high efficiency.

POSITION

The appliance is extremely versatile as it can be fitted in almost any room. The appliance is room sealed so there is no contact between the combustion chamber and living accommodation. This guarantees maximum safety and efficiency. Each boiler has been designed and manufactured in our modern plant to exacting ISO 9001 discipline, all boilers carry full CE marking of approval. Technical sales and commercial services are available throughout the UK Mainland. This product is guaranteed by The White Boiler Company, Chartists Way, Morley, LEEDS, LS27 9ET. Telephone No (0113) 252 7007.

Guarantee is a full 12 months from date of purchase providing the appliance has been fitted in accordance with these instructions and relevant codes of practice.

MAJOR COMPONENTS

- Gas valve.
- Variable head pump suitable for any type of central heating system.
- Burner with flame stabiliser designed to operate under all thermal conditions.
- Unique **condensing heat exchanger** for high thermal flue transfer from gases to water.
- Stainless steel plate heat exchanger for super high heat transfer to domestic hot water supply.
- Built in frost protection.
- Printed circuit board designed to connect to room stat and/or timer/frost stat.
- Aesthetically pleasing panels and controls.
- On/Off ball valves for shutting off gas, central heating and domestic hot water circuit.
- Safety relief valve (for safety discharge).
- Programmable 7 day module with digital display (time clock version only).

NOTE: Due to the high efficiency of this boiler a plume of water vapour will form at the flue terminal during operation.

COSHH - CONTROL OF SUBSTANCES HAZARDOUS TO HEALTH IMPORTANT

It is the Users/Installers responsibility to ensure that the necessary personal protective clothing is worn when handling this appliance, and where applicable the pertinent parts that contain any materials that could be interpreted as being injurious to health and safety.

GENERAL INFORMATION:

GLUES AND SEALANTS - exercise caution - if these are still in liquid form.

THE WHITE BOILER COMPANY use only high quality material for production of this product, in an effort to protect the environment wherever possible components should be recycled.

WARNING: when installing the appliance, care should be taken to avoid any possibility of injury when handling sheet metal parts.

Users instructions

Sections	Page	Sections	Page
1 Users guide	6	5 Installation	25
1.1 Introduction	6	5.1 Warning	25
1.2 Clearances around the appliance	6	5.2 Delivery	25
1.3 Operating safety checks to protect your appliance (checking the system pressure)	6	5.3 Unpacking of boiler	25
1.4 Appliance status indicators	7	5.4 Positioning of the boiler	25
1.5 Digital display	8	5.5 Optional extras	26
1.6 Boiler value	8	5.6 Plume management kit	27
1.7 Time	8	5.7 Installing the appliance for rear flue outlet	28
1.8 Programming the heating times	9	5.8 Installing the appliance for side flue outlet	28
1.9 Diagnostic	9	5.9 Completing horizontal flue installation	31
		5.10 Intake and exhaust terminal components	31
2 General layout	10	5.11 In-line flue bend and flue extension	31
2.1 Operating scheme	11	5.12 Vertical flue instructions	32
2.2 Introduction	12	5.13 Installation instructions for twin flue pipe	34
2.3 Description of control system and sequence of operation	12	5.14 Twin flue instructions	34
2.4 Domestic hot water mode	12	5.15 Exhaust / suction system with concentric pipes for flat or sloping roofs.	35
2.5 Central heating mode	12	Extensions with two separate pipes	
2.6 General function	12	5.16 Exhaust / suction system with two separate rated 80 dia. pipes	35
2.7 Overall dimension	13	exhaust on flat or sloping roof, suction from vertical wall	
2.8 Safety device	13	5.17 Exhaust / suction system with two separate pipes through a single vertical wall	35
2.9 Available pump head	13	5.18 Installation instructions for 80/125 concentric flue system	36
2.10 Pressure drop across appliance	13	5.19 Assemble boiler	37
3 Technical data WH 80(T) natural gas	14	5.20 Fitting valve pack	37
3.1 Technical data WH 80(T) LPG	15	5.21 Gas connection	37
3.2 Technical data WH 90(T) natural gas	16	5.22 Central heating connection	37
3.3 Technical data WH 90(T) LPG	17	5.23 Domestic hot water connection	37
4 General requirements	18	5.24 Position of water/gas connections	37
4.1 Safety	18	5.25 Safety valve discharge	38
Gas safety (Installation and use)		5.26 Condensate drain connection	38
4.2 General information	18	5.27 Converting the appliance to different gas types	39
4.3 Location of boiler	19	5.28 Electrical connections	39
4.4 Clearances around the appliance	19	5.29 Outdoor sensor	39
4.5 Important notice	19		
4.6 Gas supply	19	6 Commissioning	40
4.7 Flue system	20	6.1 Gas supply installation	40
4.8 Air supply	20	6.2 Electrical installation	40
4.9 Water circulation (central heating)	20	6.3 Initial filling of the system	40
4.10 Flue terminal position	21	6.4 Setting the heating system design pressure	40
4.11 Pipework	22	6.5 Filling the hot water system	40
4.12 Boiler interlock control	22	6.6 Lighting the boiler	40
4.13 Draining tap	22	6.8 Check the gas pressure	41
4.14 Air release points	23	6.9 Combustion check	41
4.15 Mains water feed: central heating	23	6.10 Checking the flue system	42
4.16 Permissible methods of filling	23		
4.17 Sizing of additional expansion vessel	24		
4.18 Installation to an existing central heating system	24		
4.19 Water treatment	25		
4.20 Hard water areas	25		
4.21 Domestic water	25		
4.22 Electrical supply	25		

Sections	Page	Sections	Page
6.11 Checking the heating thermostat	42	11 Spare parts	55
6.12 Testing/regulating the D.H.W flow	42	12 Benchmark commissioning checklist details	60
6.13 Keep hot	42	12.1 Analyser check list	65
6.14 C.H. high/low temperature	42		
6.15 Range rating central heating or/and domestic hot water	43		
6.16 Test mode	43		
6.17 Instructing the user	43		
7 Servicing instructions	44		
7.1 Boiler frost protection	44		
7.2 To inspect and clean the appliance	45		
8 Replacements of parts	45		
8.1 General	45		
8.2 To remove front panel	45		
8.3 To remove left and right panels	46		
8.4 To remove/replace spark igniter box	46		
8.5 To remove/replace fan	46		
8.6 To remove/replace the electrodes	47		
8.7 To remove/replace the burner	47		
8.8 To remove/replace the heat exchanger	47		
8.9 To remove/replace expansion vessel	48		
8.10 To remove/replace gas valve	48		
8.11 To remove/replace plate heat exchanger	48		
8.12 To remove/replace the water pressure transducer	48		
8.13 To remove/replace diverter valve motor	49		
8.14 To remove/replace C.H. diverter valve	49		
8.15 To remove/replace D.H.W. diverter valve mechanism	49		
8.16 To remove/replace pump	49		
8.17 To remove/replace automatic air vent	49		
8.18 To remove/replace safety relief valve	50		
8.19 To remove/replace D.H.W. sensor	50		
8.20 To remove/replace C.H. flow and return sensors	50		
8.21 To remove/replace flue sensor	50		
8.22 To clean and remove/replace condensing trap	50		
8.23 To remove panel control box	51		
8.24 To remove the instrument panel	51		
8.25 To remove/replace control board	51		
8.26 To remove/replace digital display board	51		
8.27 External control connection	51		
9 Fault finding Central heating	52		
9.1 Fault finding Domestic Hot Water	53		
10 Electrical system diagram	54		

1 USERS GUIDE

It is the law that all gas appliances are installed by a competent person, in accordance with the gas safety installation and to the current Gas Safety (Installation and Use) Regulations B.S.5440:2-(2000).

All registered installers carry a Gas Safe Register ID card and have a registration number. Both should be recorded in your boiler Log book. You can check your installer's registration at www.gassaferegister.co.uk.



ESCAPE OF GAS

Should a gas leak be suspected, contact your gas supplier without delay.

GAS EMERGENCY NUMBER: 0800111999

Do NOT search for gas leaks with a naked flame.

WARNING: This appliance must be earthed.

1.1 INTRODUCTION

Please carefully read the information given in this booklet to help you gain maximum control from your appliance with minimum trouble and cost.

Your White Boiler Company Condensing Low Nox combination boiler has been designed to supply your Central Heating and Domestic Hot Water directly from one unit. When Central Heating is operating, the circulation will be interrupted when Domestic Hot Water is being drawn off (domestic hot water has priority). This will normally not affect the level of Heating.

PLEASE NOTE:

Due to the high efficiency of this appliance and resulting low flue gas exhaust temperature a white plume of condensation vapour (cool steam) will be emitted from the flue outlet terminal, this is quite normal. It will be particularly evident during periods of low outdoor temperature or when the boiler is working at its optimum performance (Plume Management kits are available on request).

IMPORTANT:

In the unlikely event of the exhaust flue gases exceeding the overheat temperature setting, the boiler operation will be stopped to prevent damage to the appliance.

1.2 CLEARANCES AROUND THE APPLIANCE

Side clearance:

The position of the appliance must provide a minimum clearance of only 5mm as the side panels do not require removing for servicing.

However, if the option is preferred to remove the panels then a minimum clearance of 55mm is required.

Top clearance:

The top clearance should be a minimum of 125 mm.

Bottom clearance:

A minimum bottom clearance of 80 mm is required between the appliance and any surface, though 150 mm is preferred whenever possible.

Front clearance:

A minimum of 450 mm is required in front of the appliance for access during servicing, the front clearance can be reduced when installed in a cupboard to 25 mm from the access door.

USER CONTROLS

This appliance is designed to operate with the minimum of ease for the user. All the controls are found on the control panel on the front of the boiler.

1.3 OPERATING SAFETY CHECKS TO PROTECT YOUR APPLIANCE (CHECKING THE SYSTEM PRESSURE)

Before lighting the appliance check that the Central Heating system pressure is not less than 1 bar. If it is below this it will be necessary to re-pressurise the system, between 1 and 1.5 bar to allow the boiler to operate. To view the system pressure press the P button once, this will display the current pressure (**if the pressure is on nil or too low, then error code 08E is displayed**).

A filling device (filling loop) will have been fitted on the system.

This is usually on the pipework near to the boiler. If you are unsure of its position, or you cannot identify it, consult the installer who fitted the boiler.

The filling loop usually consists of two taps and a separate silver coloured braided flexible pipe with connection fittings. Only when re-pressurising should the braided flexible pipe be connected between the two taps, ensure that the nuts or the pipe ends are tightened onto the taps.

Fully open one of the taps first and then while monitoring the water pressure on the digital display, carefully open the second tap. When the water pressure is to a maximum of 1.5 bar turn both taps off.

Disconnect the flexible pipe from the taps (a small amount of water may be present).

Keep the pipe in a safe place for future use.

Press the P button once to return to the main screen.

In the event of an error, the appliance will show a sequence code displayed on the digital display of the control panel (fig. 1). By pressing the "RESET" button it is possible to relight the boiler (see page 51 for list of error codes).

1.4 APPLIANCE STATUS INDICATORS

Your boiler is equipped with a large LCD display that indicates the appliance operating status (fig. 1).

After a long period switched off (no power supply), the first switch on the internal backup circuit will charge in order to maintain time and update parameters. The screen will display CLOW, after a few minutes of power supply the display will be charged enough to allow all the functions.

During the initial charge time, the display doesn't allow the visualisation and/or modification function parameters. Instead other functions are working. When the appliance operates in rest mode, the display shows the boiler temperature and, for the time clock version only, the time. Alternatively the digital display also shows the water pressure.

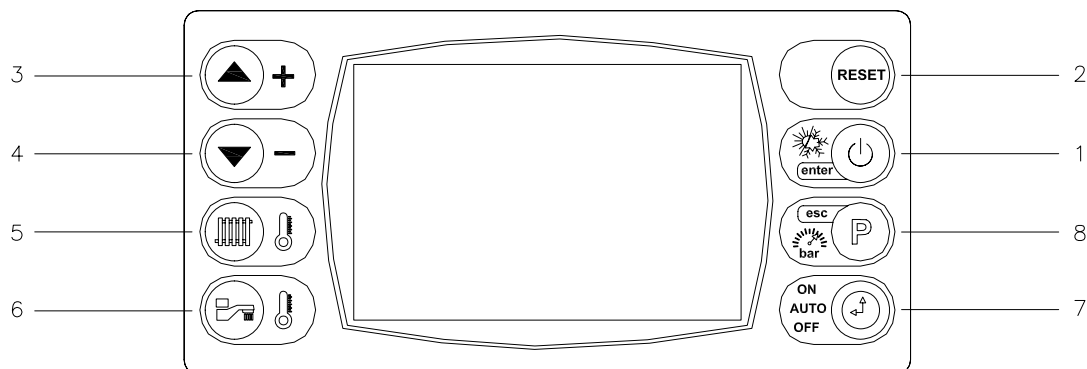


Fig. 1

KEY:

1 - ON/OFF button.

Press to turn the boiler ON, "SUM" (hot water only) "WIN" (hot water and heating if set) and OFF.

Press the button also to confirm selections.

2 - Press to reset the appliance if ever an error code is displayed.

3/4 - Temperature and function mode selectors.

Press the arrow up or the arrow down to increase or decrease the heating or domestic hot water outlet temperature, when the digital display is in hot water or domestic set-point temperature.

Press also to show the boiler values or to show the options program when the digital display is in menu setting.

5 - Press to set the Central Heating Temperature required (when in winter mode).

Press the arrow up or the arrow down buttons to increase or decrease the temperature.

6 - Press to set the Domestic Hot Water Temperature required.

Press the arrow up or the arrow down buttons to increase or decrease the temperature.

7 - TIMER MODE (time clock version only).

Press to select "Auto" (heating times set), "Manual" (heating on all the time) and off (heating off).

8 - Press to show the boiler values.

Use the arrow up and arrow down buttons to select the follows info:

PBAR: water pressure
SFAN: speed fan (the display shows 3 digits (e.g. 500 = 5000 rpm)
TFLOW: flow temperature
TRET: return temperature
TDHW: domestic hot water temperature
PWR: % power of modulation.

- Press 3 seconds to enter into menu.

Use the arrow up or arrow down buttons to select the following options:

- TIME (time clock version only): It is possible to set the time and the current day (Monday 1, Tuesday 2, Wednesday 3, Thursday 4, Friday 5, Saturday 6, Sunday 7), see section 1.7.
- PTMR (only time clock version): Is possible to set the time clock, see section 1.8.
- BOIL: Is possible to set the boiler parameters
 - C.H. max fan speed
 - D.H.W. max fan speed
 - Keep hot: "0" disabled and "1" enabled
 - C.H. High/Low temperature: "1" high/"2" low.

1.5 DIGITAL DISPLAY

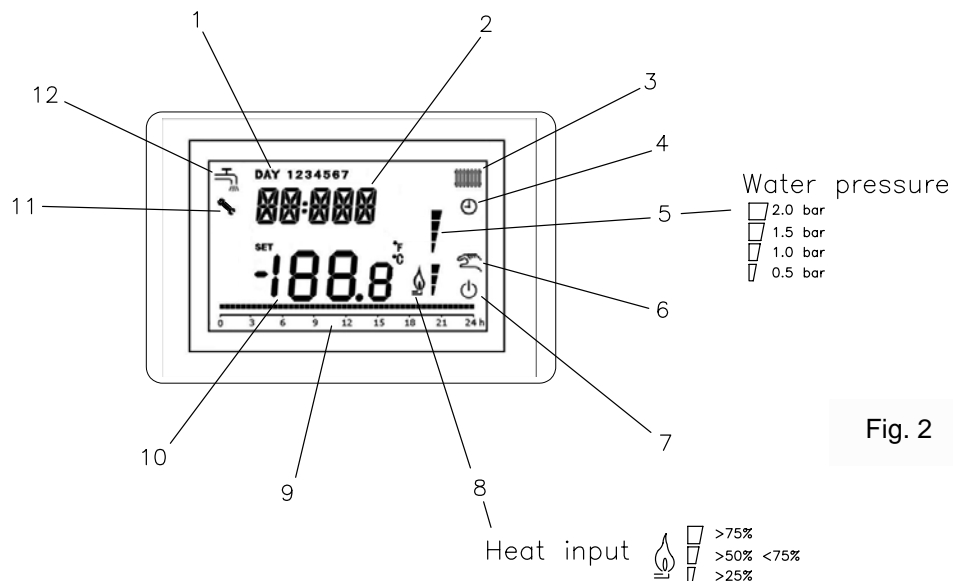


Fig. 2

KEY

- 1 - Day indicator:
(time clock version only)
 - 1. Monday
 - 2. Tuesday
 - 3. Wednesday
 - 4. Thursday
 - 5. Friday
 - 6. Saturday
 - 7. Sunday
- 2 - Time (time clock version only).
- 3 - Central Heating: when the appliance is in central heating mode icon 3 will be flashing.
- 4 - Auto (time clock version only): when the digital clock is in automatic function icon 4 is displayed.
- 5 - Water pressure: Shows the current pressure in the system.
- 6 - Manual: When the digital timer is set to manual icon 6 is displayed, in this mode the central heating is on permanently.
- 7 - ON/OFF: When the appliance is ON icon 7 is displayed.
- 8 - Modulation flame level: When the burner is lit, 3 different levels on icon 8 are displayed.
- 9 - Day function (time clock version only).
- 10 - Temperature.
- 11 - Anomaly - Lock - out - Test function.
- 12 - Domestic hot water: when the appliance is in domestic hot water mode the icon will flash.

1.6 BOILER VALUE

It is possible to show the boiler value.
Press P button to show the boiler value.
Use the arrow up and the arrow down buttons, (item 3 and 4 fig. 1) to show the following info:

PBAR: water pressure
SFAN: speed fan
TFlow: flow temperature
TRet: return temperature
TDHW: domestic hot water temperature
PWR: % power of modulation.

1.7 TIME (time clock version only)

SETTING THE TIME AND DAY (time clock version only):

1. Press and hold the P button for 4 seconds.
2. Press the up and down arrows to select "TIME" and then press the enter button.
3. Press the up and down arrows to select the current hour (24h). Then press the enter button.
4. Press the up and down arrows to select the current minute and then press the enter button.
5. Press the up and down arrows to select the current day (1=Mon, 2= Tue etc.) and then press the enter button.
The time is now set.

1.8 PROGRAMMING THE HEATING TIMES (time clock version only)

The appliance incorporates a digital clock programmed with a default heating pattern (see table 1); however this can be modified to suit individual needs.

To change the programmed times:

1. Press and hold the P button for 4 seconds.
2. Press the up and down arrows to select "P TMR" and then press the enter button.
3. Press the up and down arrows to select the individual day you wish to set, or select the group of days (see table 2) then press the enter button.
4. Press the up and down arrows to select the ON1 time (first on time) and press the enter button.
5. Press the up and down arrows to set the OF1 time (first off) and press enter. Repeat this process for the remaining 3 settings. (Note: if not all 4 times are required then set the remaining on and off times to 24.00, this cancels the remaining on and off. For example see the weekend settings in (table 1.)

TABLE 1

			Manufacturer' s value							
			On 1	Off 1	On 2	Off 2	On 3	Off 3	On 4	Off 4
MON	DAY 1	(Monday)	6:30	8:00	11:00	13:00	17:00	23:00	24:00	24:00
TUE	DAY 2	(Tuesday)	6:30	8:00	11:00	13:00	17:00	23:00	24:00	24:00
WED	DAY 3	(Wednesday)	6:30	8:00	11:00	13:00	17:00	23:00	24:00	24:00
THU	DAY 4	(Thursday)	6:30	8:00	11:00	13:00	17:00	23:00	24:00	24:00
FRI	DAY 5	(Friday)	6:30	8:00	11:00	13:00	17:00	23:00	24:00	24:00
SAT	DAY 6	(Saturday)	7:00	23:00	24:00	24:00	24:00	24:00	24:00	24:00
SUN	DAY 7	(Sunday)	7:00	23:00	24:00	24:00	24:00	24:00	24:00	24:00

TABLE 2

Group MO—SU	Day 1,2,3,4,5,6,7	From Monday to Sunday
Group MO—SA	Day 1,2,3,4,5,6	From Monday to Saturday
Group SA—SU	Day 6,7	From Saturday to Sunday
Group MO—FR	Day 1,2,3,4,5	From Monday to Friday

Once the times are set, press the P button and this will return to the main screen.

NB: If setting the times in a group, the days in the group will all be the same, however days not in this group will remain at the default time. For example, setting Mon-Sat will change all these days but Sunday will remain the same as table one unless changed individually.

The programmed times will only be activated when the boiler is in winter mode (section 1.4 key 1) and also set in auto mode (section 1.4 key 7). If you wish to override these times, press the timer mode button to select "MAN", this puts the boiler in manual mode which overrides the timer on the boiler so the heating is on permanently (providing any external controls fitted are calling for heat). To turn the heating off, press the timer mode button to select off, this will now turn the heating off permanently until either auto or manual is selected.

1.9 DIAGNOSTIC

The display shows eventual error or faulty message.

Stop boiler: The boiler stops the operating cycle and waits for the disappearance of the cause of the error in order to go back to be operating mode.

Block boiler: The boiler requires a manual reset to become operational again.

2.0 GENERAL LAYOUT (Fig. 3)

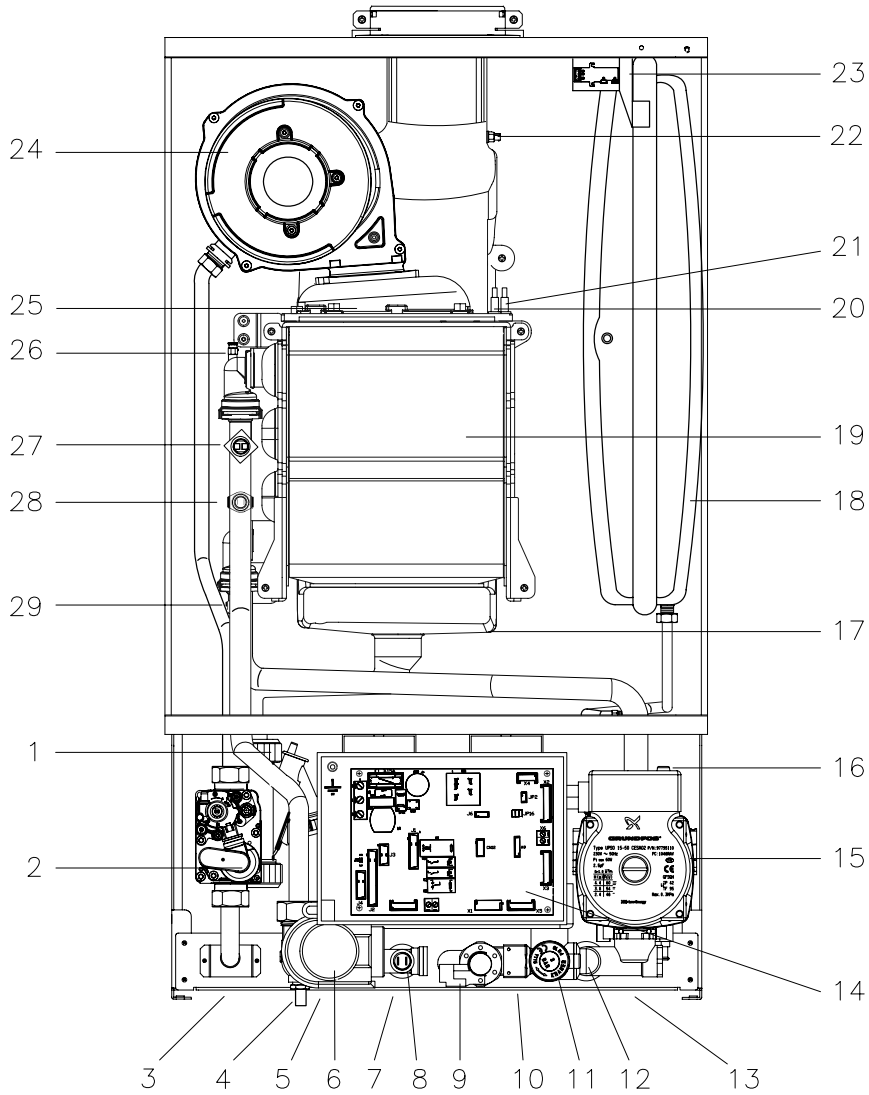


Fig. 3

KEY

- | | | |
|-----------------------------------|------------------------------|----------------------------------|
| 1 - Condensate trap | 12-Water pressure transducer | 23 - Spark igniter |
| 2 - Gas valve | 13- CH return | 24 - Fan |
| 3 - Gas inlet | 14- Control board | 25 - Burner |
| 4 - Drain point | 15- Circulation pump | 26 - Manual air vent |
| 5 - CH flow | 16- Automatic air vent | 27 - Overheat cut off thermostat |
| 6 - Diverter valve motor | 17 - Condensate drain | 28 - CH flow sensor |
| 7 - DHW outlet | 18- Expansion vessel | 29 - CH return sensor |
| 8 - DHW sensor | 19- Main heat exchanger | |
| 9 - DHW flow detector | 20- Spark electrode | |
| 10 - DHW inlet | 21 - Sensing electrode | |
| 11 - Safety pressure relief valve | 22 - Flue temperature sensor | |

2.1 OPERATING SCHEME (Fig. 4)

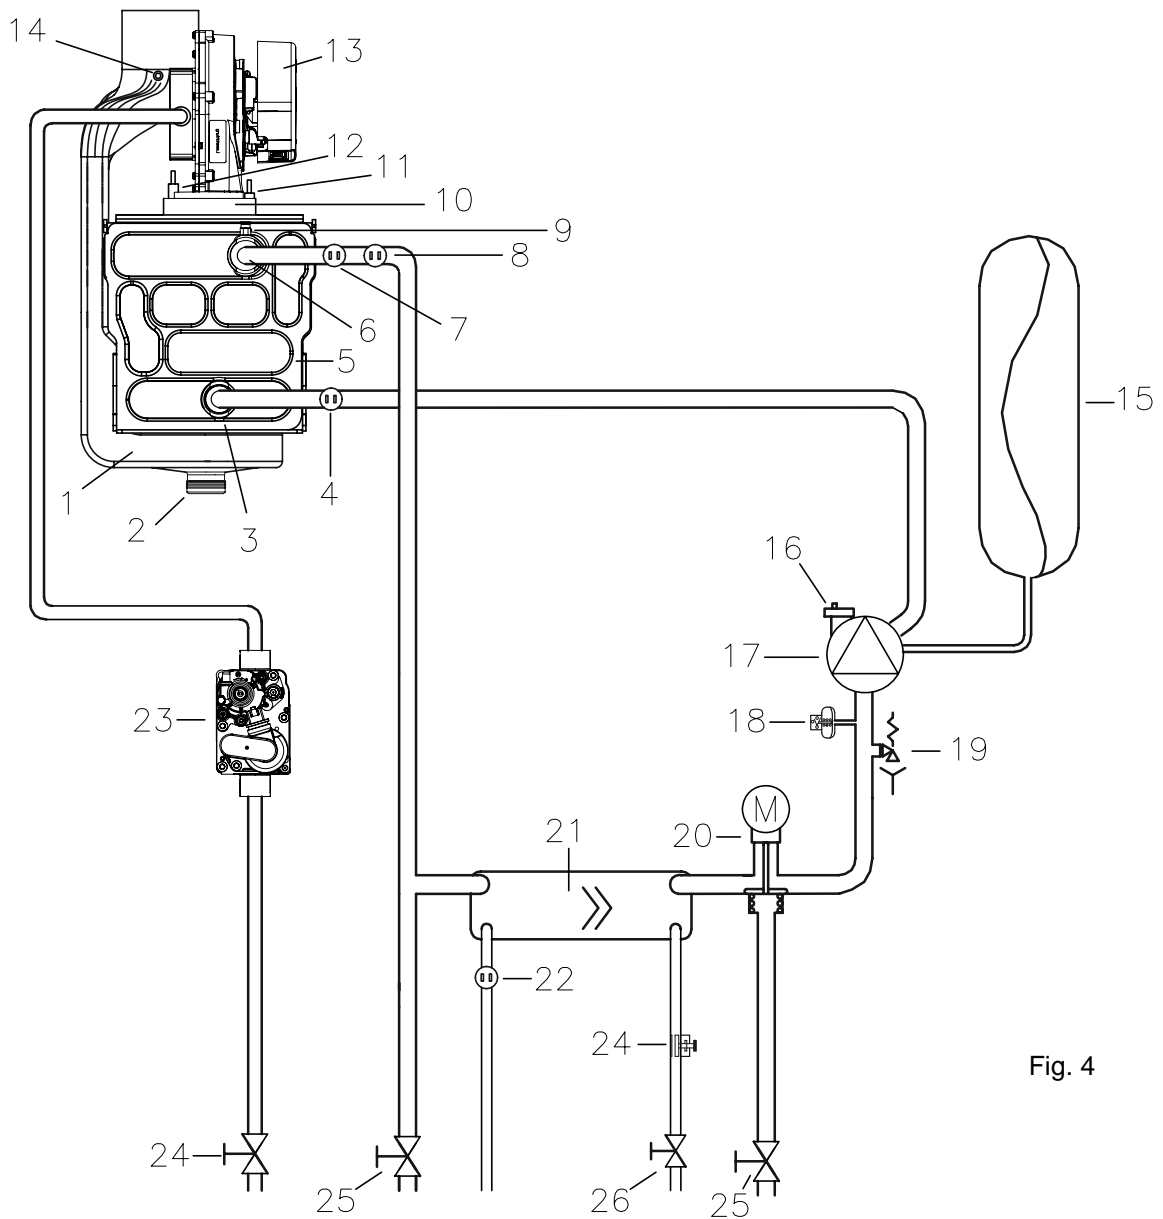


Fig. 4

KEY

- | | | |
|---------------------------------|--------------------------------|-----------------------------------|
| 1 - Flue exhaust manifold | 10 - Burner | 19 - Safety pressure relief valve |
| 2 - Condensate drain | 11 - Spark electrode | 20 - Diverter valve motor |
| 3 - CH return | 12 - Sensor electrode | 21 - Plate heat exchanger |
| 4 - CH return sensor | 13 - Fan | 22 - DHW sensor |
| 5 - Heat exchanger | 14 - Flue temperature sensor | 23 - Gas valve |
| 6 - CH flow | 15 - Expansion vessel | 24 - Gas service cock |
| 7 - Overheat cut off thermostat | 16 - Automatic air vent | 25 - CH compression ball valves |
| 8 - CH flow sensor | 17 - Circulation pump | 26 - DHW compression ball valves |
| 9 - Manual air vent | 18 - Water pressure transducer | |

2.2 INTRODUCTION

This boiler is designed for the production of central heating and domestic hot water combined in one unit.
It is fitted with an automatic domestic hot water priority valve.
It is possible to select either a summer or winter function.
With the summer position only being for domestic hot water.
The winter position being for central heating with domestic hot water priority.

2.3 DESCRIPTION OF CONTROL SYSTEM AND SEQUENCE OF OPERATION

2.4 Domestic hot water mode

When the appliance is in rest mode, select the summer position by pressing the ON/OFF button (item 1 fig. 1) please ensure that the heating circuit is charged with water (above 1 bar).
If the domestic hot water tap is turned on the boiler will function in the following sequence:

The pump starts. The fan starts and sends a signal back to the ignition board that the fan is running.

The spark ignition system is powered which in turn commences the spark igniter to operate and light the burner.
At this point the ignition board opens the gas valve to light the burner.

When the electrode sensor senses the signal that the burner is alight, the spark igniter stops.

The fan speed settings on the boiler increases to the maximum permissible speed over a period of 5 seconds and will remain at its maximum required power until its maximum regulated temperature is achieved and then will modulate to maintain this.

When the domestic hot water tap is closed the diverter valve goes back into rest mode, the burner is shut down along with the fan which is also switched off.

2.5 Central heating mode

If the appliance is in winter mode with a demand for heat to supply radiators, etc. , with the heating circuit fully charged above 1 bar, so as to operate the low water sensor device the boiler will start in the same way as domestic hot water mode.

As the heating sensor reaches temperature the fan speed modulates to maintain the temperature set on the display panel.
When starting, the fan will always start at the set-point speed.

The boiler is fitted with an anti-cycling device on the control board. This delays the boiler from re-firing within 10 minutes.
If the heating temperature goes 20°C below the set point, the burner restarts immediately. The domestic hot water will always take priority and is unaffected by the anti-cycling device.

2.6 GENERAL FUNCTION

The instrument panel permits regulation of the boiler to partial heating requirements, between maximum and minimum settings.

Air and gas are drawn by the fan for combustion.

The fan also forces exhaust gas through the flue to the outside, this creates a lesser pressure in the sealed combustion chamber, thus sucking in combustion air, through the inlet duct.

The boiler water temperature is automatically controlled by a built in thermostat.

Interior space temperature is set by the room thermostat to be installed in the heating system. The boiler already carries connection terminals for this thermostat, as well as for a external timer if required. The burner continues to operate until it is stopped by the digital clock or one of the thermostats.

When the internal C.H. temperature sensor or the room thermostat intervenes the burner shuts down. The fan stops but the pump continues to operate for 3 minutes.

The boiler also incorporates an anti-block system which powers the pump every 24 hours, allowing it to operate for 2 minutes if the boiler has not been in use. This operation may in some cases be heard for a short period when the pump has been activated.

The heat exchanger in the D.H.W. circuit is a stainless steel plate heat exchanger water to water, and domestic water is heated by converting the water in the central heating circuit. The transfer of heat is very high because the two fluids move in a counter direction.
Select the winter position by summer/winter button (item 1 fig. 1).

When a hot water tap is turned on the diverter valve motor moves to exclude the central heating circuit, the boiler automatically modulates to maintain the domestic hot water at a constant temperature. The water temperature can be regulated by the digital display.

When domestic hot water is being drawn off the burner and pump perform as they do during central heating except that the burner is commanded by the D.H.W. thermostat.

When D.H.W. is no longer called for (tap is turned off), the boiler will automatically return to the central heating mode.

Select the summer position by pressing the summer/winter button. The boiler functions like an automatic gas hot water heater.

When D.H.W. is no longer required the burner and pump and fan will immediately turn off.

This also takes place when in winter mode, if there is no demand for heat to the central heating system or until the digital clock and room thermostat (if fitted) demands the central heating circuit.

2.8

SAFETY DEVICE

In both central heating and domestic hot water mode safe operation is ensured by a control board which shuts off the main burner, if the fan stops or the flue or combustion air intake duct is obstructed.

An overheat cut off thermostat acts to turn off the burner to resettable "lockout" (item 8 fig. 1).

A safety valve is fitted on the central heating circuit set at 3 bar.

A low water pressure switch set at 0.4 bar is fitted on heating circuit, to prevent the boiler operating below this boiler system pressure.

2.7 OVERALL DIMENSION

(Fig. 5)


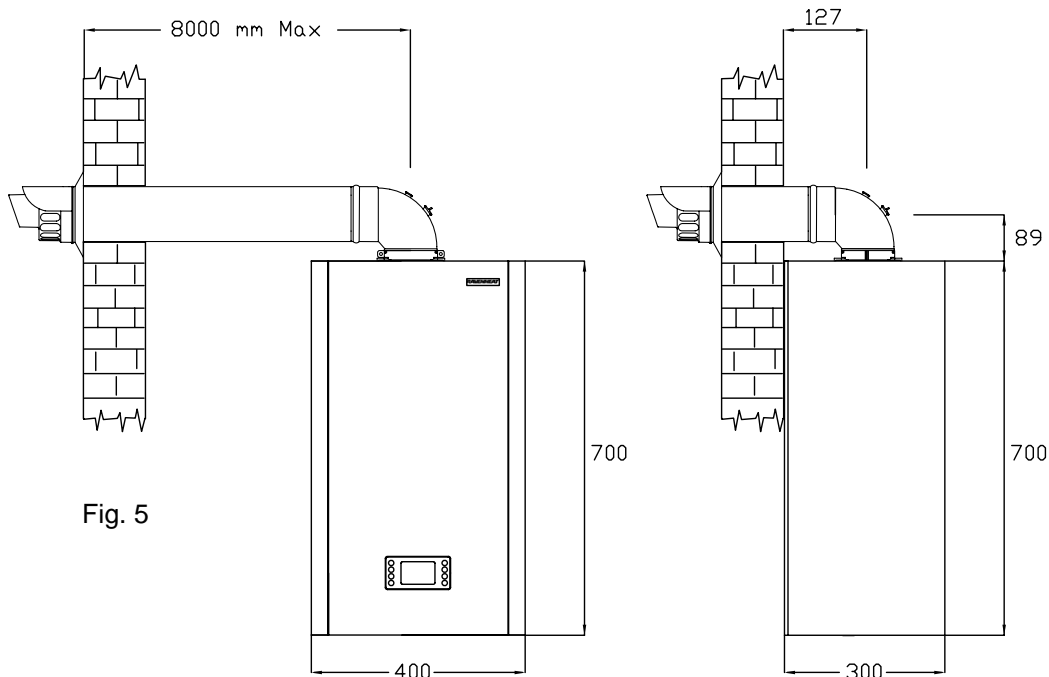


Fig. 5


2.9 AVAILABLE PUMP HEAD

(Fig. 6)

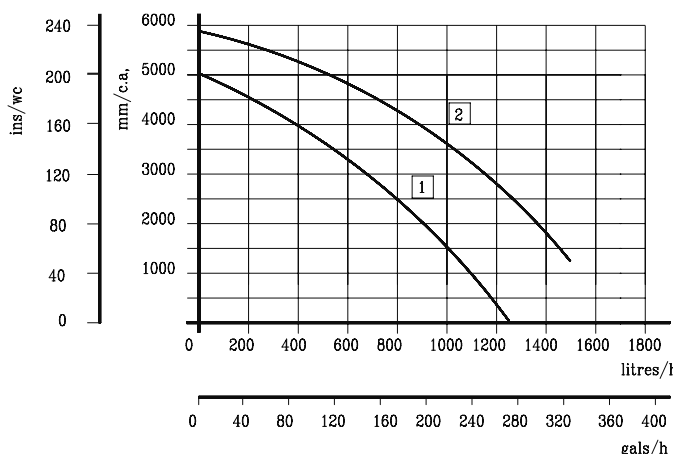

2.10 PRESSURE DROP ACROSS

APPLIANCE (Fig. 7)

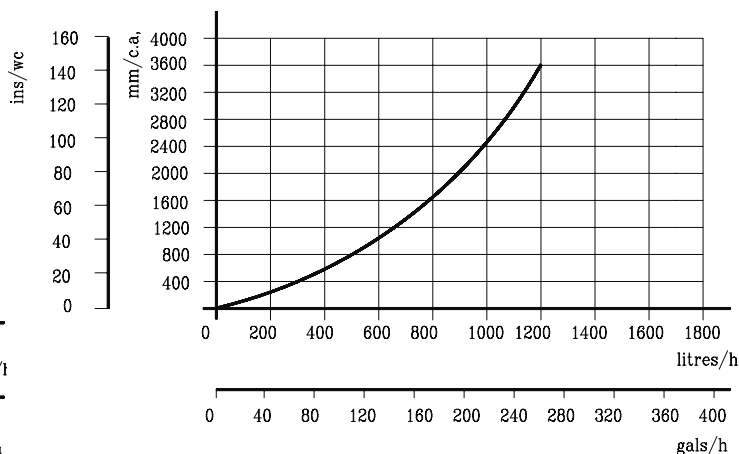

3 TECHNICAL DATA

WH 80 (T)

TABLE 3/A

NATURAL GAS (G 20) II_{2H3P}

NOMINAL HEAT INPUT NET QMS	20.0 kW
MINIMUM HEAT INPUT NET	3.7 kW
NOMINAL HEAT OUTPUT	19.5 kW
NOMINAL HEAT OUTPUT CONDENSING	21.4 kW
MINIMUM HEAT OUTPUT	3.6 kW
MINIMUM HEAT OUTPUT CONDENSING	4.0 kW
GAS RATE	max 2.1 m ³ /h
AFTER 10 MINUTES	min 0.4 m ³ /h
INLET PRESSURE	20 mbar
FAN SPEED Max 4200 rpm - 140 Hz C.H. min 1300 rpm - 43 Hz	Combustion % CO ₂ : 9.0 (+ 0.5 / - 0.5) Case ON 9.0 (+ 0.5 / - 0.5) Case OFF
ELECTRICAL SUPPLY	230 V ~ 50 HZ
POWER CONSUMPTION	110 W
EXTERNAL FUSE RATING	3A
INTERNAL FUSE	F1 - 3.15 A (20 mm to BS 4265)
DRY WEIGHT	28 kg
WATER CONTENT C.H.	0.8 litre
WATER CONTENT	0.2 litre
GAS SUPPLY CONNECTION	15 mm compression isolating valve
FLOW CONNECTION C.H.	22 mm compression isolating valve
RETURN CONNECTION C.H.	22 mm compression isolating valve
INLET CONNECTION D.H.W.	15 mm compression isolating valve
OUTLET CONNECTION D.H.W.	15 mm compression valve
SAFETY DISCHARGE C.H.	15 mm copper pipe
CONDENSATION DRAIN	3/4" (21.5 mm) push fit over flow
MAX COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL	110 LITRE
SEALED WATER SYSTEM C.H.	
MAX PRESSURE PHS	2.5 bar
MINIMUM WORKING PRESSURE	0.5 bar
7 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE	0.5 bar
CENTRAL HEATING OPERATING TEMPERATURE	MAX 80°C min 35°C
DESIGN FLOW RATE 1383 l/h 20 °C RISE	
MINIMUM FLOW RATE C.H. 350 l/h	
D.H.W. FLOW RATE 30 °C rise	11.9 l/min
D.H.W. FLOW RATE 35 °C rise	10.2 l/min
D.H.W. FLOW RATE 40 °C rise	8.9 l/min
D.H.W. TEMPERATURE	Max 60 °C min 35 °C
FAN SPEED D.H.W.	Max 4800 rpm - 160 Hz min 1300 rpm - 43 Hz
Q _{mw} Input Net	Max 25.4 kW min 3.7 kW
D.H.W. PRESSURE PMW	Max 6.5 bar
D.H.W. PRESSURE PMW	min 0.5 bar
D.H.W. MINIMUM FLOW RATE	2.5 l/min
FLUE OUTLET NOM. DIAMETER	100 mm specially supplied with boilers (If required)
DESTINATION: GB, IE, ES, IT, PT & GR	CATEGORY II _{2H3P}
FLUE TYPE - C ₁₃ - C ₃₃ - C ₅₃	NO _x 5 SEDBUK A IP X4 D

3.1 TECHNICAL DATA

WH 80 (T)

TABLE 3/B

LPG (G 31) II_{2H3P}

NOMINAL HEAT INPUT NET QMS	20.0 kW
MINIMUM HEAT INPUT NET	3.7 kW
NOMINAL HEAT OUTPUT	19.5 kW
NOMINAL HEAT OUTPUT CONDENSING	21.4 kW
MINIMUM HEAT OUTPUT	3.6 kW
MINIMUM HEAT OUTPUT CONDENSING	4.0 kW
GAS RATE	max G31 0.8 m ³ /h
AFTER 10 MINUTES	min 0.15 m ³ /h
INLET PRESSURE	G31 37 mbar
FAN SPEED C.H.	Max 4200 rpm - 140 Hz Combustion % CO ₂ : 10.5 (+ 0.5 / - 0.5) Case ON
	min 1300 rpm - 43 Hz 10.5 (+ 0.5 / - 0.5) Case OFF
ELECTRICAL SUPPLY	230 V ~ 50 HZ
POWER CONSUMPTION	110 W
EXTERNAL FUSE RATING	3A
INTERNAL FUSE	F1 - 3.15 A (20 mm to BS 4265)
DRY WEIGHT	28 kg
WATER CONTENT C.H.	0.8 litre
WATER CONTENT	0.2 litre
GAS SUPPLY CONNECTION	15 mm compression isolating valve
FLOW CONNECTION C.H.	22 mm compression isolating valve
RETURN CONNECTION C.H.	22 mm compression isolating valve
INLET CONNECTION D.H.W.	15 mm compression isolating valve
OUTLET CONNECTION D.H.W.	15 mm compression valve
SAFETY DISCHARGE C.H.	15 mm copper pipe
CONDENSATION DRAIN	3/4" (21.5 mm) push fit over flow
MAX COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL 110 LITRE	
SEALED WATER SYSTEM C.H.	
MAX PRESSURE PHS	2.5 bar
MINIMUM WORKING PRESSURE	0.5 bar
7 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE	0.5 bar
CENTRAL HEATING OPERATING TEMPERATURE	MAX 80°C min 35°C
DESIGN FLOW RATE 1383 l/h 20 °C RISE	
MINIMUM FLOW RATE C.H. 350 l/h	
D.H.W. FLOW RATE 30 °C rise	11.9 l/min
D.H.W. FLOW RATE 35 °C rise	10.2 l/min
D.H.W. FLOW RATE 40 °C rise	8.9 l/min 10°C inlet temperature
D.H.W. TEMPERATURE	Max 60 °C min 35 °C
FAN SPEED D.H.W.	Max 4800 rpm - 160 Hz min 1300 rpm - 43 Hz
Q _{mw} Input Net	Max 25.4 kW min 3.7 kW
D.H.W. PRESSURE PMW	Max 6.5 bar (147 p.s.i.)
D.H.W. PRESSURE PMW	min 0.5 bar (118 p.s.i.)
D.H.W. MINIMUM FLOW RATE	2.5 l/min
FLUE OUTLET NOM. DIAMETER 100 mm specially supplied with boilers (If required)	
DESTINATION: GB, IE, ES, IT, PT & GR CATEGORY II _{2H3P}	
FLUE TYPE - C ₁₃ - C ₃₃ - C ₅₃	NO _x 5 SEDBUK A IP X4 D

3.2 TECHNICAL DATA

TABLE 3/C

WH 90 (T) NATURAL GAS (G 20) II_{2H3P}

NOMINAL HEAT INPUT NET QMS	24.5 kW
MINIMUM HEAT INPUT NET	4.1 kW
NOMINAL HEAT OUTPUT	23.8 kW
NOMINAL HEAT OUTPUT CONDENSING	26.2 kW
MINIMUM HEAT OUTPUT	4.0 kW
MINIMUM HEAT OUTPUT CONDENSING	4.4 kW
GAS RATE	max 2.6 m ³ /h
AFTER 10 MINUTES	min 0.4 m ³ /h
INLET PRESSURE	20 mbar
FAN SPEED Max 4200 rpm - 140 Hz C.H. min 1300 rpm - 43 Hz	Combustion % CO ₂ : 9.0 (+ 0.5 / - 0.5) Case ON 9.0 (+ 0.5 / - 0.5) Case OFF
ELECTRICAL SUPPLY	230 V ~ 50 HZ
POWER CONSUMPTION	119 W
EXTERNAL FUSE RATING	3A
INTERNAL FUSE	F1 - 3.15 A (20 mm to BS 4265)
DRY WEIGHT	29 kg
WATER CONTENT C.H.	0.8 litre
WATER CONTENT	0.2 litre
GAS SUPPLY CONNECTION	15 mm compression isolating valve
FLOW CONNECTION C.H.	22 mm compression isolating valve
RETURN CONNECTION C.H.	22 mm compression isolating valve
INLET CONNECTION D.H.W.	15 mm compression isolating valve
OUTLET CONNECTION D.H.W.	15 mm compression valve
SAFETY DISCHARGE C.H.	15 mm copper pipe
CONDENSATION DRAIN	3/4" (21.5 mm) push fit over flow
MAX COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL 110 LITRE	
SEALED WATER SYSTEM C.H.	
MAX PRESSURE PHS	2.5 bar
MINIMUM WORKING PRESSURE	0.5 bar
7 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE	0.5 bar
CENTRAL HEATING OPERATING TEMPERATURE	MAX 80°C min 35°C
DESIGN FLOW RATE 1811 l/h 20 °C RISE	
MINIMUM FLOW RATE C.H. 350 l/h	
D.H.W. FLOW RATE 30 °C rise	14.0 l/min
D.H.W. FLOW RATE 35 °C rise	12.0 l/min
D.H.W. FLOW RATE 40 °C rise	10.5 l/min
	10°C inlet temperature
D.H.W. TEMPERATURE	Max 60 °C min 35 °C
FAN SPEED D.H.W.	Max 4800 rpm - 160 Hz min 1300 rpm - 43 Hz
Q _{mw} Input Net	Max 30.1 kW min 4.1 kW
D.H.W. PRESSURE PMW	Max 6.5 bar
D.H.W. PRESSURE PMW	min 0.5 bar
D.H.W. MINIMUM FLOW RATE	2.5 l/min
FLUE OUTLET NOM. DIAMETER 100 mm specially supplied with boilers (If required)	
DESTINATION: GB, IE, ES, IT, PT & GR CATEGORY II _{2H3P}	
FLUE TYPE - C ₁₃ - C ₃₃ - C ₅₃	NO _x 5 SEDBUK A IP X4 D

3.3 TECHNICAL DATA

TABLE 3/D

WH 90 (T) LPG (G 31) II₂H3P

NOMINAL HEAT INPUT NET QMS	24.5 kW
MINIMUM HEAT INPUT NET	4.1 kW
NOMINAL HEAT OUTPUT	23.8 kW
NOMINAL HEAT OUTPUT CONDENSING	26.2 kW
MINIMUM HEAT OUTPUT	4.0 kW
MINIMUM HEAT OUTPUT CONDENSING	4.4 kW
GAS RATE	max G31 1.0 m ³ /h
AFTER 10 MINUTES	min 0.16 m ³ /h
INLET PRESSURE	G31 37 mbar G30 28-30 mbar
FAN SPEED C.H. Max 4200 rpm - 140 Hz	Combustion % CO ₂ : 10.5 (+ 0.5 / - 0.5) Case ON
min 1300 rpm - 43 Hz	10.5 (+ 0.5 / - 0.5) Case OFF
ELECTRICAL SUPPLY	230 V ~ 50 HZ
POWER CONSUMPTION	119 W
EXTERNAL FUSE RATING	3A
INTERNAL FUSE	F1 - 3.15 A (20 mm to BS 4265)
DRY WEIGHT	29 kg
WATER CONTENT C.H.	0.8 litre
WATER CONTENT	0.2 litre
GAS SUPPLY CONNECTION	15 mm compression isolating valve
FLOW CONNECTION C.H.	22 mm compression isolating valve
RETURN CONNECTION C.H.	22 mm compression isolating valve
INLET CONNECTION D.H.W.	15 mm compression isolating valve
OUTLET CONNECTION D.H.W.	15 mm compression valve
SAFETY DISCHARGE C.H.	15 mm copper pipe
CONDENSATION DRAIN	3/4" (21.5 mm) push fit over flow
MAX COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL 110 LITRE	
SEALED WATER SYSTEM C.H.	
MAX PRESSURE PHS	2.5 bar
MINIMUM WORKING PRESSURE	0.5 bar
7 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE	0.5 bar
CENTRAL HEATING OPERATING TEMPERATURE	MAX 80°C min 35°C
DESIGN FLOW RATE 1811 l/h 20 °C RISE	
MINIMUM FLOW RATE C.H. 350 l/h	
D.H.W. FLOW RATE 30 °C rise	14.0 l/min
D.H.W. FLOW RATE 35 °C rise	12.0 l/min
D.H.W. FLOW RATE 40 °C rise	10.5 l/min
	10°C inlet temperature
D.H.W. TEMPERATURE	Max 60 °C min 35 °C
FAN SPEED D.H.W.	Max 4800 rpm - 160 Hz min 1300 rpm - 43 Hz
Q _{mw} Input Net	Max 30.1 kW min 4.1 kW
D.H.W. PRESSURE PMW	Max 6.5 bar
D.H.W. PRESSURE PMW	min 0.5 bar
D.H.W. MINIMUM FLOW RATE	2.5 l/min
FLUE OUTLET NOM. DIAMETER 100 mm specially supplied with boilers (If required)	
DESTINATION: GB, IE, ES, IT, PT & GR CATEGORY II ₂ H3P	
FLUE TYPE - C ₁₃ - C ₃₃ - C ₅₃	NO _x 5 SEDBUK A IP X4 D

4 GENERAL REQUIREMENTS

4.1 SAFETY

Gas Safety (Installation and Use). Regulations.

It is law that all gas appliances are installed and serviced by a Gas Safe registered installer in accordance with the above regulations and these installation instructions. All registered installers carry a Gas Safe I.D. card and have a registration number. Both should be recorded in your Benchmark commissioning checklist. You can check your installer on the Gas Safe register (www.gassaferegister.co.uk). Failure to install appliances correctly could lead to prosecution. It is in your own interest, and that of your safety, to ensure the law is complied with. Check the boiler and flue is the correct type for installation undertaken.

The installation of the boiler MUST be in accordance with the latest I.E.E. (BS 7671) Wiring Regulations, local building regulations, bye-laws of the local water authority, the building regulations and the Building Standards (Scotland) and any relevant requirements of the local authority.

4.2 GENERAL INFORMATION

Both the user and the manufacturer rely heavily on the installer, whose job it is to install the combination boiler and connect it to a correctly designed heating system. Acquaint yourself with the relevant British Standards concerning installation requirements. If you need further advice on any points contact the Technical Services Office on 0113 2527007 who would be pleased to help. It is recommended that tools suitable for brass fittings are used, and have a capability to accommodate hexagon sizes up to 50 mm.

APPLICIBLE CODES OF PRACTICE

Ref: Documents.

Detailed recommendations are contained in the following British Standard Codes of Practice:

BS6891:2005: Low pressure installation pipes.

BS6798: Installation of gas fired hot water boilers of rated input not exceeding 70 kW.

BSEN12828: Design for water based heating systems.

BSEN12831: Heating systems in buildings, Method for calculation of the design heat load.

BSEN14336: Installation & commissioning of water based heating systems.

BS5546: Installation of gas hot water supplies domestic purposes (2nd Family Gases).

BS5440: Flues (for gas appliances of rated input not exceeding 70 kW).

BS5440: 2 Ventilation (for gas appliances of rated input not exceeding 70 kW).

BSEN 677: 1998 Gas fired central heating boilers.

I.S. 813: Domestic gas Installations.

The followings standards give valuable additional information:

BS 7074: Expansion vessels and ancillary equipment for sealed water system.

BS 7593: Treatment of water in domestic hot water and central heating system.

Health & Safety Document No.635 The Electricity at Work Regulations, 1989.

IMPORTANT:

These appliances are CE certificated for safety and performance. It is therefore important that no external control devices e.g. flue dampers, economisers etc., are directly connected to this appliance unless covered by these Installation and Service Instructions or as otherwise recommended by The White Boiler Company in writing. If in doubt please enquire.

Any direct connection of a control device not approved by The White Boiler Company could invalidate the certification and the normal appliance warranty.

It could also infringe the Gas Safety regulations and the above regulations.

NOTE:

The White Boiler Company WH 80/90 (T) combi boiler has been tested and examined by CERTIGAZ, and is certified to comply with PrEN 483 and BS EN 625.

Manufacturers instructions must NOT be taken in any way as overriding statutory obligations. If in doubt on any point please consult The White Boiler Company.

4.3 LOCATION OF BOILER

Siting of The White Boiler Company WH 80/90 (T) combi boiler must be as follows.
The position of installation should be within the building, unless otherwise protected by a suitable enclosure.

Adequate space for installation, servicing and air circulation around the boiler must be allowed for.

The White Boiler Company WH 80/90 (T) combi boiler must be fitted on a flat and vertical wall capable of adequately supporting the weight of the boiler and any ancillary equipment.

The appliance may be fitted on a combustible wall and insulation between the wall and the boiler is not necessary, unless required by the local authority.

For electrical safety reasons there must be no access available from the back of the boiler.

The boiler must not be fitted outside.

LPG versions of this appliance shall not be installed in cellars or basements.

4.4 CLEARANCES AROUND THE APPLIANCE

Side clearance:

The position of the appliance must provide a minimum clearance of 5mm as the side panels do not require removing for servicing. However, if the option is preferred to remove the panels then a minimum clearance of 55mm is required.

Top clearance:

The top clearance should be a minimum of 125 mm.

Bottom clearance:

A bottom clearance of 80 mm is required between the appliance and any surface. Though 150 mm is preferred whenever possible.

Front clearance:

A minimum of 450 mm is required in front of the appliance for access during servicing, the front clearance can be reduced when installed in a cupboard, to 25 mm from the access door.

4.5 IMPORTANT NOTICE

For installation into timber framed buildings, please refer to the Institute of Gas Engineers Document IGE/UP/7.

The boiler may be installed in any room or internal space, although particular attention is drawn to the requirements of the current I.E.E. Wiring Regulations, and in Scotland the electrical provisions of the Building Regulations applicable in Scotland, with respect to the installation of the combination boiler in a room or internal space containing a bath or shower.

Where a room sealed appliance is installed in a room containing a bath or shower, any electrical switch or appliance control, utilising mains electricity should be situated so that it cannot be touched by a person using a bath or shower.

A compartment when used to enclose the combination boiler MUST be designed and constructed specifically for this purpose. An existing cupboard, or compartment, may be used provided it is modified accordingly. Samples of the WH 80/90 (T) combi boiler have been examined by CERTIGAZ notification body, and are certified to comply with the essential requirements of the gas appliance.

Directive 90/396/EEC, the Low Voltage. Directive 72/23/EEC and shows compliance with the Electro Magnetic Compatibility. Directive 89/336/EEC and are therefore permitted to carry the CE Mark.

The appliance has been tested and approved by the WRc as meeting the requirements of G3 and L of the Building regulations and water Bylaws Scheme - Approved Products.

4.6 GAS SUPPLY


A gas meter is connected to the service pipe by the Local Gas Region or the Local Gas Region contractor. An existing meter should be checked preferably by the Gas Region to ensure that the meter is adequate to deal with the rate of gas supply required for all appliances it serves. Installation pipes should be fitted in accordance with BS 6891:2005. Pipework from the meter to the boiler must be of adequate size (22 mm) min to within at least one metre of the boiler, (15 mm) min. can then be used for remaining pipe work to the appliance. A smaller size than the boiler inlet gas connection should not be used. The complete installation must be tested for soundness as described in the above code.

N.B. It is the responsibility of the Gas Installer to size the gas installation pipework in accordance with BS 6891:2005. Whilst the principle of the 1:1 gas valve ensures the White Heat range is able to deliver the full output at an inlet pressures as low as 14 mbar, other gas appliances in the property may not be as tolerant.

When operating pressures are found to be below the minimum meter outlet of 19 mbar these should be checked to ensure this is adequate for correct and safe operation.

Allowing for the acceptable pressure loss of 1 mbar across the installation pipework, it can be assumed that a minimum permitted operating pressure of 18 mbar will be delivered to the inlet of the appliance. (reference BS 6400-1 Clause 6.2 Pressure Absorption).

The external gas cock could further reduce the operating pressure when measured at its test point. The pressure drop is relative to the heat input to the boiler (kW), refer to graph below.

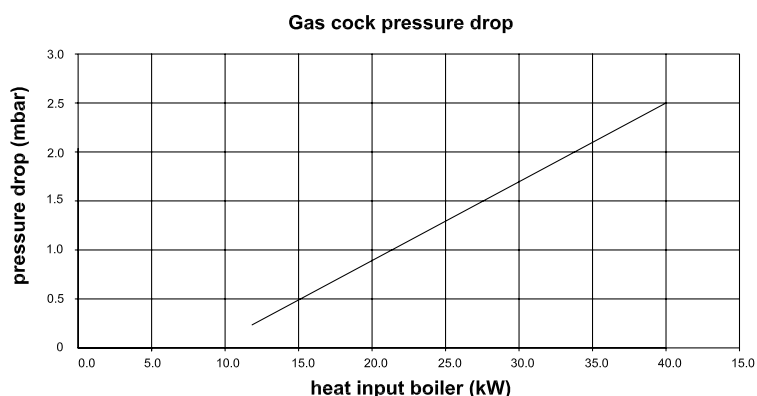

4.7 FLUE SYSTEM

The terminal should be located where dispersal of combustion products is not impeded and with due regard for the damage or discolouration that might occur to building products in the vicinity (section 4.10).

The terminal must not be located in a place where it is likely to cause a nuisance in cold and/or humid weather as water vapour may condense on leaving the flue terminal. The effect of such plumbing must be considered.

The terminal must not be closer than 25 mm (1 inch) to any combustible material for protection of combustibles, refer to BS 5440.1. Where a flue terminal is installed less than 1000 mm. from a plastic, or painted gutter; or 500 mm from painted eaves, an aluminium shield 1000 mm. long, should be fitted to the underside of the gutter or painted surface.

Plumbing will occur at the terminal so, where possible, terminal positions which could cause a nuisance should be avoided.

The flue must be installed in accordance with the recommendations of BS 5440: Part 1.

IMPORTANT NOTES:

For greater flue lengths see alternative flue instructions. Flue must be positioned in a place not likely to cause a nuisance from plumbing.

IMPORTANT NOTICE: If the flue terminates below a balcony, above the ground, above a flat roof to which people have access, then a suitable **terminal guard** must be fitted if less than 2 meters high **PRO110100**.

Fit only recommended **FLUE TERMINAL GUARD** by securing concentrically around terminal with screws.

Available on request from:

The White Boiler Company
Chartists Way, Morley, Leeds,
West Yorkshire
ENGLAND LS27 9ET - UK
Tel. 0113 252 7007

IMPORTANT:

The following notes are intended for general guidance.

The boiler **MUST** be installed so that the terminal is exposed to external air.

It is important that the position of the terminal allows the free passage of air across it at all times.

Minimum acceptable spacing from the terminal to obstructions and ventilation openings are specified in section 4.10.

Note positions: *Due to the terminal design, installation is possible with clearances less than those specified in BS 5440, Part 1*

NOTE:

The flue must be terminated in a place not likely to cause a nuisance.

A concentric vertical flue kit is available for longer flueing applications (see table 5 page 26).

For further details see vertical flue installation instructions.

4.8 AIR SUPPLY

The following notes are intended for general guidance.


The room sealed fan flued boiler does not require a permanent air vent for combustion air supply.

Where installed in a cupboard or compartment ventilation is not required.

4.9 WATER CIRCULATION (Central heating)

Detailed recommendations are given in BS6798 2009/5449:1990 - BSEN12828 - BSEN12831 - BSEN14336 (for smallbore and microbore central heating systems). The following notes are given for general guidance.

4.10 FLUE TERMINAL POSITION

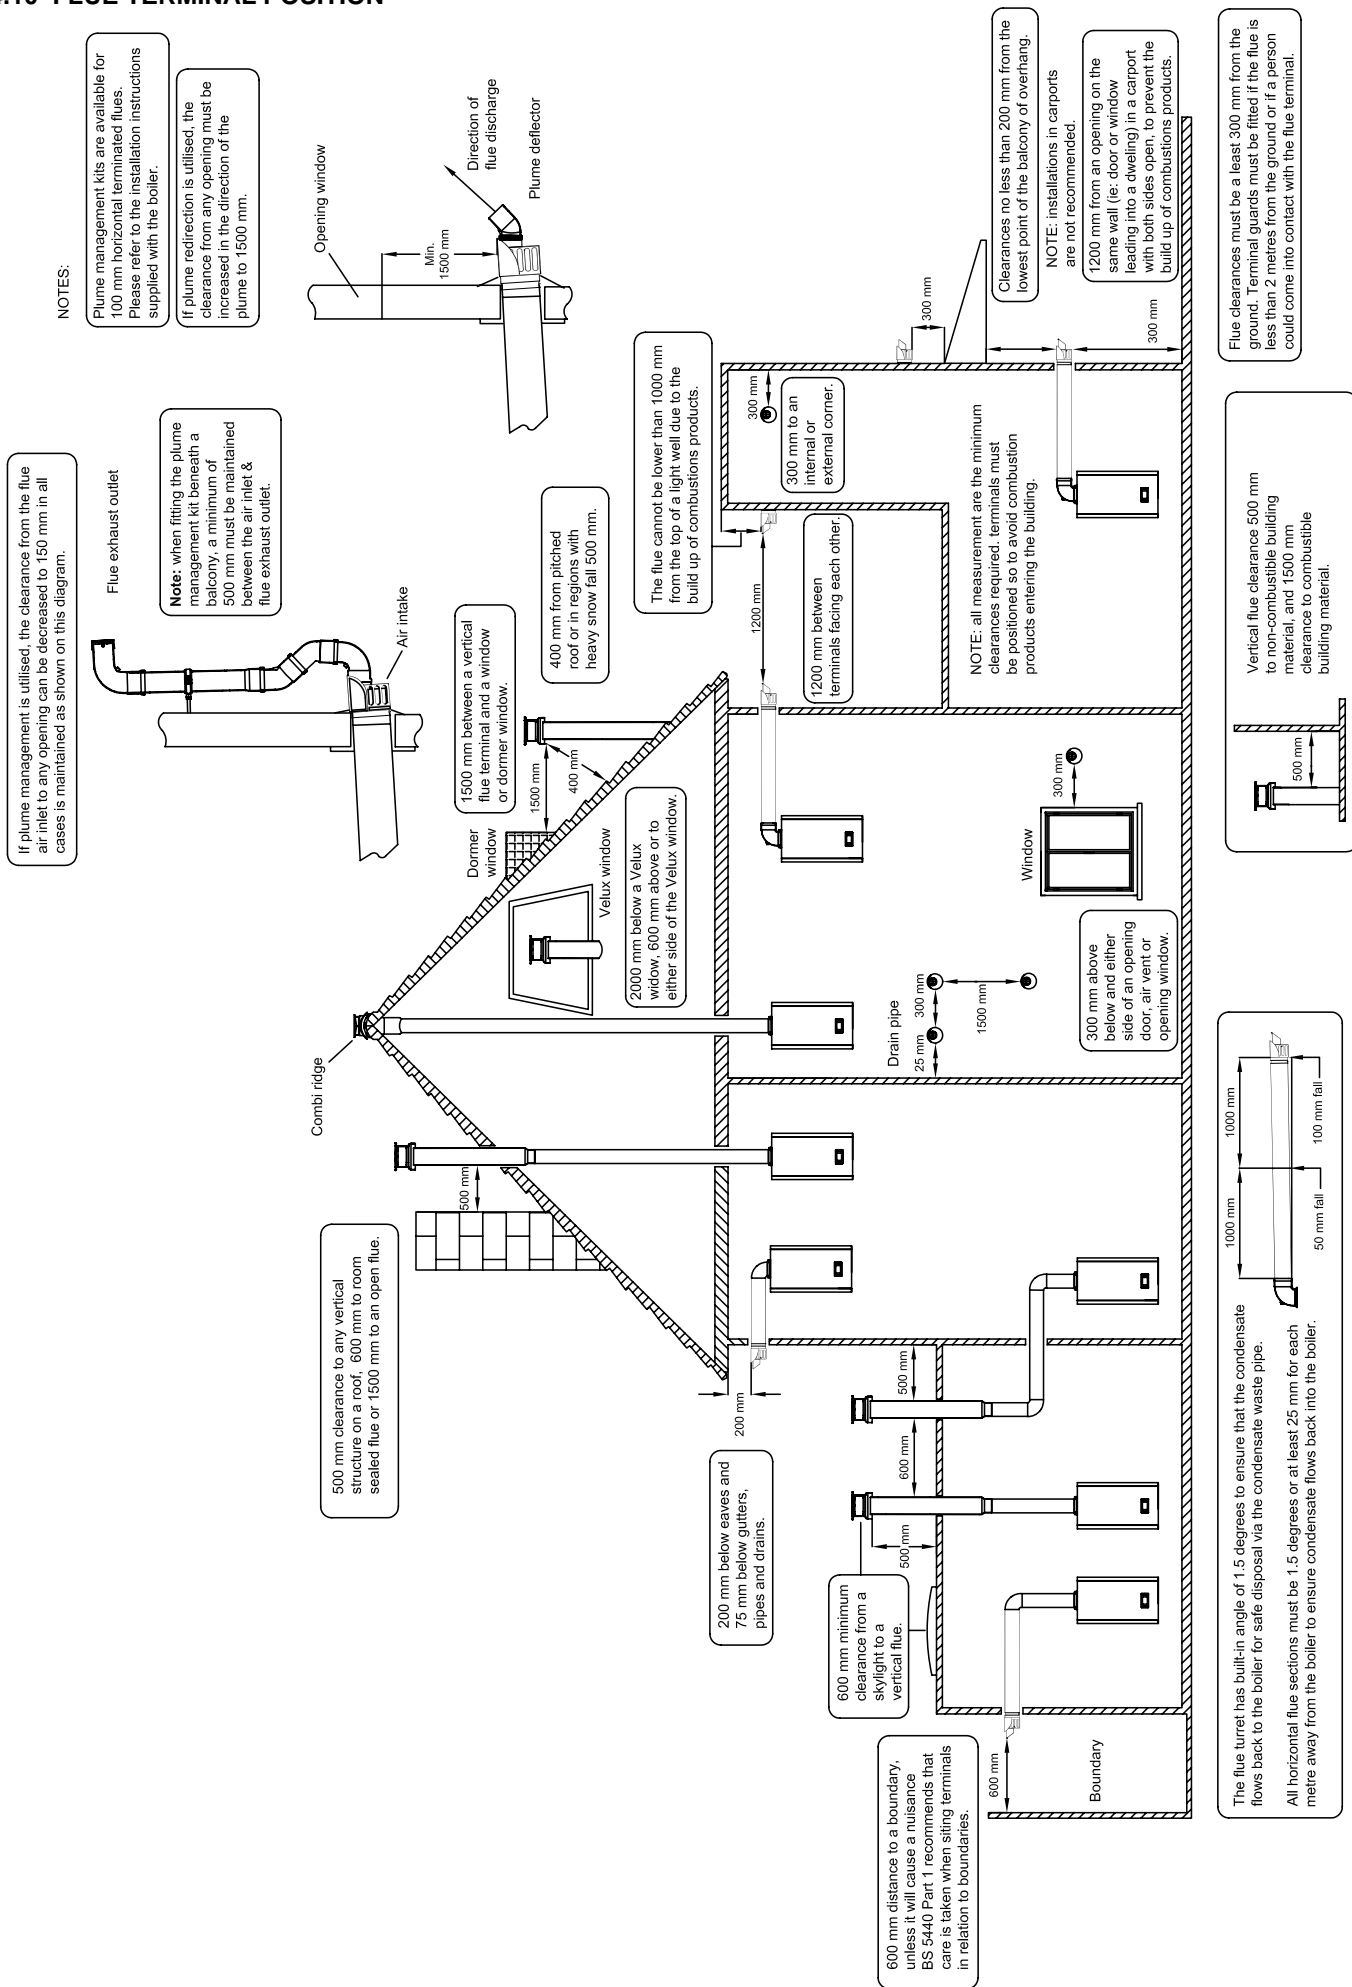

4.11 PIPEWORK

Copper tubing to BSEN 1057:1 2006, BSEN 1172, BSEN 1652 and BSEN 1653, is recommended for water pipes. Jointing should be either with capillary soldered or with compression fittings.

Where possible pipes should have a gradient to ensure air is carried naturally to air release points and water flows naturally to drain taps. It should be ensured as far as possible that the appliance's heat exchanger is not a natural collecting point for air except where providing useful heat. Pipes should be insulated to prevent heat loss and to avoid freezing. Particular attention should be paid to pipes passing through ventilated spaces in roofs and under floors.

IMPORTANT:

A minimum length of 1 metre of copper pipe **MUST** be fitted to both flow and return connections from the boiler before connection to any plastic piping.

The water through the appliance heat exchanger circuit must exceed the min. 2.38 gals/min. (650 lt/h) when the burner is firing. It is important to ensure that this rate is achieved when sections of the system are shut off either manually or by automatic controls.

If the volume of circulating water is too low, the boiler water temperature will rise too rapidly. This could cause noise in the system or even cause the safety thermostat to trip.

This appliance is designed to work on a two pipe system as shown in fig.6.

4.12 BOILER INTERLOCK CONTROL

Central heating systems controls should be installed to ensure the boiler is switched off when there is no demand for heating, in compliance with Building Regulations. The boiler has its own built in bypass.

If the system has thermostatic radiator valves on all radiators, or two port valves, then a bypass circuit must be fitted with an automatic bypass valve to ensure a flow of water should all valves be in the closed position (fig. 6).

It is important that the system is flushed thoroughly before the appliance is fitted or left to operate (as recommended in BS 7593) in order to maintain an efficiently operating heating system. For replacement installations, the system **MUST** be flushed with the old boiler in situ, in order to prevent system debris. Once the system has been flushed, an inhibitor (suitable for stainless steel and aluminium heat exchanger) should be added (see section 4.18).

4.13 DRAINING TAP

These must be located in accessible positions to permit the draining of the whole system. The taps must be at least 15 mm nominal size and manufactured in accordance with BS 2870 1980.

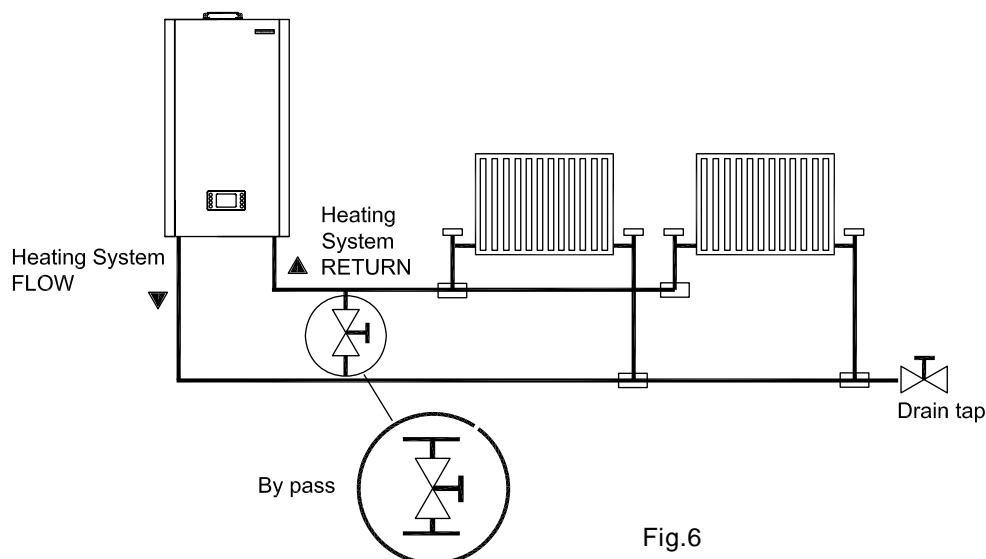


Fig.6

4.14 AIR RELEASE POINTS

These must be fitted at all high points where air will naturally collect, and must be sited to facilitate complete filling of the system.

The appliance has an integral sealed expansion vessel to accommodate the increase of water volume when the system is heated.

It can accept up to 7 lts of expansion water
If the appliance is connected to a system with an unusually high water content, calculate the total expansion (see table 4) and add additional sealed expansion capacity as appropriate (Fig. 7). In general, modern systems below 7 lts should not present any problem.

4.15 MAINS WATER FEED. CENTRAL HEATING

There must be no direct connection to the mains water supply, even through a non-return valve, without the approval of the Local Water Authority.

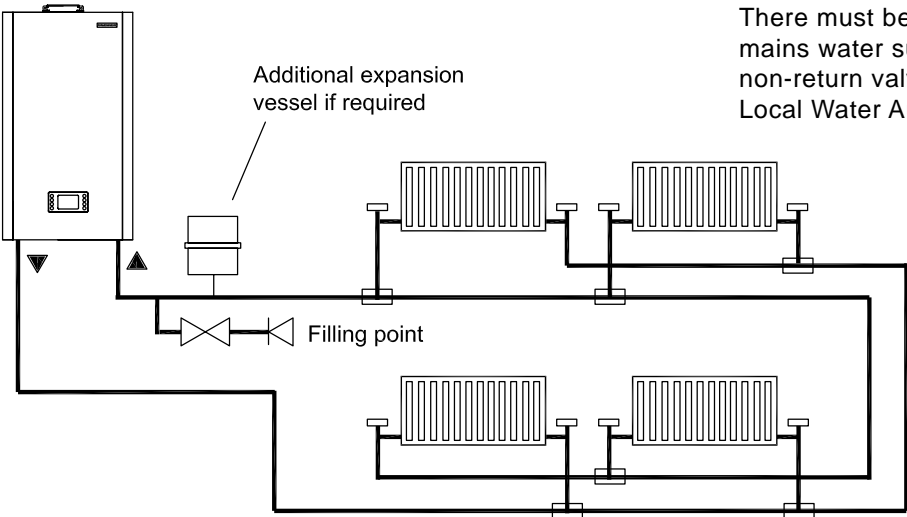


Fig.7

4.16 PERMISSIBLE METHODS OF FILLING

Figure depicts the requirements of Diagram R24.2a of the Water Supply (Water Fittings) regulations 1999.

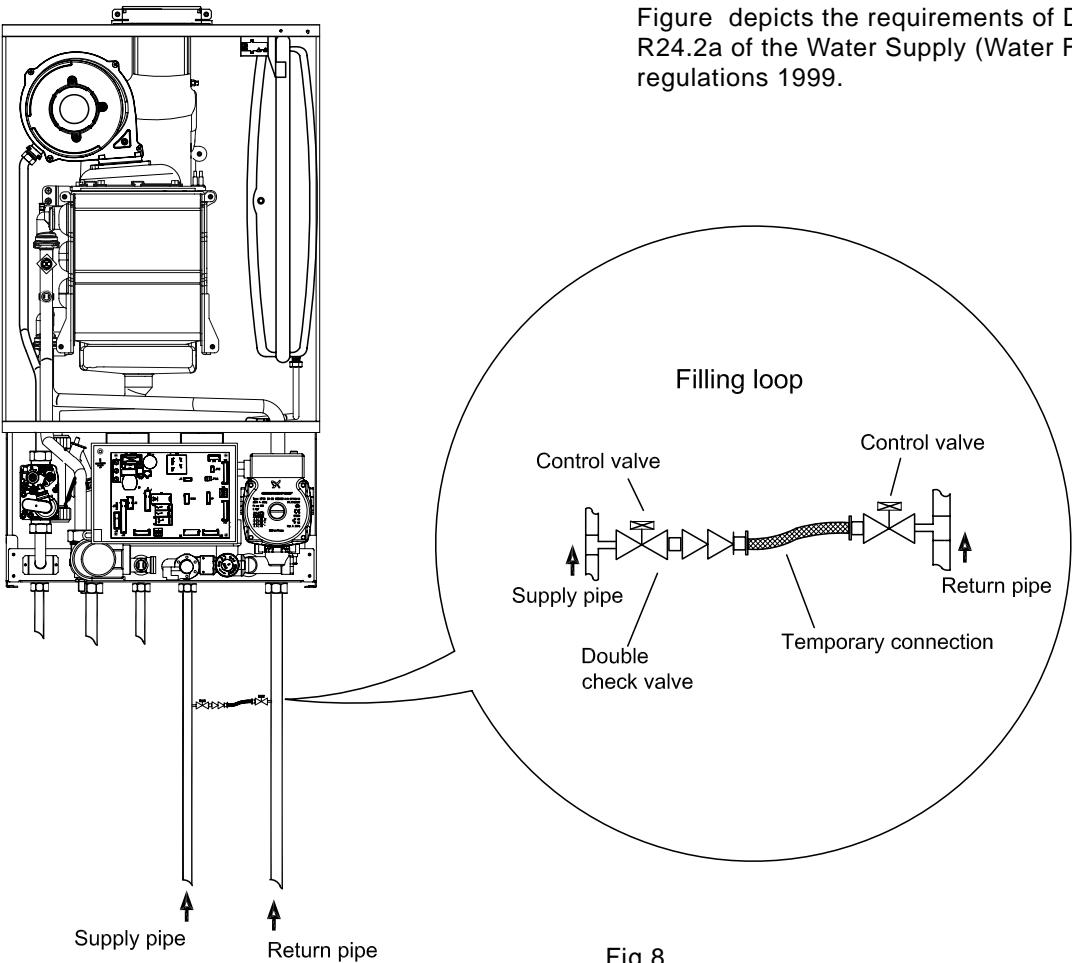


Fig.8

4.17 SIZING OF ADDITIONAL EXPANSION VESSEL TABLE 4

Deduct from the value given in the table the 7 litre vessel supplied.

Safety valve setting (bar)	3.0								
Vessel charge pressure (bar)	0.5				1.0			1.5	
Initial system pressure (bar)	0.5	1.0	1.5	2.0	1.0	1.5	2.0	1.5	2.0
Total water content of system	EXPANSION VESSEL VOLUME (LITRES)								
Litres									
25	2.1	3.5	6.5	13.7	2.7	4.7	10.3	3.9	8.3
50	4.2	7.0	12.9	27.5	5.4	9.5	20.6	7.8	16.5
75	6.3	10.5	19.4	41.3	8.2	14.2	30.9	11.7	24.8
100	8.3	14.0	25.9	55.1	10.9	19.0	41.2	15.6	33.1
125	10.4	17.5	32.4	68.9	13.6	23.7	51.5	19.5	41.3
150	12.5	21.0	38.8	82.6	16.3	28.5	61.8	23.4	49.6
175	14.6	24.5	45.3	96.4	19.1	33.2	72.1	27.3	57.9
200	16.7	28.0	51.8	110.2	21.8	38.0	82.4	31.2	66.2
225	18.7	31.5	58.3	124.0	24.5	42.7	92.7	35.1	74.5
250	20.8	35.0	64.7	137.7	27.2	47.5	103.0	39.0	82.7
275	22.9	38.5	71.2	151.5	30.0	52.2	113.3	42.9	91.0
300	25.0	42.0	77.7	165.3	32.7	57.0	123.6	46.8	99.3
325	27.0	45.5	84.1	179.1	35.7	61.7	133.9	50.7	107.6
350	29.1	49.0	90.6	192.8	38.1	66.5	144.2	54.6	115.8
375	31.2	52.5	97.1	206.6	40.9	71.2	154.5	58.5	124.1
400	33.3	56.0	103.6	220.4	43.6	76.0	164.8	62.4	132.4
425	35.4	59.5	110.1	239.2	46.3	80.7	175.1	66.3	140.7
450	37.5	63.0	116.5	247.9	49.0	85.5	185.4	70.2	148.9
475	39.6	66.5	123.0	261.7	51.8	90.2	195.7	74.1	157.2
500	41.6	70.0	125.9	275.5	54.5	95.0	206.0	78.0	165.5
For system volumes other than those given above, multiply the system volume by the factor across	0.0833	0.140	0.259	0.551	0.109	0.190	0.412	0.156	0.331

Note: This pressure can be increased up to 1.5 bar to suit high static head situations.

If the capacity of the central heating system should exceed 110 Litres, an additional vessel should be installed on the return to the combination boiler from the heating system (fig. 7). Guidance on vessel sizing is given (see table 4).

Reference should be made to British Gas Publications. Draining taps should be at least 1/2" in BSP nominal size and be in accordance with BS 2879.

4.18 INSTALLATION TO AN EXISTING CENTRAL HEATING SYSTEM

The combination boiler is designed to operate on a sealed system only. Therefore if the existing system is of the open water type it will have to be modified to comply with BS 5376 Part 2.

Before installing a new combination boiler to an existing system, flush out the old system with a recommended descaling agent.

If the boiler is installed in an existing system any unsuitable additives *MUST* be removed by thorough cleaning, and flushing out the old system with recommended descaling agent.

BS 7593:2006 details the steps necessary to clean domestic central heating system. Also check pipework and renew any corroded pipework or fittings. Valve glands must be repacked or replaced wherever necessary and any defective controls exchanged.

Debris from the system can damage the boiler and reduce the efficiency. Failure to comply with the guidelines for the use of water treatment with the appliance will invalidate the appliance guarantee and contravene the Building Regulations.

It is recommended that you fit a primary water cleanser to the system. We recommend fitting a filter that will help remove both magnetite and non-magnetic debris.

4.19 WATER TREATMENT

This boiler has an aluminium and stainless steel heat exchanger, The White Boiler Company recommend the use of FERNOX or SENTINEL, or other treatment products recognised by The White Boiler Company which must be used in accordance with the manufacturer's instructions.

4.20 HARD WATER AREAS

If the area of installation is recognised as a hard water area, it is recommended that a suitable water treatment device is installed on the mains supply. The water hardness can be determined by using the standard test paper or by referring to local water authority.

4.21 DOMESTIC WATER

The domestic hot water must be in accordance with the relevant recommendations of BS 5546. Copper tubing to BS 2871-1 is recommended for water carrying pipework and **MUST** be used for pipework carrying potable water.


4.22 ELECTRICAL SUPPLY

Warning: this appliance must be earthed

External wiring to the appliance must be carried out by a competent person and be in accordance with the current I.E.E. Regulations and local regulations which apply. The White Boiler Company boiler is supplied with a connection to a 230 V ~ 50 Hz single phase supply. **The supply must be fused at 3 A.**

NOTE: The method of connection to the electricity supply **MUST** facilitate complete electrical isolation of the appliance, by the use of a fused, double pole isolator, having a contact separation of at least 3 mm in all poles. The point of connection to the electricity supply must be readily accessible and adjacent to the appliance except, where the appliance is installed in a bathroom.

The current electrical IEE Wiring regulations must be followed in GB.

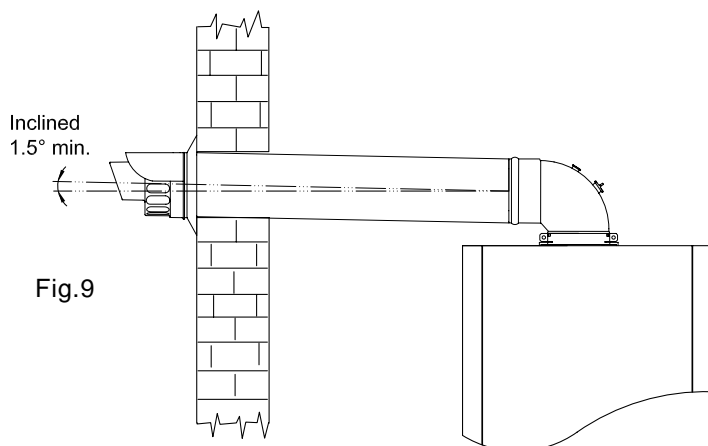

5 INSTALLATION

5.1 WARNING

It is **MOST IMPORTANT** that this appliance is installed in a **HORIZONTAL POSITION**, with the flue air duct passing through the wall.

Make sure the flue is at a 1.5° incline, rising from the boiler with 50 mm.

Flue terminal diagram states 1.5° - 25 mm, fall back on flue (fig. 9).

5.2 DELIVERY

The appliance carton contains:

- a) Boiler fully assembled with flue adaptor
- b) Installation instructions, user instructions and Benchmark log book
- c) White paper template
- d) Guarantee card
- e) Polythene bag containing:
 - 1-15 mm gas service valve
 - 2-22 mm compression ball valves complete with 3/4" washers
 - 1-15 mm compression ball valves complete with 1/2" washers
 - 1- 15 mm compression ball valve
 - 2 fixing bolts and wall plugs

IMPORTANT NOTES:

This appliance will produce a plume of condensation in cool weather. This is due to the High Efficiency and hence low flue gas temperature of the boiler. A plume management kit is available. (see section 5.6 fig 12)

5.3 UNPACKING OF BOILER

IMPORTANT:

With regard to the Manual Handling Operations, 1992 Regulations, the following lift operation exceeds the recommended weight for a one man lift.

- Stand the boiler carton upright.
- Open the top of the carton.
- Rest the carton on the floor (keeping the flaps open).
- Turn the carton over with the boiler inside and then pull the carton up away from the boiler.
- Rest the boiler on its back on the floor to prepare it for installation.

5.4 POSITIONING OF THE BOILER

Unscrew the two lower screws that secure the front panel and pull forward and lift up (fig. 39).

Unscrew the 4 screws that fasten the lower grating on the casing and remove it from the bottom of the casing.

Make sure the casing and screws are put to one side in a safe place.

5.5 OPTIONAL EXTRAS

HORIZONTAL FLUE KIT BOX CONTAINING (Fig 10):

- 57 - Elbow header
- 59 - Rubber seal Ø 60
- 56 - Rubber seal Ø 100
- 60 - Fumes sample point
- 61 - Flue exhaust duct
- 62 - Air intake duct
- 69 - Air sample point
- 127 - Terminal Rubber wall seal

IMPORTANT: Please, lubricate the internal part of the seals before fitting.

Generally speaking, oils and greases are not suitable for the “peroxide -EPDM”, therefore we suggest a correct lubrication using silicon-substances, for instance “Silikon Spray” (Arexons).

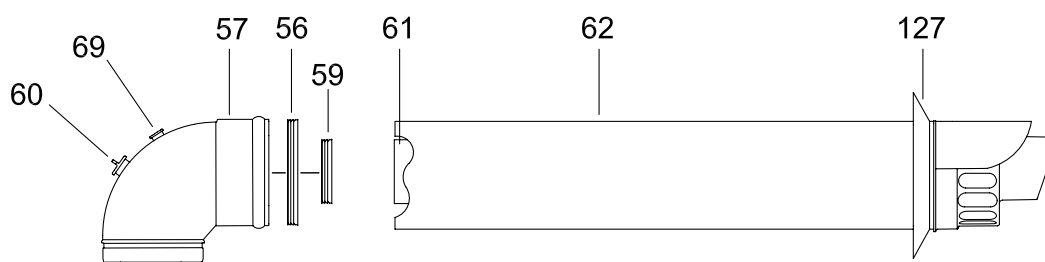


Fig 10

FLUE EXTENSION BOX CONTAINING (Fig. 11):

1000 mm flue extension duct as an extra cost only when requested for side and vertical flue applications.

WARNING: With horizontal concentric flue, the maximum flue length is 8 metres, duct extension can be used with the standard flue (see table 5).

- 59 - Rubber seal Ø 60
- 63 - Air intake duct extension
- 64 - Flue exhaust duct extension

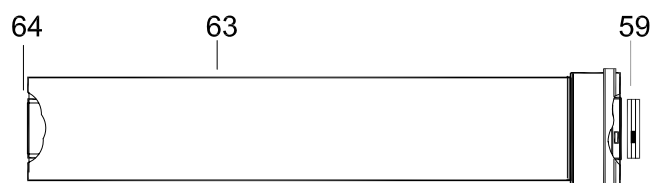


Fig 11

TYPE OF FLUE SYSTEM (All types) - minimum and maximum distance					TABLE 5
Flue type	C ₁₃		C ₃₃		C ₅₃ ¹
Flue Diameter	60/100 (concentric)	80/125 (concentric)	60/100 (concentric)	80/125 (concentric)	80mm single pipe
Minimum length (m)	0.3 (horizontal length)	0.3 (horizontal length)	1.0 (vertical length)	1.0 (vertical length)	0.5
Maximum length (m)	8.0	23.0	13.0	26.0	43.0
Equivalent length of 45° bend (m)	0.5	1.25	0.5	1.25	1.25
Equivalent length of 90° bend (m)	1.0	2.5	1.0	2.5	2.5

5.6 PLUME MANAGEMENT KIT (Fig 12)

Max 6000 mm flue extension duct as an extra cost only when requested to reduce plumbing nuisance of condensation from 60/100 horizontal concentric flue.

Plume Management Kit		TABLE 6
Maximum Length (mm)		6000
minimum length (mm)		500
Equivalent length of 45° bend (mm)		500
Equivalent length of 90° bend (mm)		1000
The Maximum permitted flue length is measured from the centre line of the flue terminal to the top of the outlet terminal		
IMPORTANT : Max flue length must not exceed 6 m with a horizontal concentric 60/100 flue of 3 m (L)		
Plume Management Kit Part No.		
Part. No.	Description	
TER110101 (Fig. 12)	1 metre high plume kit containing: n. 1 terminal bend n. 1 90° elbow bend n. 2 45° bend n. 1 metre 60 M-F flue length n. 1 flue length bracket	
CUR110050 (Fig. 12a)	45° flue exhaust deflection bend	
CUR110100 (Fig. 12a)	90° flue exhaust deflection bend	

IMPORTANT: Please, lubricate the internal part of the seals before fitting.

FLUE EXHAUST DEFLECTION BEND (Fig 12a)

Flue exhaust deflection bend are also available. These come in both 45° and 90° degree versions. These bends fit directly onto the flue exhaust terminal to deflect the flue gas plume in an upward or sideways direction.

Although they are not substitute for a plume kit, they can be considered useful where condensate plumbing is causing a nuisance or can be used to eliminate condensate collecting on the end of the horizontal flue terminal.

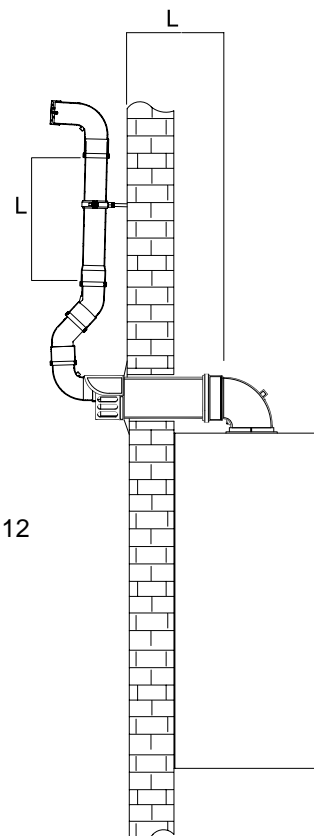


Fig. 12

L+L max 6000 mm
minimum plume kit length 500 mm

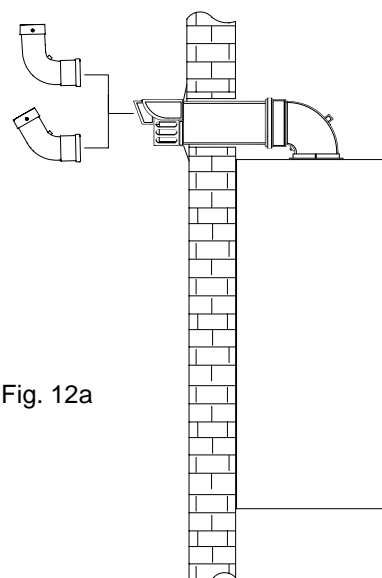


Fig. 12a

5.7 INSTALLING THE APPLIANCE FOR REAR FLUE OUTLET (Fig. 13, 16, 17, 18). FOR APPLIANCE CLEARANCES SEE SECT. 4.4 AND SECT. 4.10

Use adhesive tape to attach the template to the wall, making sure that the centre line is vertical and that the clearance distance is no less than that shown in fig. 13.

- Mark the two holes for the top fixing bolts to fix the boiler on the wall as well as the centre of the flue duct.
- Detach the template from the wall.
- Use a 10 mm. dia drill to make the 2 holes. Insert the plastic expansion plugs.
- Cut or core drill a 105 mm dia hole for inserting the flue duct.

Fit the elbow header into the flue flange on the top of the boiler, positioning it towards the required direction (fig 13).

Important: Make sure that the dia 60 mm on the elbow header is inserted fully into the flue manifold, and the flue manifold rubber seal is correctly fitted. (Fig 17 item 65)

If using the horizontal flue duct and it is too long it can be shortened. Should it be necessary to cut the flue always cut on right angles and ensure the cut is de-burred.

Note: Add 30 mm to overall flue length to allow for terminal wall cover. (fig.10 item 127).

Insert the flue assembly into the wall.

Lift the boiler on the wall, locating onto the top two fixing bolts. Tighten the two bolts using a spanner to secure to the wall.

Working above the boiler pull the flue exhaust duct towards the boiler in order to engage tube (fig. 18 item 61) into its header.

Position flue into elbow header and push so as to locate inner and outer flue correctly ensuring a good seal is made with O-rings. Tighten the two screws on the flue flange to secure the elbow header in place.

Fit the terminal rubber wall seal and if necessary terminal guard.

Extension kits are available to order for flue extension of up to a total overall length of 8 metres (fig.18).

Each extension length extends the pipe by approximately 1000 mm long up to a maximum of seven extensions.

Extensions must be installed with the widened end of the air intake pipe and the tapered end of the flue pipe aimed towards the exhaust terminal.

IMPORTANT:

Inline flue bend - 1000 mm must be deducted from overall length for each 90° bend. Obtuse flue bend - 500 mm must be deducted from overall length for each 135° bend (see table 5).

5.8 INSTALLING THE APPLIANCE FOR SIDE FLUE OUTLET (Fig. 14, 15, 16, 17, 18)

- Attach the template to the wall with adhesive tape, making sure that the centre line is vertical and that the distance from the centre line to the nearest side wall is not less than measurement in fig.14.
- Mark the two fixing bolt securing holes on the wall and extend the axis of the flue duct hole to the side wall ensuring it is horizontal.
- **Make sure flue slopes 1.5° down towards the boiler and that there is a 25 mm fall per metre of the flue length.**
- Trace the centre of the flue duct hole and measure distance from the corner of the wall (fig.14), measure the distance (127 mm) between the centre of flue duct hole to the corner.
- Detach the template from wall.
- Use a 10 mm. dia drill to make the 2 holes for the fixing bolts. Insert the plastic expansion plugs. Core drill a 105 mm dia. hole in the side wall for inserting the flue duct.

Fit the elbow header into the flue flange on the top of the boiler, positioning it towards the required direction.


Important: Make sure that the dia 60 mm on the elbow header is inserted fully into the flue manifold, and the flue manifold rubber seal is correctly fitted. (Fig 17 item 65).

If using the horizontal flue duct and it is too long it can be shortened.

Should it be necessary to cut the flue always cut on right angles and ensure the cut is de-burred.

Note: Add 30 mm to overall flue length to allow for terminal rubber wall seal (fig.10 item 127).

REAR FLUE OUTLET

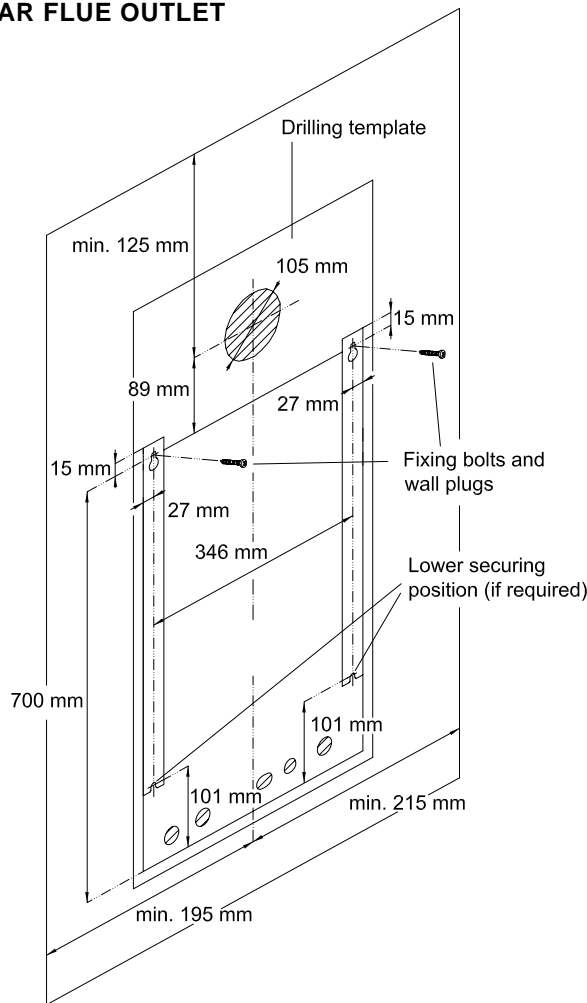

NOTE: The position of the appliance must provide minimum side clearances of 5mm as the side panels do not require removing for servicing. However, if the option is preferred to remove the panels then a minimum clearance of 55mm is required.

Fig 13

Insert the flue assembly into the wall, making sure it will not interfere when fixing the boiler on the wall.

Lift the boiler on the wall, locating onto the two fixing bolts. Tighten the two bolts using a spanner to secure to the wall.

Working above the boiler pull the flue duct towards the elbow in order to engage the tube into its header (fig.10). Position the flue elbow in line with the flue and push so as to locate inner and outer flue correctly. Ensuring a good seal is made with O-rings. Tighten the two screws on the flue flange to secure the elbow header in place.

IMPORTANT:

Terminal rubber wall seal must be fitted (item 127 fig.10).


Each extension length extends the pipe by approximately 1000 mm long up to a maximum of seven extensions. Pipeline length can be established using the instructions in section 5.5. Extensions must be installed with the widened end of the air intake pipe and the tapered end of the flue pipe aimed towards the exhaust terminal.

Extensions must be joined together with the standard terminal pipe, and inserted in each other as far as they can go.

If an extension must be shortened, this must be done from the straight end, and not from the widened or tapered end. To measure the pipeline properly all components must be assembled and total length measured before cutting. The straight end of the extension connects to the boiler. The flue output and air intake pipes fits into the boiler header until it stops (fig.17 - 18).

When cutting both inner and outer ducts of the extension, always ensure that the reduced end (male) of the inner and outer duct are square and to the same length.

SIDE FLUE OUTLET

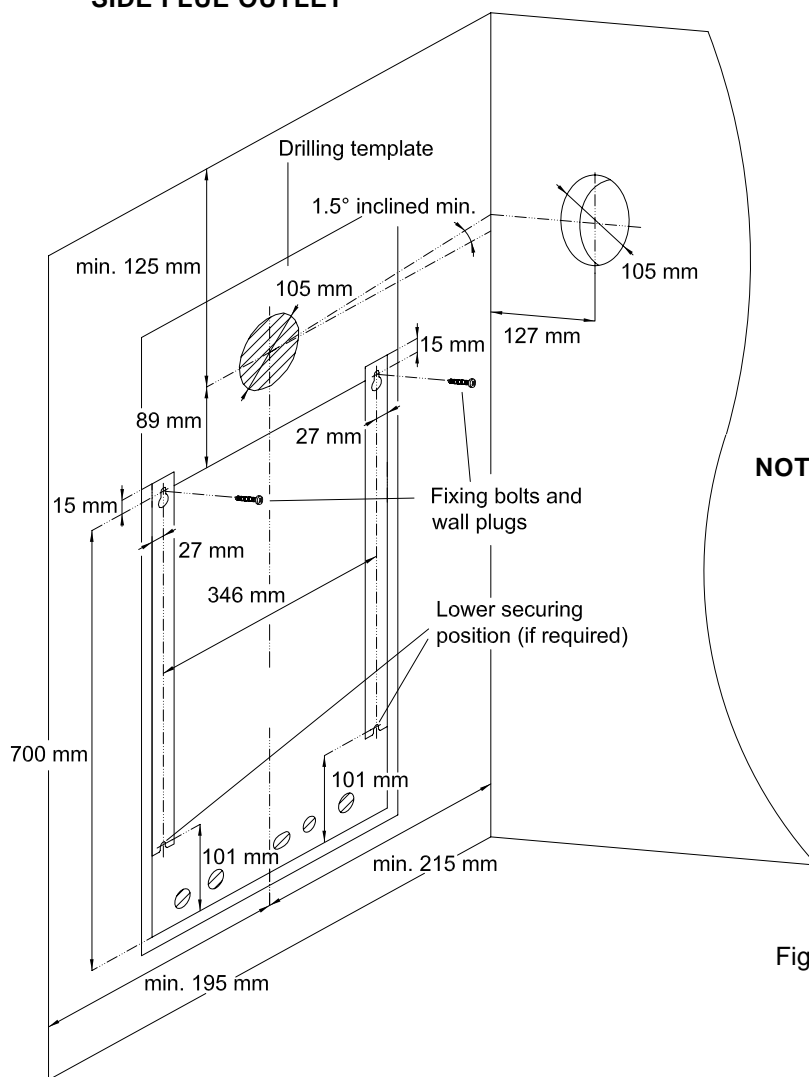

NOTE: The position of the appliance must provide minimum side clearances of 5mm as the side panels do not require removing for servicing. However, if the option is preferred to remove the panels then a minimum clearance of 55mm is required.

Fig. 14

All joints must be sealed with the rubber seals supplied.

It is important to put the centering spacer, supplied with the unit, inside between the two pipes, from the side opposite the extension's straight end.

NOTE: A suitable support bracket (flue bracket) is available from The White Boiler Company and should be used to support the flue length at least every one metre preferably at each joint this bracket should be secured to wall and flue duct.

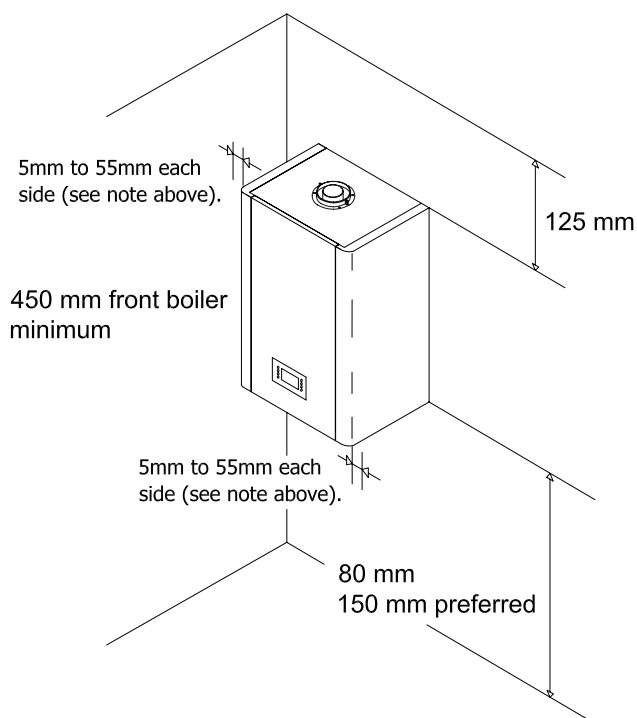


Fig. 15

5.9 COMPLETING HORIZONTAL FLUE INSTALLATION.

Ensure the flue system has been checked for soundness, is stable and secure. Where the horizontal flue terminal passes through the external wall, it is essential that the flue must be sealed on both in exterior and interior part of the wall.

The terminal rubber must also be fitted (fig. 16-17 item 127).

Must be sealed

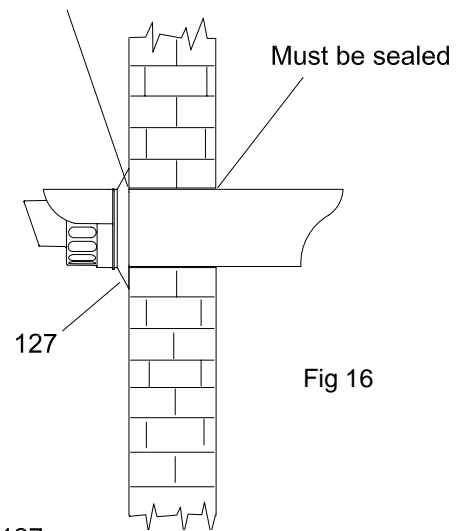


Fig 16

5.10 INTAKE AND EXHAUST TERMINAL COMPONENTS

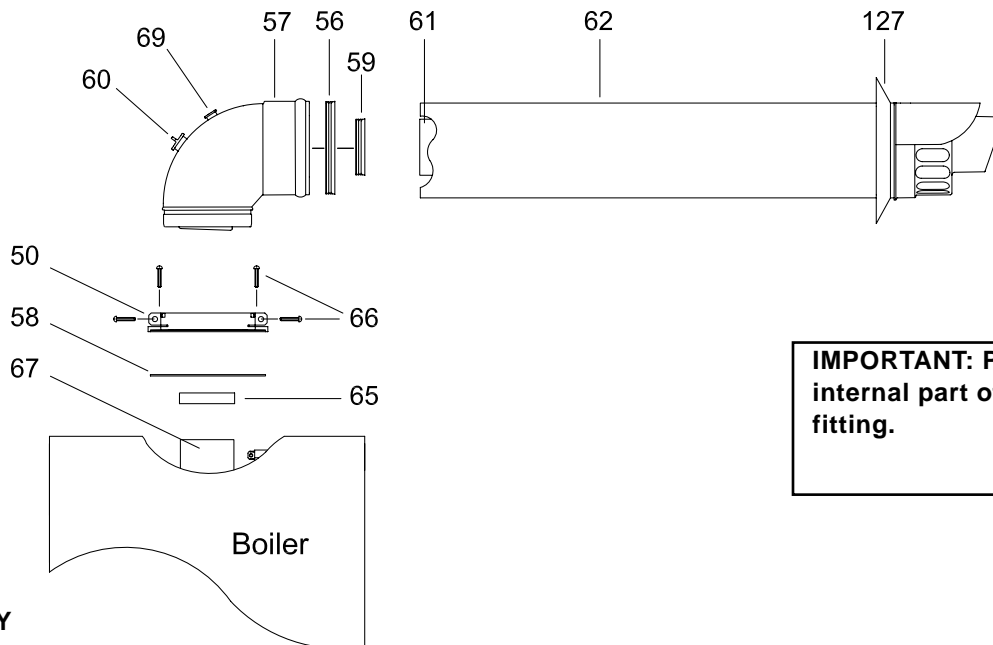


Fig.17

IMPORTANT: Please, lubricate the internal part of the seals before fitting.

KEY

50 - Flue flange	60 - Fumes sample point	65 - Flue manifold rubber seal
56 - Rubber seal Ø 100	61 - STD flue exhaust duct	66 - Securing screw
57 - Elbow header	62 - Terminal	67 - Flue temperature sensor
58 - Header gasket	63 - Flue extension	69 - Air sample point
59 - Rubber seal Ø 60	64 - Flue exhaust duct extension	127 - Terminal Rubber wall seal

5.11 IN-LINE FLUE BEND AND FLUE EXTENSION

IN-LINE FLUE BEND

Measure the distance between the flue bends or the flue/terminal assembly. The measurements should be taken from the outer edge of the flue and bend (fig. 18).

- 49 - In-line Flue Bend
- 56 - Rubber seal Ø 100
- 59 - Rubber seal Ø 60
- 63 - Air intake duct extension
- 64 - Flue exhaust duct extension

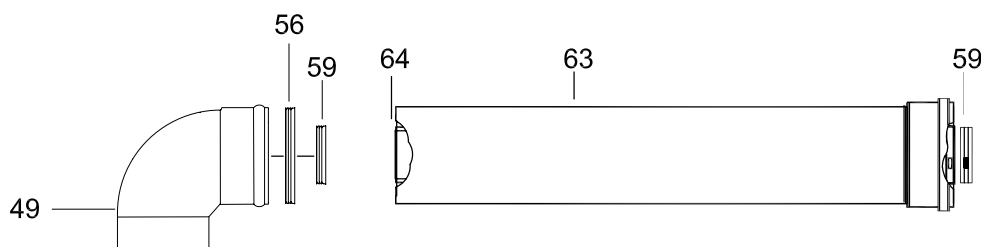


Fig.18

5.12 VERTICAL FLUE INSTRUCTION ONLY (Fig. 19-20-21) SEE SECT. 4.10 FOR PERMISSIBLE FLUE POSITION

IN-LINE FLUE BEND - 1000 mm MUST BE DEDUCTED FROM OVERALL LENGTH FOR EACH 90° BEND
OBTUSE FLUE BEND -500 mm MUST BE DEDUCTED FROM OVERALL LENGTH FOR EACH 135° BEND.

The vertical flue kit is intended for use where a horizontal flue outlet is not possible or desired. The vertical flue can be used either with a flat roof or a pitched roof (maximum pitch 60°). Where a straight vertical flue is not possible or desired, an offset vertical flue can be used in conjunction with a side horizontal flue extension piece and in-line 135°/90° flue bend (fig. 19).

IMPORTANT NOTES : For greater flue length see twin flue or concentric 80/125 flue instructions

Proceed with installation as detailed in section 5 ignoring all references to horizontal flue installations. Use adhesive tape to attach the template to the wall, making sure that the centre line is vertical and that the flue centre line is virtually below the point at which the flue will exit the roof.

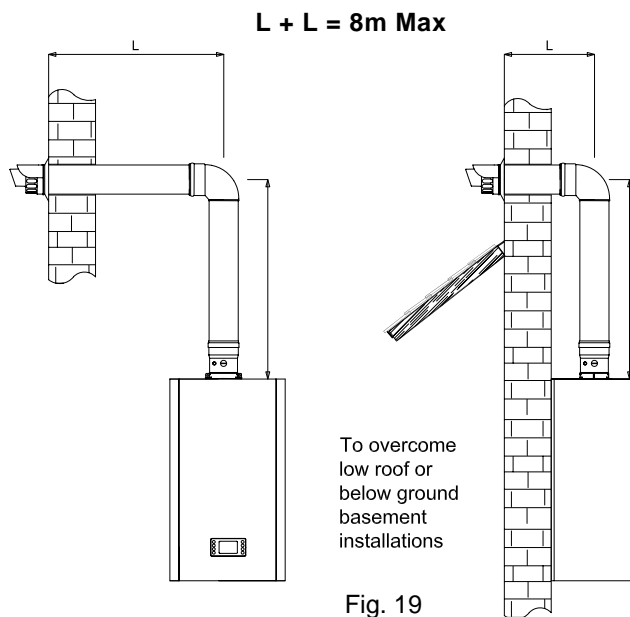


Fig. 19

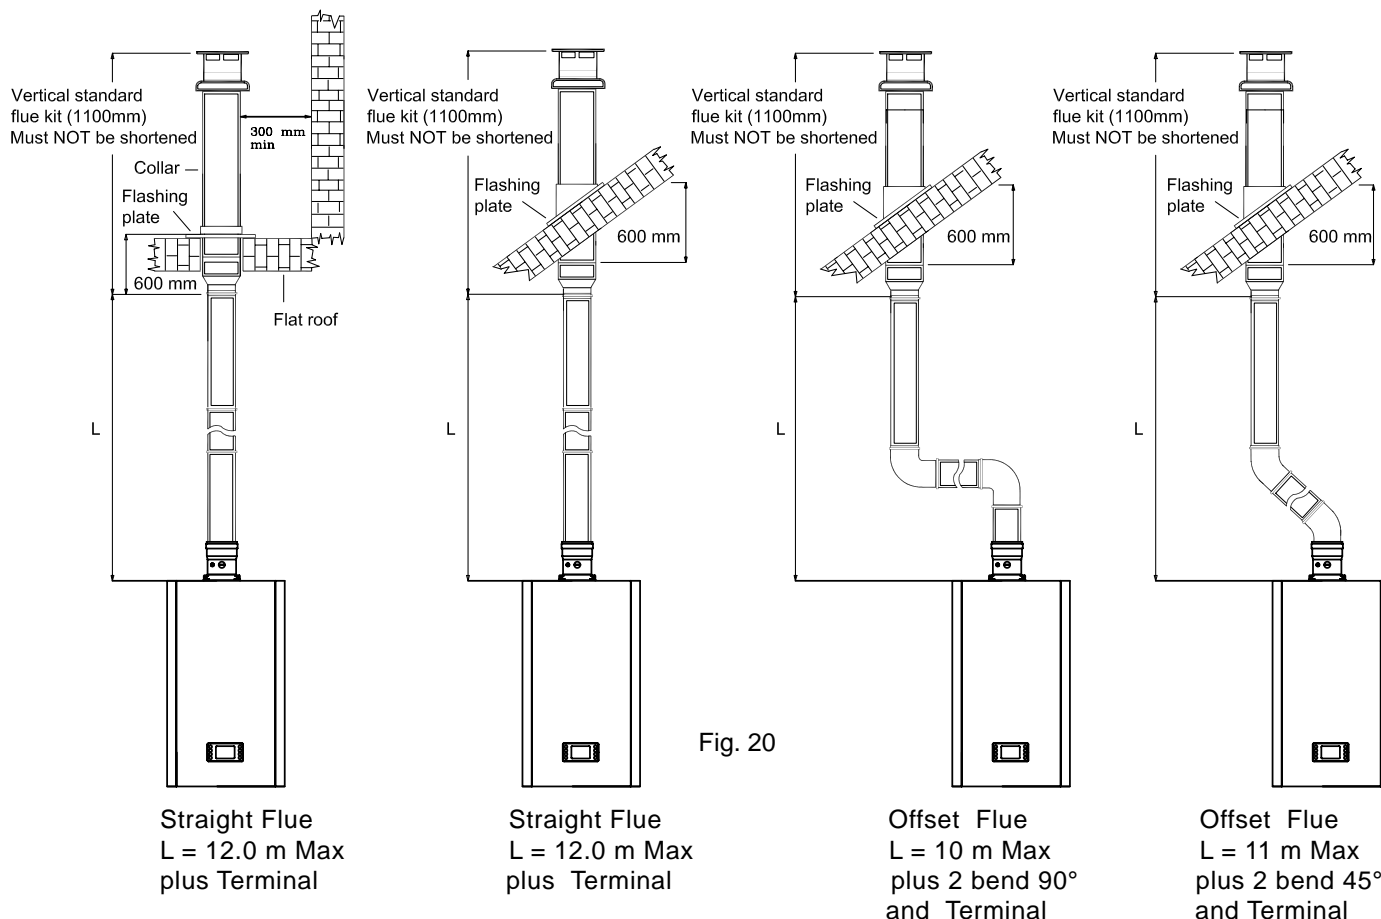


Fig. 20

- Ensure that the maximum permissible flue length is not exceeded (fig. 20 and see table 5).
- Mark the two wall fixing bolt holes
- Detach the template from the wall.
- Use a 10 mm dia. drill to make the 2 holes.
- Insert plastic expansion plug.
- Screw in the two coach bolts.
- Position the flue sample point starter (straight flue header which must be fitted) and fix the securing screw on the flue adaptor appliance

(fig. 22 item 66), and ensure that the gasket is correctly fitted.

Important: Make sure that the dia 60 mm on the straight flue header is inserted fully into the flue manifold, and the flue manifold rubber seal is correctly fitted. (Fig 22 item 65)

Cut a 105 mm diameter hole through the ceiling and/or roof, at the point previously marked.

Fit a roof flashing slate to the roof, available from The White Boiler Company.

Insert the Vertical Flue terminal assembly through the flashing slate from the outside.

Lift the boiler on the wall, locating onto the top two fixing bolts. Tighten the two bolts using a spanner to secure to the wall.

Measure the vertical distance between the top of the flue and the bottom of the flue terminal assembly (fig. 21). The measurements should be taken from the outer diameter of the flue.

NOTE: Where this length does not match any standard combination of the extensions, only the extension can be cut to the required length (fig. 23).

When cutting both inner and outer ducts of the extension, always cut on spigot side, and they must be de-burred.

ACCESSORIES CONCENTRIC FLUE 60/100 EXTRAS: **TABLE 7**

Part. No.	Description
PR5094110A	Straight flue header / sample point 60/100
PRFE	Flue Extension 60/100 L1000
PR45FBI	45° bend 60/100
PR90FBI	90° Elbow bend 60/100
PR5023016	Horizontal terminal 60/100
TER110200	Vertical flue Terminal


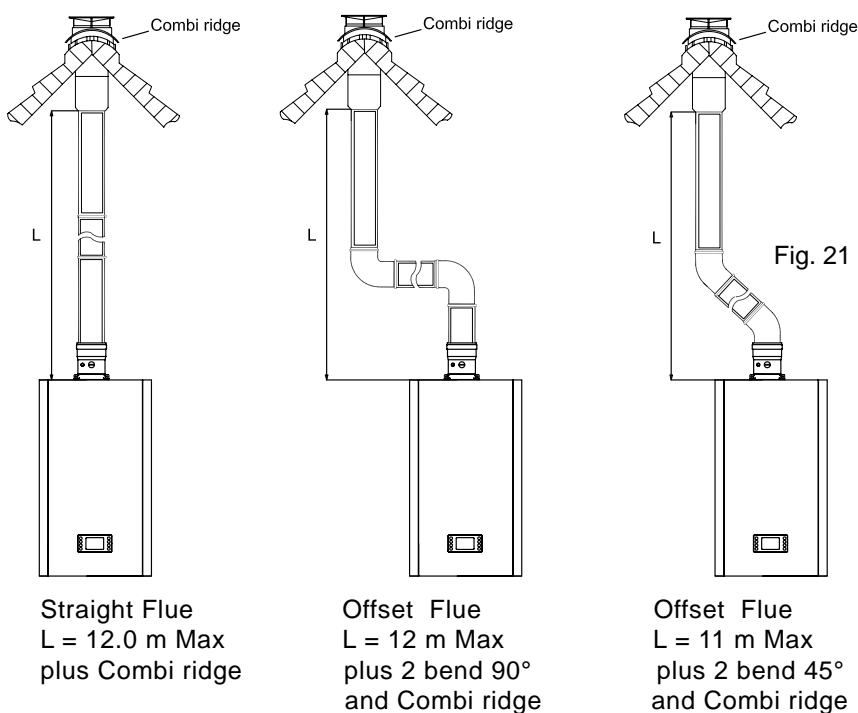


Fig. 21

Fig.23

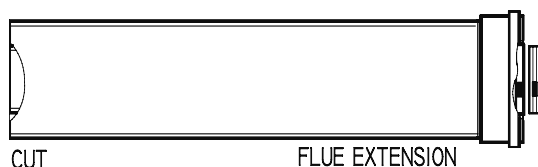

Starting at the appliance end, assemble the extension duct sections, making each inner and outer (flue) joint by inserting the spigot end into the socket end of the next tube, making sure the seal rings are correctly located (fig. 22). Make sure that the entire flue is adequately supported. Use at least one bracket for each extension used.

Ensure that all inner flue connections have a good fit/seal, and that the space clips in each extension are correctly positioned.

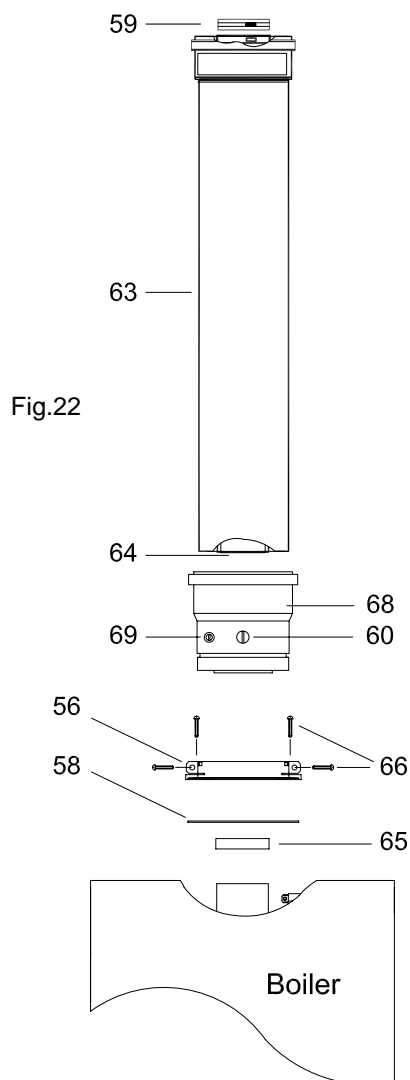


Fig.22

KEY

- 56 - Flue adapter
- 58 - Header gasket
- 59 - Rubber seal Ø 60
- 60 - Fumes sample point
- 63 - Flue extension
- 64 - Flue exhaust duct extension
- 65 - Flue manifold rubber seal
- 66 - Securing screw
- 68 - Flue starter
- 69 - Air sample point

IMPORTANT: Please, lubricate the internal part of the seals before fitting.

5.13 INSTALLATION INSTRUCTIONS FOR TWIN FLUE PIPE (ECCENTRIC FLUE DUCT SYSTEM)

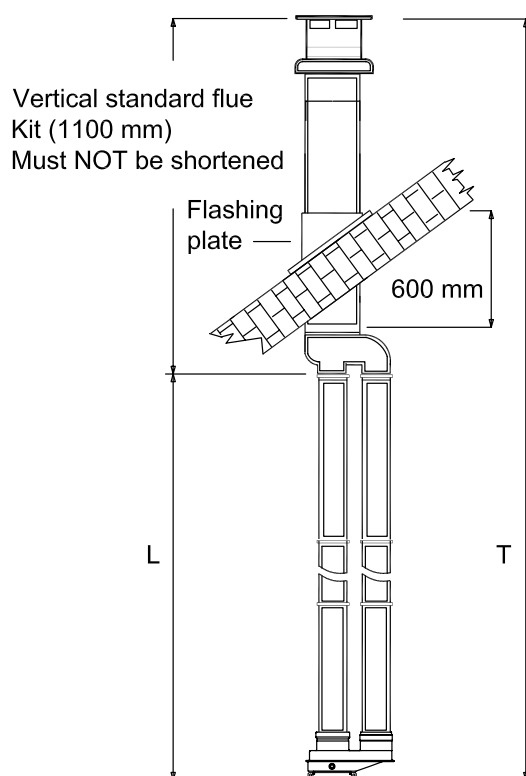


Fig. 24

Straight flue
L= 42 m max + terminal
T= Max length 43 m

IMPORTANT: Please, lubricate the internal part of the seals before fitting.

IMPORTANT:

These instructions must be read in conjunction with the main installation and servicing instructions. As with all flues the kits must be installed taking due account of the current issue of BS 5440 parts 1 & 2 and timber frame housing DM2 is referenced to the Institute of Gas Engineers Document IGE/UP/7. Also note that the requirements will vary depending upon the kit being installed. Guidance is provided but unless otherwise stated, always comply with the recommendations of the relevant codes of practice.

TABLE 8

Part. No	Description
SDO110050	Twin flue header F80/F80
PRO110200	Straight pipe L.1000 80
CUR110150	90° elbow bend 80
CUR110200	45° bend 80
GRI110050	Air inlet terminal 80
GRI110100	Exhaust terminal 80
TER060110	Vertical eccentric flue Terminal

5.14 TWIN FLUE INSTRUCTIONS

This part of the installation manual covers the installation and fixing instructions of the twin flue eccentric flue duct systems only. When ordering twin flue it must be stated for WH 80/90 (T) range. Typical installation procedures are illustrated by drawings. Remove the front panel of the case (sect.8.1). Unscrew the screw (item 66 fig. 17) on the flue adaptor.


Make sure that the flue manifold rubber seal is located into the flue manifold, and lubricate the internal part of the seal before assembly. Locate the header gasket on the twin flue header and push into the flue adaptor making sure that the inner plastic exhaust locates firmly in the outlet spigot of the flue manifold, and screw the securing screw that secure the twin flue header on the boiler. Locate the 2 x 80 mm O-rings in the twin flue header and lubricate the internal part of the seal before assembly to ensure easy snug fit. Figures show the versatility of this flueing system. Measurements and bends must be calculated correctly so as not to oversize maximum flue lengths. All located O-rings must be lubricated with a silicone grease to ensure a snug fit.

NOTE: Exhaust flue must slope 1.5° down towards the boiler 25 mm/m fall per metre of flue length.

Spacing Clips

Spacing Clips are available on request should they be required.

NOTE: for eccentric vertical flue a 125 mm (5 in) diameter flashing plate will be required.

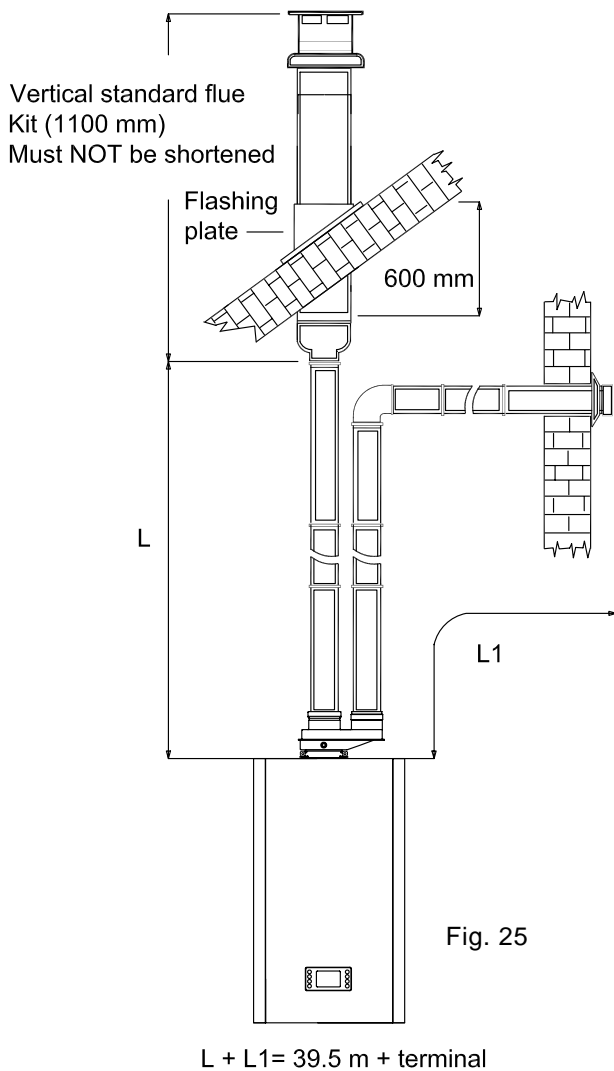


IMPORTANT:

- See fig. 6 for terminal clearances.

IMPORTANT NOTICE:

- Inlet and exhaust terminals must never be installed on opposite walls of the building (PrEN 483).
- If the flue terminates less than 2 m above a balcony, above the ground, or above a flat roof to which people have access, then a suitable terminal guard must be fitted.
- Fit only recommended flue terminal guard by securing concentrically around terminal with screws.

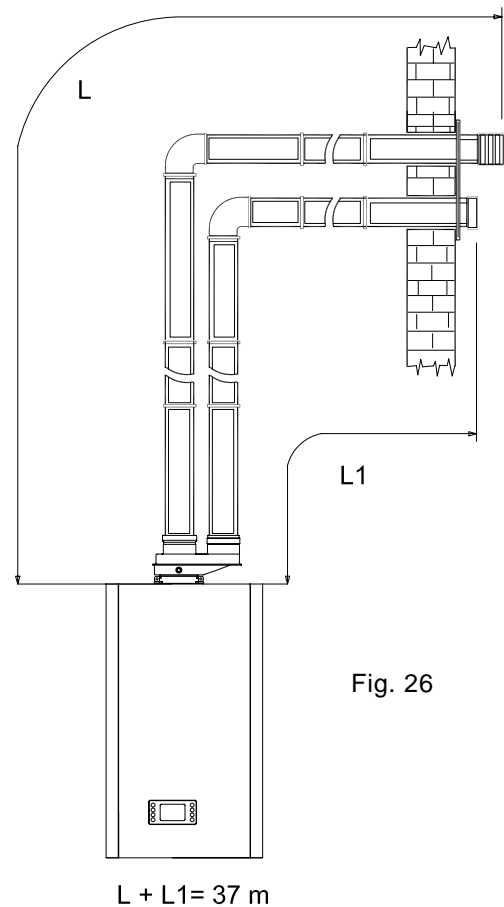

5.15 Exhaust/suction system with concentric pipes for flat or sloping roofs. Extensions with two separate pipes (fig. 24).

Maximum distance: $T = L = 21 + 21 = 42 \text{ metre} + \text{Terminal}$

Minimum distance: $L = 0.5 + 0.5 = 1 \text{ metre} + \text{Terminal}$

Exhaust terminal must not be cut.

NOTE:

- If bends are used in the exhaust flue then horizontal
- Sections must be avoided and there must be a 1.5° slope
- Towards the boiler 25 mm fall per metre.

**5.16 Maximum distance $D = L + L1 = 39.5 \text{ metre} + \text{Terminal}$
Minimum total length = 2 metre**

NOTE: Exhaust flue must slope 1.5° down towards the boiler 25 mm fall per metre.

5.17 Exhaust/suction system with two separate pipes through a single vertical wall (fig. 26).

Maximum distance: $D = L + L1 = 37 \text{ metre}$

Minimum distance: $D = L + L1 = 1 \text{ metre}$

Min distance between pipe 50 mm.

IMPORTANT: Please, lubricate the internal part of the seals before fitting.

Available on request from:
THE WHITE BOILER COMPANY
Chartists way, Morley, Leeds, West Yorkshire
ENGLAND LS27 9ET - U.K.
Tel. 0113 252 7007

5.18 INSTALLATION INSTRUCTIONS FOR CONCENTRIC 80/125 FLUE SYSTEM

The vertical 80/125 flue kit is intended for use where a horizontal 60/100 flue outlet is not possible or desired.
The vertical flue can be installed on either a flat roof or a pitched roof (maximum pitch 60°).
Where a straight vertical flue is not possible or desired, an offset vertical flue can be used in conjunction with a side horizontal flue extension piece and an inline 135°/90° flue bend (fig. 27).

IMPORTANT:

- See fig. 6 for terminal clearances.

IMPORTANT NOTICE:

When using our vertical flue kit the 125 mm x 100 reducer is supplied complete with the vertical terminal simply remove this and fix it into the straight flue header (which must be fitted) on the top of the boiler.

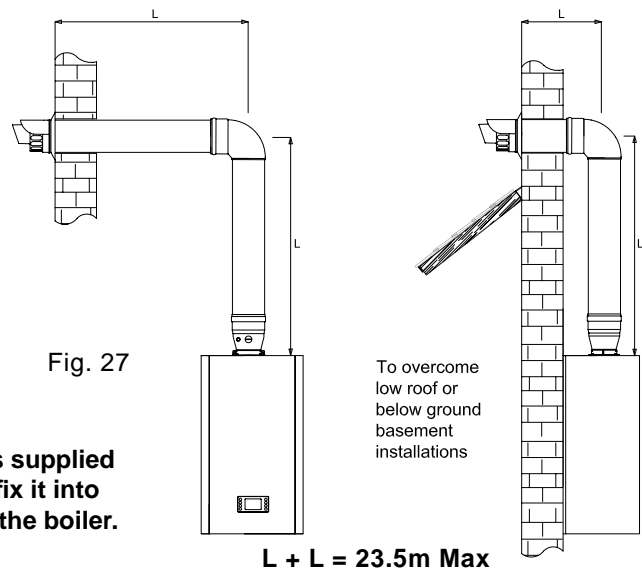


Fig. 27

$L + L = 23.5\text{m Max}$

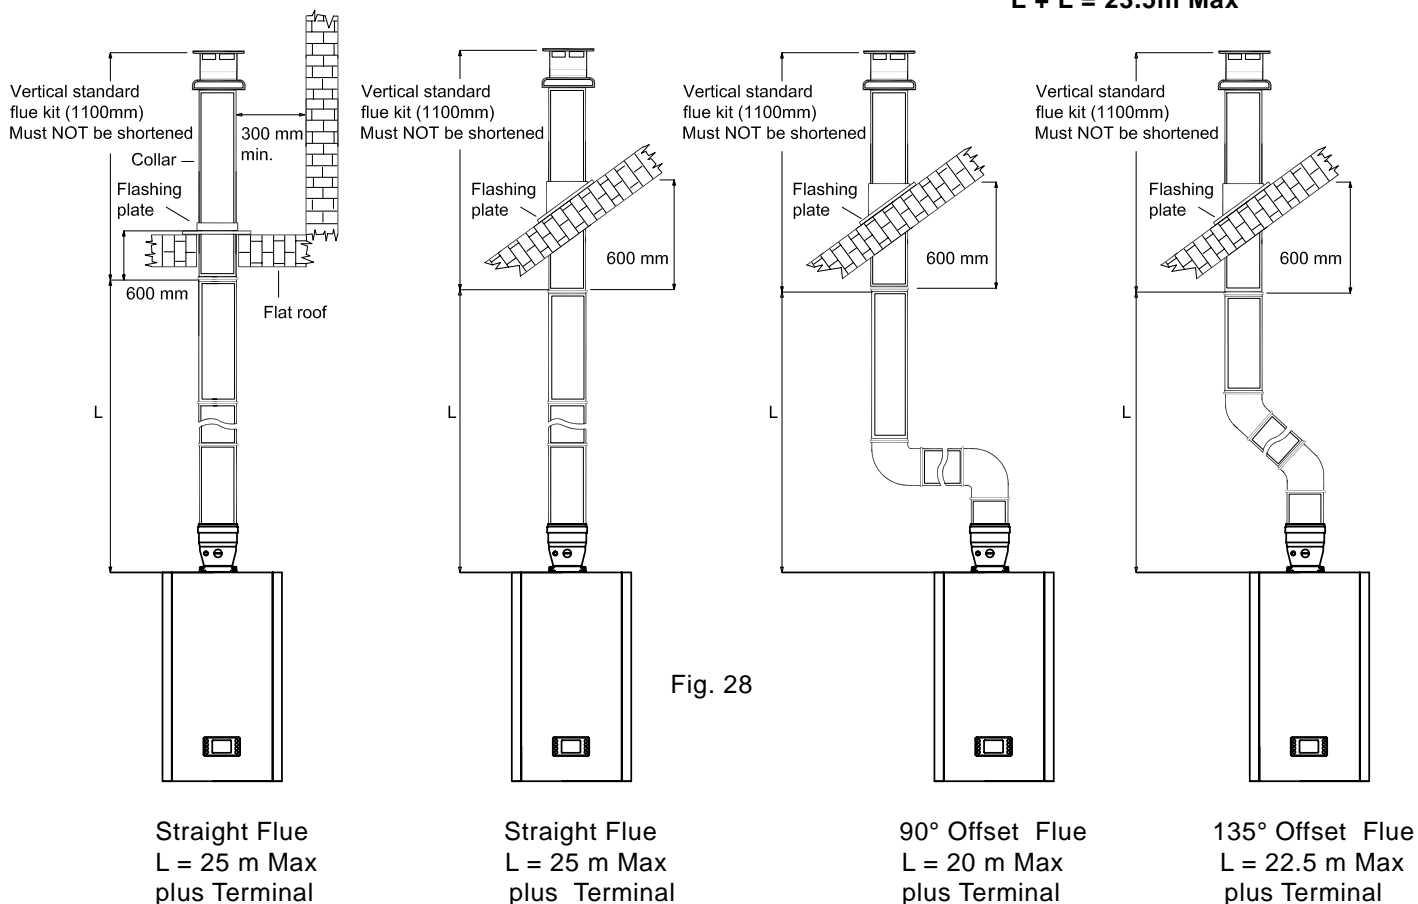


Fig. 28

Straight Flue
 $L = 25\text{ m Max}$
plus Terminal

Straight Flue
 $L = 25\text{ m Max}$
plus Terminal

90° Offset Flue
 $L = 20\text{ m Max}$
plus Terminal

135° Offset Flue
 $L = 22.5\text{ m Max}$
plus Terminal

NOTE : If using Flue arrangement in fig. 27 then the 125x100 Flue reducer must be purchased separately.

TABLE 9

Part No	Description
PR5094110A	Straight flue header / sample point 60/100
PRO110300	Flue Extension 80/125 L1000
RID110050	125/80 to 100/60 Flue reducer
CUR110250	45° flue bend 80/125
CUR110300	90° elbow flue bend 80/125
TER010050	Horizontal Flue Terminal 80/125
TER110200	Vertical Flue Terminal 80/125
TEG060050	Flashing sleeve/slate

IMPORTANT: Please, lubricate the internal part of the seals before fitting.

Available on request from:
THE WHITE BOILER COMPANY
Chartists way, Morley, Leeds, West Yorkshire
ENGLAND LS27 9ET - U.K.
Tel. 0113 252 7007

5.19 ASSEMBLE BOILER

5.20 Fitting valve pack

Remove plastic caps from boiler connection and fit valves as per fig. 29 using washers provided.

It is recommended fitting the valve pack before installing the boiler on the wall.

5.21 GAS CONNECTION (Fig. 29)

A minimum working gas pressure of 20 mbar (8 in w.g.) must be available at the boiler inlet at full flow rate (37 mbar for propane, 29 mbar for butane).

Fit the gas service cock to the boiler via the union nut and connect gas pipe. Do not over tighten and use another spanner as a counter force to avoid straining internal connections. Important consult (sect 4.6).

5.22 CENTRAL HEATING CONNECTION (Fig. 29)

Before any central heating connections are made to the boiler all system valves should be opened and the system thoroughly flushed out with cold water.

- Connect the central heating return pipe to the isolating cock.
- Connect the central heating flow pipe to the isolating cock marked CHF.
- Pipe dimensions and positions are marked on template supplied (fig. 30).

5.23 DOMESTIC HOT WATER CONNECTION (Fig. 29)

The domestic hot water circuit does not need a safety valve but it is essential to ensure that the pressure of the cold water supply does not exceed 10 bar. If in doubt it is advisable to install a pressure reducing valve. The minimum pressure needed to operate the domestic hot water system is 0.5 bar with a flow of approx 3lts per min. Flush out all foreign matter from the supply pipe before and after connecting to the appliance.

- Connect the 15 mm. cold water pipe to the appliance inlet.
- Connect the 15 mm. hot water pipe to the appliance outlet.

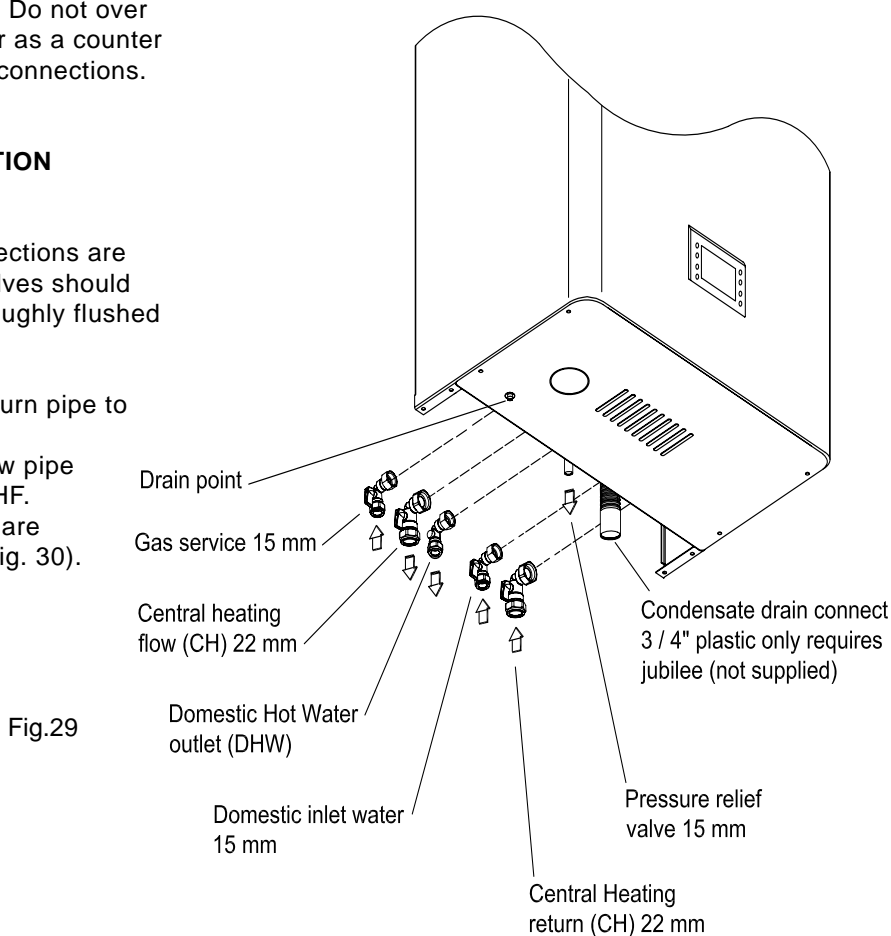


Fig.29

5.24 POSITION OF WATER/GAS CONNECTIONS

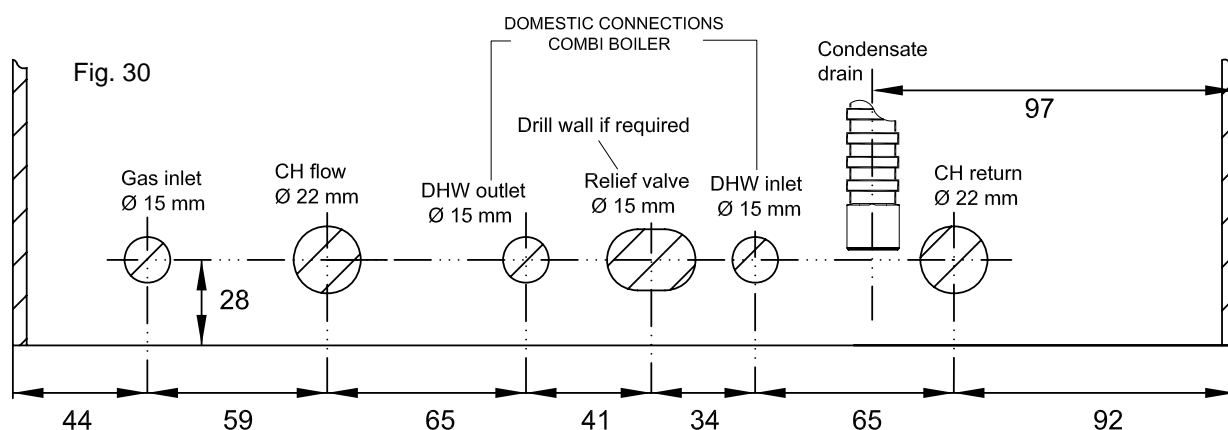


Fig. 30

5.25 SAFETY VALVE DISCHARGE

The safety valve is located to the rear (15 mm copper) to permit a discharge pipe to be connected. When connecting ensure the discharge pipe does not restrict access. The discharge should terminate facing downward exterior to the building in a position where discharging (possibly boiling water & steam) will not create danger or nuisance, an easily visible position, and not to cause damage to electrical components or wiring. The discharge must not be over an entrance or a window or any other type of access.

The drain pipe should have a fall of a least 2.5° away from the boiler. Condensate should, if possible be discharged into the household internal drainage system.

If this is not practicable, discharge can be allowed into the external household drains or a purpose designed soak away.

It is recommended that any external condensate drain pipe is insulated and also must be of 40 mm (1" 1/2) diameter, through the outside wall to prevent freezing in adverse weather conditions. It is not necessary to provide air breaks or extra traps in discharge pipe as there is already a 125mm high trap inside the boiler.

Fitting an extra trap may cause the boiler siphon to work incorrectly.

Refer to BS5546 or BS6798 for advice on disposal of boiler condensate.

5.26 CONDENSATE DRAIN CONNECTION

The condensate drain connection is a flexible 3/4" pipe and is therefore adjustable Fig. 29.

Notes: ALL EXTERNAL PIPE RUNS MUST BE IN ACCORDANCE WITH BS 6798

1 - INTERNAL TO SINK WASTE UPSTREAM OF SINK WASTE TRAP

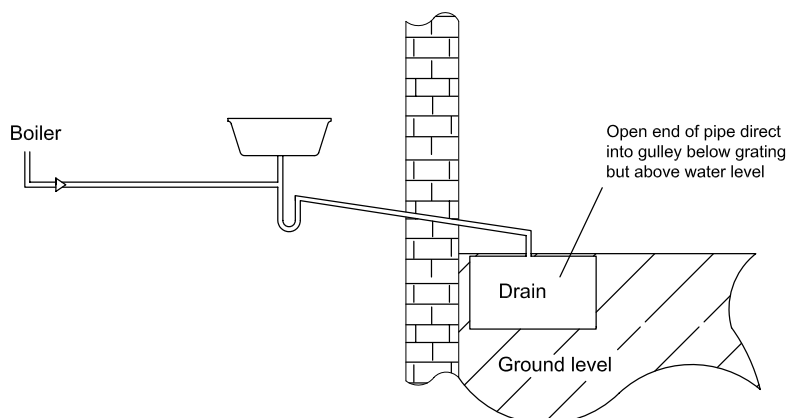


Fig. 31

2 - INTERNAL CONNECTION TO SOIL VENT STACK

Make connection to SVP using a solvent welded saddle.

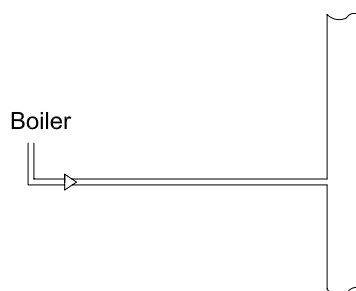


Fig. 32

3 - TERMINATION TO SOAK AWAY

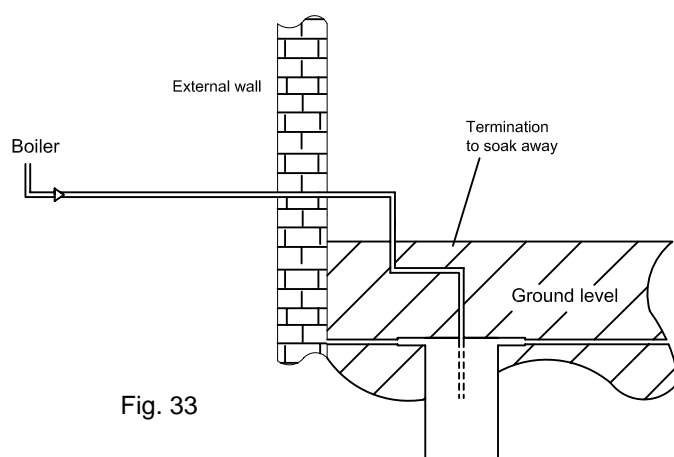


Fig. 33

4 - TERMINATION TO DRAIN / GULLY

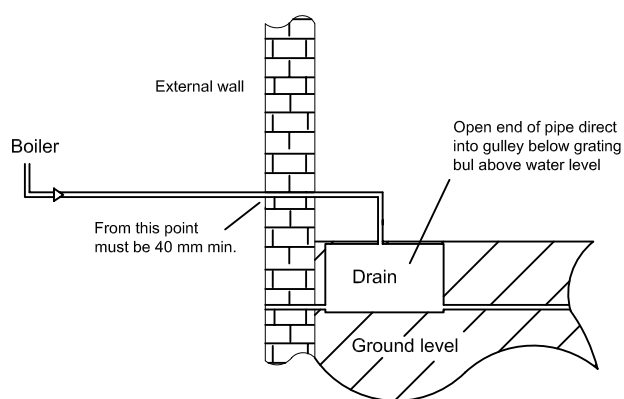


Fig. 34

5.27 CONVERTING THE APPLIANCE TO DIFFERENT GAS TYPES

Boilers are factory set to work for use with Natural gas or LPG gas. This is clearly marked on the packaging and boiler data badge.

To convert a boiler from one gas to another this operation must be carried out by a qualified competent person, with all necessary equipment authorised by the manufacturer.

It will also be necessary to obtain a data badge conversion kit directly from The White Boiler Company.

- 1 - Remove the case.
- 2 - Check gas mains pressure at the gas valve test nipple upstream (fig.35) with boiler operating (sect.6.8).
- 3 - Adjust fan speed as sect.3 (technical data).
- 4 - Measure the level of CO₂ as in section 6.9 and table 10, and adjust to correct data settings information.
- 5 - Affix new data badge.
- 6 - Replace in reverse order.

5.28 ELECTRICAL CONNECTIONS

IMPORTANT:

Electricity supply must be as specified in clause (sect. 4.22).

- When controls external to the appliance are required, design of the external electrical circuits should be undertaken by a competent person. In accordance with the IEE wiring regulations.

It is essential that all external controls are VOLT FREE.

Factory fitted internal wiring must not be disturbed when wiring external controls.

- To gain access to the electrical box remove the front panel of the case as described in clauses sect. 8.2.

You can slide towards the top the instrument panel box and push the retaining latches and remove the instrument panel (sect. 8.24).

- Heat resistant flexible cable is fitted between the isolator and the terminal block which is a 3 core cable of 0.75 mm² (24x0,2 mm) to BS 6500.

Make sure all wires to the appliance are routed away from sharp edges and hot surfaces.

The cable must be fastened with its cord anchorage and connected so that should the cable slip from the anchorage the current carrying conductors become taut before the earthing conductor. Securely tighten all terminal screws and arrange the cable with slack between the cord anchorage and the terminal block.

WARNING:

If the supply cord is damaged, it must be replaced by a service engineer (supply cord available from The White Boiler Company).

5.29 OUTDOOR SENSOR

For use, consult Outdoor Sensor instructions.

6 COMMISSIONING

Each boiler has been through a rigorous operational testing procedure at our factory and should not require any further adjustment, if you are not the installer but just commissioning this boiler check that the boiler has been installed in accordance with these instructions, and the integrity of the flue system and the flue seals, as described in the flue installation section.

6.1 GAS SUPPLY INSTALLATION

Inspect the entire installation including the gas meter, test for soundness and purge, all as described in BS 6891.
In Ireland refer to IS 813:2002.

6.2 ELECTRICAL INSTALLATION

Preliminary electrical systems checks to ensure electrical safety shall be carried out by a competent person.
ALWAYS carry out the preliminary electrical system checks:
i.e. earth continuity, polarity, resistance to earth and short circuit, using a suitable test meter.

6.3 INITIAL FILLING OF THE SYSTEM

Open central heating flow and return valves
Unscrew the cap on automatic air release valve positioned on the top of the pump housing one full turn (leave open permanently).

- Close all air release taps on the central heating system. Press the P button to display the current pressure (code E8 will display if the pressure is nil/too low).
- Gradually open stopcock at the filling point connection to the central heating system until water is heard to flow.
- Starting with the lowest radiator open each air release tap in turn. Close it only when clear water, free of bubbles, flows out. In the same way release air from any high points in the pipework.
- Continue filling the system until 1.5 bar register on digital display. Press the P button once again to return to the main screen.

GAS VALVE

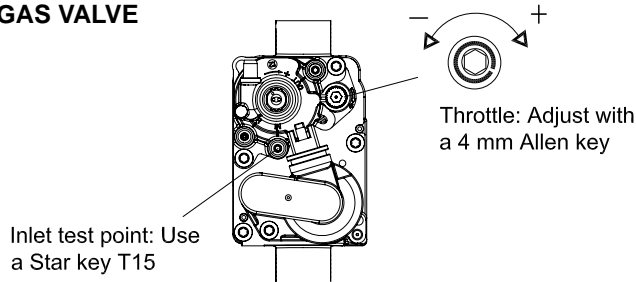


Fig. 35

- Then turn off the filling points stopcock.
- Inspect the system for water soundness and remedy any leaks discovered.

6.4

SETTING THE HEATING SYSTEM DESIGN PRESSURE

The design pressure must be a min. 1 bar and max. 1.5 bar. These figures are read on the digital display by pressing the P button. The actual reading should ideally be 1 bar + the height in metres to the highest point of the system above the base of the appliance (up to max of 1.5 bar).

N.B.: The safety valve is set to lift at 3 bar (30 mt/42.5 psi).

To lower the system pressure to the required value remove at the drain point (fig. 36) or drain on the heating circuit.

6.5

FILLING THE HOT WATER SYSTEM

Close all hot water draw-off taps.
Open the cold water inlet cock.
Slowly open each draw-off tap until clear water is discharged.

6.6

LIGHTING THE BOILER

Before lighting the boiler make sure that the heating circuit flow and return valves are open and also that the cold water input cock is open.

- If external controls are installed (E.g. time clock and thermostat) make sure that they are calling for heat.
- Select winter function, the winter icon in digital display will be flashing (item 3 fig. 2).
- To select the minimum heating temperature press the radiator button.

IMPORTANT:

Before lighting the boiler select the minimum central heating temperature. This must be left at minimum for approx 5 mins to purge air safely from the boiler.

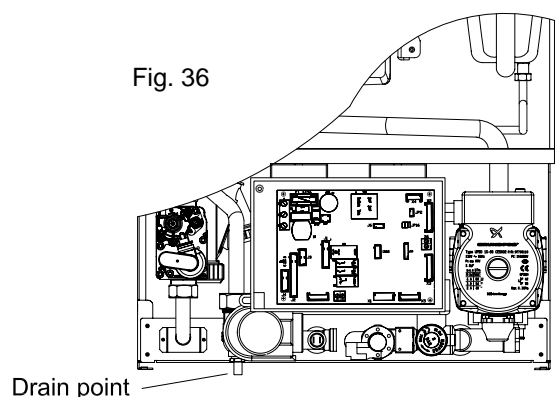


Fig. 36

- To select the minimum heating temperature press the radiator button.
- Press arrow up and arrow down buttons to adjust.
- The digital display shows the current set temperature in central heating.
- After a few seconds the digital display shows the central heating temperature in demand (C.H. icon flashing, item 3 fig. 2).
- The fan starts and after a few seconds or so the digital led display will show that the ignition has commenced.
- **NOTES: Put the digital clock in demand position.**
- The ignition control will automatically make three attempts to start, if it doesn't start this may be due to air in the gas supply line. If the burner fails to light, the digital led display and fan will stop, and the display will show the lockout code (E1 depicts flame failure).
- If necessary push the boiler Reset button (item 2 fig.1) and the boiler will restart automatically.
- After the boiler has lit, allow to warm at minimum temperature setting to purge any air from the system.
- Once the system has been purged of air, set the heating temperature to the desired setting.

6.8 CHECK THE GAS PRESSURE

Check the gas mains pressure at the gas valve inlet pressure test point (fig.35) with the boiler operating at full rate.

Check with the Local Gas supplier if the pressure differs significantly from 20 mbar G20 (natural gas), 37 mbar G31 (propane) and 29 mbar G30 (butane).

With leak detection fluid test for gas tightness of all gas components and joints.

IMPORTANT:

The Gas Valve Throttle adjuster is required to be sealed with tamper proof paint after adjustment (fig. 35).

6.9 COMBUSTION CHECK

Check all gas carrying components along with, the combustion of the appliance which should be checked as follows.

Remove the front panel of the appliance.

Ensure the boiler and external controls are calling for heat. Turn on the electrical supply. open the hot water tap at maximum flow rate. Wait at least five minutes or until the unit has reached its operating temperature.

Unscrew the test sample screw on the boiler elbow bend (item 60 fig. 10). Measure the level of CO₂. Check the reading against the corresponding value in table 10 and with reference to page 63.

It is essential that this test is repeated with the casing on as this will check the integrity of the flue.

If adjustment proves necessary then proceed as follows.

IMPORTANT: Any adjustment to the gas valve should only be carried out by a qualified person.

Referring to the table 10, adjust the maximum level of CO₂ with the Throttle using a 4 mm hex on the gas valve (fig.35). Anti-clockwise to decrease CO₂.

Clockwise to increase CO₂. After any new regulation wait to stabilise for about one minute. Replace the front cover.

TABLE 10

	CO ₂ %
NAT GAS	9.0 (+0.5 / -0.5)
LPG	10.5 (+0.5 / -0.5)

IMPORTANT: Do not insert the analyser probe into the sample point immediately or leave in long periods. This will prevent saturation of the analyser.

During the calibration function the combustion ratio may increase for a short time while the boiler performance is optimised.

The person carrying out a combustion measurement should have been assessed as competent in the use of a flue gas analyser.

The flue gas analyser used should be one meeting the requirements of BS7927 or BS-EN50379-3 and be calibrated in accordance with the analyser manufacturer's requirements.

ELECTRODES POSITION

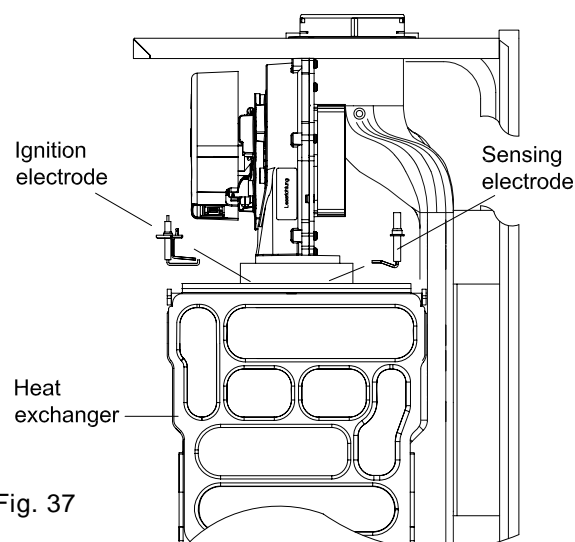


Fig. 37

ATTENTION
IT IS A CONDITION OF THE MANUFACTURERS WARRANTY THAT THE BENCHMARK
COMMISSIONING CHECKLIST IS FULLY COMPLETED AND LEFT WITH THE APPLIANCE



Once the process of commissioning the boiler is complete, the
commissioning engineer **MUST** complete the relevant section in the Benchmark log book.

6.10 CHECKING THE FLUE SYSTEM

The flue system should be visually checked for soundness. Check all connections and fixings are secure and tight.

6.11 CHECKING THE HEATING THERMOSTAT

Allow the system to warm up and then select the C.H thermostat to ensure the main burner modulates from "high" to "low" and "low" to "off" and vice versa (scale range covers approx 35°C - 80°C, sec 1.5 key 5 to set heating temperatures).

6.12 TESTING AND REGULATING THE DOMESTIC HOT WATER SYSTEM FLOW AND CHECK THE OPERATIONAL (WORKING) INLET PRESSURE

Set up the boiler to operate at maximum rate by opening the hot tap to maximum flow. With the boiler operating at the maximum rate check the operational dynamic (working) gas pressure test complies with the requirements.

Ensure that this inlet pressure can be obtained with all other gas appliances in the property working.

Put the appliance in summer position (item 1 fig. 1).

- Open a domestic hot water tap (preferably the bath tap). Ensure the cold water inlet stopcock is open and the D.H.W. is set at maximum, press the arrow up (item 3 fig. 1) the digital display shows the set temperature, if necessary adjust with arrow up and arrow down buttons.
- After a few seconds the digital display shows water temperature in demand (D.H.W. icon flashing, item 12 fig. 2).
- If the boiler does not light check that the water flow rate is above the min. required to operate the differential pressure 2.8 Lts./min. (0.61 gals/min).
- The temperature of the water will depend on the rate at which it flows. If, due to high water pressure, the flow rate is too high (and the temperature too low for practical use) the flow rate may be adjusted. It is better to set for the lowest acceptable temperature preferably at the bath tap since the user can gain higher temperatures at other restricted flow taps.

- If the cold supply is subject to large fluctuations or is above the permitted max. water pressure, a suitable pressure/flow regulator should be fitted on the cold water supply to the appliance.
- Slowly close the draw off tap to reduce the flow rate to the min (approx. 2.8 litre/min).
- Select a different temperature for D.H.W. to ensure it operates at its various setting.
- Close the draw-off tap still further. The burner should stop when the rate falls below about 2.8 litres/min (0.61 gals/min).

6.13 KEEP HOT

The boiler comes with an optional keep hot facility.

This can be switched on by a competent person.

This will result in the boiler, at any time, periodically firing to keep the water within the boiler up to temperature to reduce the time delay of hot water delivered to any hot draw off point.

- Press P button (item 8 fig. 1) for 3 seconds to enter in menu.
- Use arrow up and arrow down buttons (item 5 and 6 fig. 1), to select BOIL.
- Press enter and reset buttons together (item 1 and 2 fig. 1) and enter button again.
- Use arrow up and arrow down buttons (item 3 and 4 fig. 1) to select the following option:
- PM3 Keep hot ("0" disabled, "1" enable). Adjust if necessary.

6.14 C.H. HIGH/LOW TEMPERATURE

The boiler comes set, in Central heating, at the 80°C flow temperature.

It is possible to adjust the max set-point to max 50°.

- Press P button (item 8 fig. 1) for 3 seconds to enter in menu.
- Use arrow up and arrow down buttons (item 3 and 4 fig. 1), to select BOIL.
- Press enter and reset buttons (item 1 and 8 fig. 1) together and enter button again.
- Use arrow up and arrow down buttons (item 3 and 4 fig. 1) to select the following option:
- PM4 ("1" high temperature, "2" low temperature).

6.15 RANGE RATING CENTRAL HEATING OR/AND DOMESTIC HOT WATER

The boiler comes set, in Central heating, at the **MID RANGE** of its output.

The boiler has already been adjusted by the manufacturer during production. If the adjustments need to be made again, observe the following procedures.

The adjustment to fan speed must be strictly in the sequence indicated, by qualified personnel only.

To check max fan speed, see tables 11/A and 11/B:

- Press P button (item 8 fig. 1) for 3 seconds to enter in menu.
- Use arrow up and arrow down buttons (item 3 and 4 fig. 1), to select BOIL.
- Press enter and reset buttons (item 2 and 3 fig. 1) together and enter button again.
- Use arrow up and arrow down buttons (item 3 and 4 fig. 1) to select the followings options:
- PM1 CH max fan speed.
- PM2 DHW max fan speed.
- Press enter (item 1 fig. 1) to select CH or DHW fan speed. Adjust if necessary.

6.16 TEST MODE

It is possible to activate the test mode function by pressing the arrow up and the arrow down buttons, (item 3 and 4 fig. 1) for 5 seconds.

Press the arrow up and the arrow down buttons to set the maximum or minimum fan speed.

The function is enabled for maximum 15 minutes and it has priority on D.H.W. mode. Press reset to esc test mode.

6.17 INSTRUCTING THE USER

After completion of the installation and commissioning of the system, the installer should hand over to the Householder by taking the following actions:


- To the Householder explain His/her responsibilities under the "Gas Safety Regulations 2000".
- Explain and demonstrate the lighting and shutting down procedures.
- Show the user the location of the filling valve and how to top-up the system pressure correctly.
- Explain the operation of the boiler including the use and adjustment of ALL system controls which should be fully explained to the Householder. This will ensure the optimum fuel economy for the household requirements of both heating and hot water consumption. Advise the User of the precautions

TABLE 11/A

Range rating regulation of Central Heating				
C.H. regulations	Heat input (kW)		Fan speed (rpm)	
	WH 80	WH 90	WH 80	WH 90
Maximum setting	20	24,5	4200	4200
Minimum setting	3,7	4,1	1300	1300

TABLE 11/B

Range rating regulation of Domestic Hot Water				
D.H.W. regulations	Heat input (kW)		Fan speed (rpm)	
	WH 80	WH 90	WH 80	WH 90
Maximum setting	25,4	30,1	4800	4800
Minimum setting	3,7	4,1	1300	1300

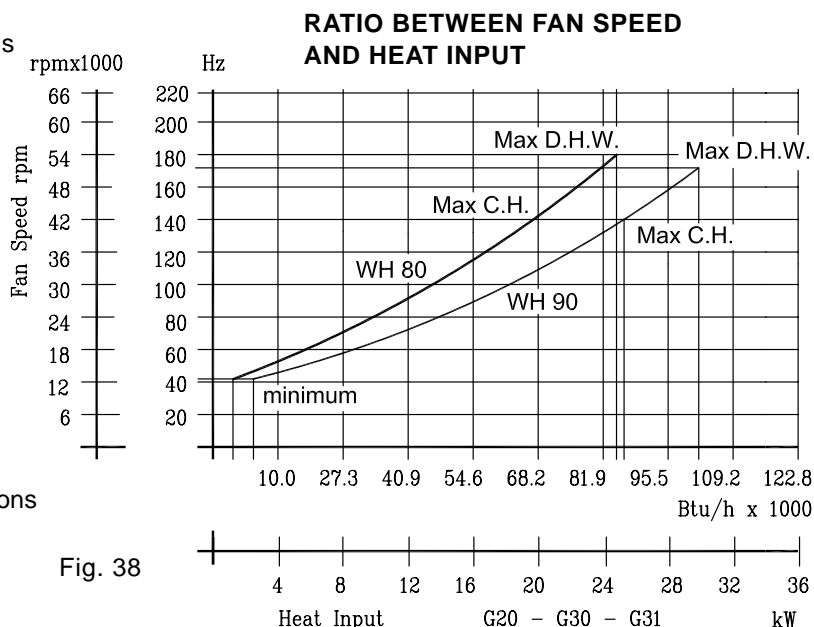

necessary to prevent damage to the system, and to the building, in the event of the system remaining inoperative during frost conditions.

- Explain the function and the use of the boiler, the summer/winter button, the ON/OFF switch and the reset of the digital display.
- Explain and demonstrate the function of the temperature controls, radiator valves etc for the economic use of the system.
- If an external time clock is fitted, then draw attention to the digital time.
- Stress the importance of regular servicing by a qualified Heating Engineer and that a comprehensive service should be carried out **AT LEAST ONCE A YEAR**.
- Fill in the Benchmark log book and leave completed with the customer.
- Explain to the user how to isolate the appliance from the gas, water and electricity supplies and the locations of all drain points.

7 SERVICING INSTRUCTIONS

The White Boiler Company is a member of the Benchmark initiative and fully supports the aims of the programme. Benchmark was instructed to improve the standards of installation and commissioning of central heating systems in the UK and to encourage the regular servicing of all central heating systems to ensure safety and efficiency.



Combustion testing must be carried out by competent person using a combustion analyser conforming to BS7927.

During routine servicing, and after any maintenance or change of part of the combustion circuit, the following must be checked:

- The integrity of the flue system and the flue seals.
- The integrity of the boiler combustion circuit and the relevant seals.
- The operational dynamic (working) gas inlet pressure at maximum rate.
- The gas rate.
- The combustion performance (Refer to table 10 and page 63).
- Check all joints and connections in the appliance and remake any that show signs of leakage.

NOTE:

Service consumables are not covered by the warranty.

To view warranty exclusions please visit www.ravenheat.co.uk or contact us on 01132 527007.

COMPETENCE TO CARRY OUT THE CHECK OF COMBUSTION PERFORMANCE.

Please note: BS6798:2009 Specification for installation and maintenance of gas-fired boilers of rated input not exceeding 70 kW net advises that:

- The person carrying out a combustion measurement should have been assessed as competent in the use of a flue gas analyser and the interpretation of the results.
- The flue gas analyser used should be one meeting the requirements of BS7927 or BS-EN 50379-3 and be calibrated in accordance with the analyser manufacturers requirements.
- Competence can be demonstrated by satisfactory completion of the CPA1 ACS assessment which covers the use of electronic portable combustion gas analysers in accordance with BS 7967, Parts 1 to 4.

7.1 BOILER FROST PROTECTION

The appliance has a built in frost protection device that protects the boiler from freezing. With the gas and electric supplies ON and irrespective of any room thermostat setting, the frost protection device will operate the pump when the temperature falls below 10°C and will operate the burner when the temperature falls below 5°C.

The burner will switch off when the temperature reaches 27°C. When the frost protection device operates "AF" is displayed on the digital display.

IMPORTANT NOTE:

The system should be protected by incorporating a system frost thermostat.

To ensure continued efficient operation of the appliance it is necessary to carry out servicing and cleaning at regular intervals.

The frequency of servicing and cleaning will depend upon the particular installation conditions and usage but in general, once a year is advisable.

WARNING:

Before the start of any servicing or replacement of components always isolate the electricity supply to the appliance and always turn off the appliance gas supply at the gas service cock.

The Data badge is positioned low on the inside left panel.

- The following notes apply to the appliance and its controls but it should be remembered that attention must also be paid to the heating and hot water circuits with special attention to radiator valves, thermostats, clocks, leaking hot water taps etc.
- Where it is necessary to replace a gasket that relies on adhesive for securing - this adhesive will be supplied with the gasket as a spare item.
- In all cases prior to servicing, remove the front panel of the case. Operate the appliance by turning the hot water services on to a high water flow. Measurement of the products of combustion can be achieved by connection of a probe to the combustion analyser test point.

- **IMPORTANT:**

After completing any servicing or replacement of gas carrying components it is essential that a test for gas soundness is always carried out along with functional checks in operation.

7.2 TO INSPECT AND CLEAN THE APPLIANCE

Before carrying out the cleaning operation, cover the electrical control panel with a piece of waterproof material to protect it from debris. Inspect the heat exchanger for any blockage. Deposits of any material should be brushed away using a soft brush.

NOTE: Do not use brushes with metallic bristles.

Examine internal pipe-work connections and automatic air vent for any water leaks and rectify if necessary. Examine and remove loose debris from the combustion chamber using a soft brush and vacuum cleaner. Carefully flush, by spraying water at any remaining debris through the condensate trap. (Ensure the water is kept away from electrical components).

Inspect the siphonic condensate trap for a blockage. Remove the cap at the base of the condensate trap. Remove any debris found. Remove the float to clean it. Any deposits should be flushed out. Reassemble and refit the condensing trap.

When refitting the cap ensure that a watertight seal is achieved, but do not use excessive force.

Examine the spark and sensing electrodes for any mechanical damage. Clean away any debris and check the spark and sensing gap.

Examine flue duct and flue manifold and ensure that there is no obstruction. Examine the gasket at the entry into the flue manifold.

It is essential that a good seal is made at the outlet to the flue manifold, renew this gasket if there is any sign of damage or deterioration.

8

REPLACEMENT OF PARTS

8.1

GENERAL

Replacement of parts must be carried out by a competent person.

Before replacing any parts the boiler should be isolated from the mains electric supply and the gas should be turned off at the service cock on the boiler.

After replacing any parts always test for gas soundness and if necessary carry out functional test of the controls.

For replacement of parts, the front, and bottom panels of the boiler will need to be removed (it is not necessary to remove the side panels as all parts are accessible from the front or beneath the boiler).

8.2

TO REMOVE THE BOILER PANELS

To remove the front panel unscrew the two lower screws that secure the front panel to the boiler and lift off.

To remove the bottom panel unscrew the four screws and lift off.

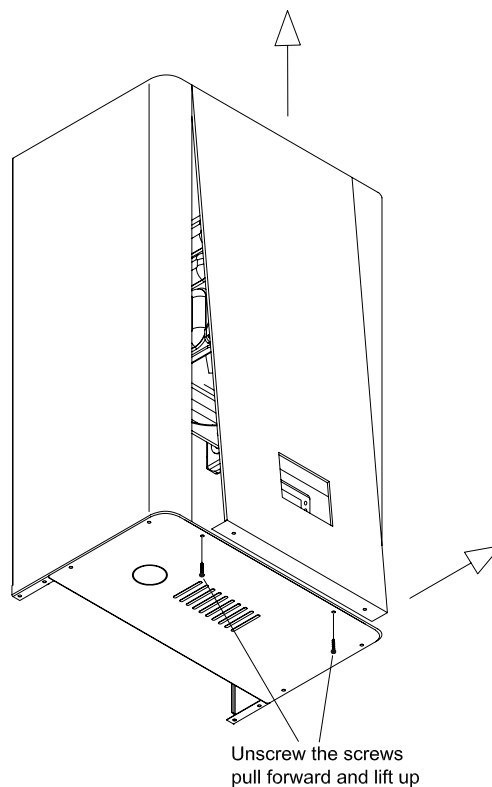


Fig. 39

8.3 TO REMOVE LEFT AND RIGHT PANELS (Fig. 40)

Remove front panel (fig. 39).
Unscrew the four screw to the bottom panel.
Unscrew the two screws to the side panel rotate 48 mm and unhook.

Rotate 48 mm
and pull down

Remove the front panel

8.4 TO REMOVE/REPLACE SPARK IGNITER BOX (Fig. 41)

Remove front panel (fig. 39).
Detach all the connectors from the igniter control box.
Remove the 2 screws that secure the spark igniter to the bracket.
Replace in reverse order.

Unscrew the two screws
and pull left side

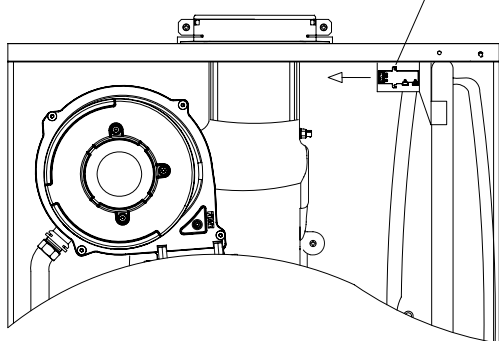


Fig.41

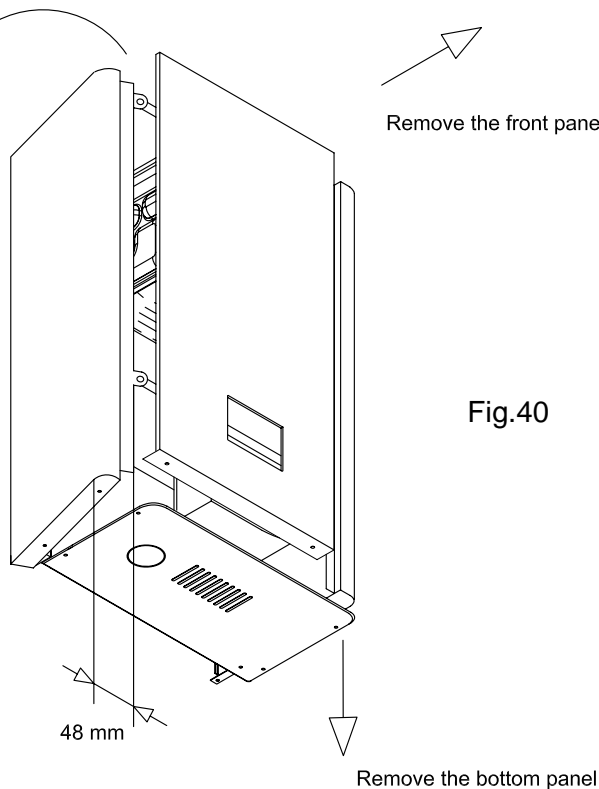


Fig.40

4 - Pull right side the fan and pull forward

3 - Unscrew the four screws
and remove only the right screws


2 - Remove the retaining clip

1 - Unscrew the nut

8.5 TO REMOVE/REPLACE FAN (Fig. 42)

Remove front panel (fig. 39).
Unscrew the gas pipe nut and remove the retaining clip. Detach the connectors from the fan.
Unscrew the four screw that fix the fan and remove only the right screws.
Pull the fan to the right and pull forward.
Replace in reverse order (always fitting a new gasket).

Fig.42

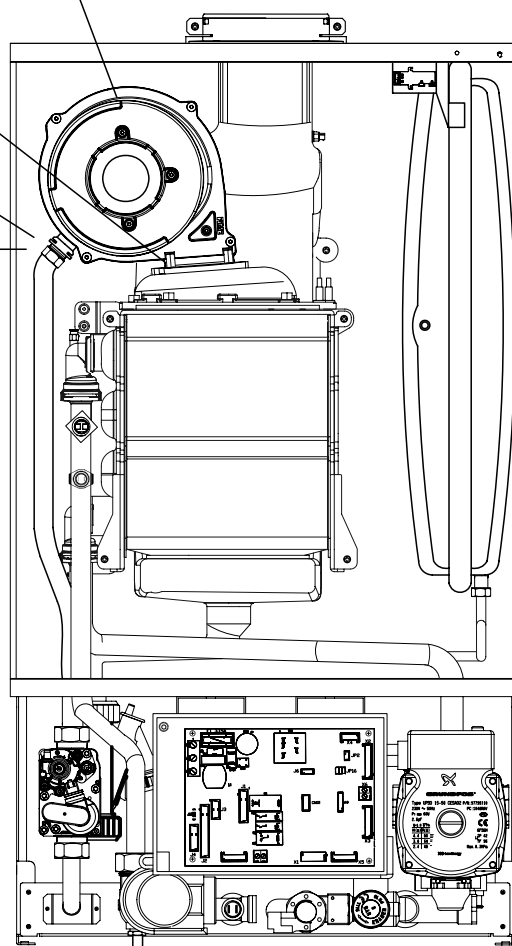

8.6

TO REMOVE/ REPLACE THE ELECTRODES (Fig.37)

Remove front panel (fig. 39).
Remove the ignition and/or sensing lead plug.
Unscrew the two securing screws and put them into a suitable container so that they don't get lost.
Withdraw the Spark electrode and/or sensing electrode carefully from the burner cover being careful not to damage the seal.
Replace with a new electrode in reverse order. Ensure the gap is correct and there is a good seal when replaced (always fitting a new gasket).

8.7

TO REMOVE/REPLACE THE BURNER (FIG.43)

Remove front panel (fig. 39).
Unscrew the gas pipe nut and remove the retaining clip. Detach the connectors from the fan.
Unscrew the screws to the burner cover and remove the cover with the fan.
To remove the burner, unscrew the screws in the lower cover side.
Replace in reverse order (always fitting a new gasket).

3 - Lift up the fan with the burner cover and pull forward

2 - Unscrew the four screws

1 - Unscrew the nut

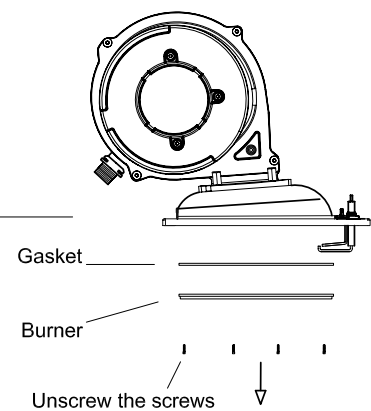
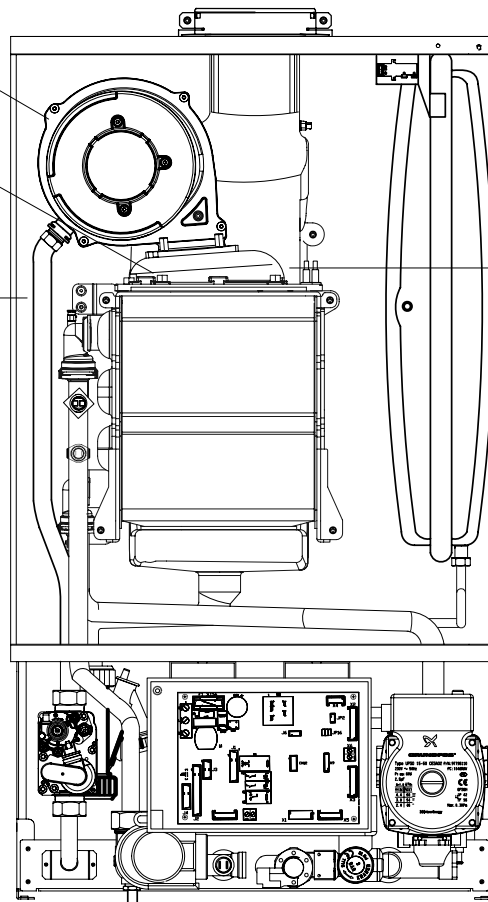


Fig.43

8.8

TO REMOVE/REPLACE THE MAIN HEAT EXCHANGER

Remove front and bottom panels (fig. 39-40).
Drain the boiler CH circuit and drain the DHW circuit. Follow the instructions to remove the burner (sect. 8.7). Pull down to remove the condense pipe on the bottom of the heat exchanger. Disconnect the flow and return pipes at the heat exchanger. Loosen the four heat exchanger securing screws and clamps then carefully ease the heat exchanger out.

CAUTION : There will be water in the heat exchanger.

Replace in reverse order, always use new O-ring seals.

8.9 TO REMOVE/REPLACE EXPANSION VESSEL (Fig.44)

Remove front and bottom panels (fig. 39-40).
 Drain the CH circuit, unscrew the fixing bracket and the nut connecting the expansion vessel. Lift up the vessel and remove.
 Replace in reverse order. Use a new gasket, taking care to ensure they are replaced correctly.

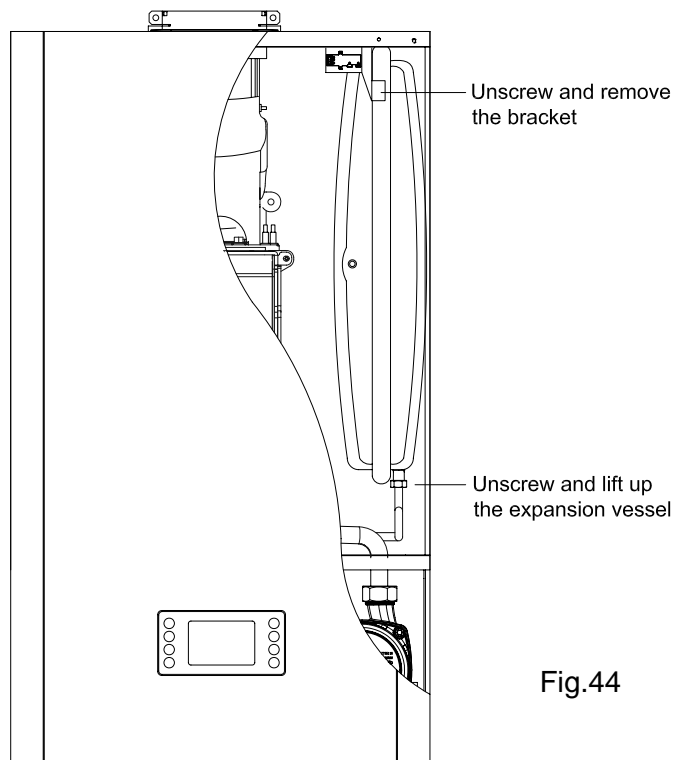


Fig.44

8.10 TO REMOVE/REPLACE GAS VALVE (Fig. 45)

Remove front and bottom panels (fig. 39-40).
 Unscrew the nut and the four screws on the bottom of the gas valve.
 Replace in reverse order.

IMPORTANT:

when the gas valve is re-fitted, **check combustion CO₂ and adjust if necessary (see section 6.9).**

8.11 TO REMOVE/REPLACE PLATE HEAT EXCHANGER (Fig. 46)

Remove front and bottom panels (fig. 39-40).
 Remove the panel control box (sect. 8.23).
 Close off the on/off valves for CH circuit and DHW circuit and drain the boiler and drain hot water from the lowest hot water tap.

Unscrew the two allen screws that connect the DHW heat exchanger and pull it out from the boiler (fig. 46).
 If necessary the pipes from the flow manifold may have to be removed for easier access. Lift up the plate heat exchanger.

Replace in reverse order.
 NOTE: Always use new O-rings.

8.12 TO REMOVE/REPLACE THE WATER PRESSURE TRANSDUCER (Fig. 45)

Remove front and bottom panels (fig. 39-40).
 Close the on/off valves for the heating circuit and drain the water at drain point (fig.36).
 Detach the wire connector, remove the securing clip.
 Replace in reverse order.


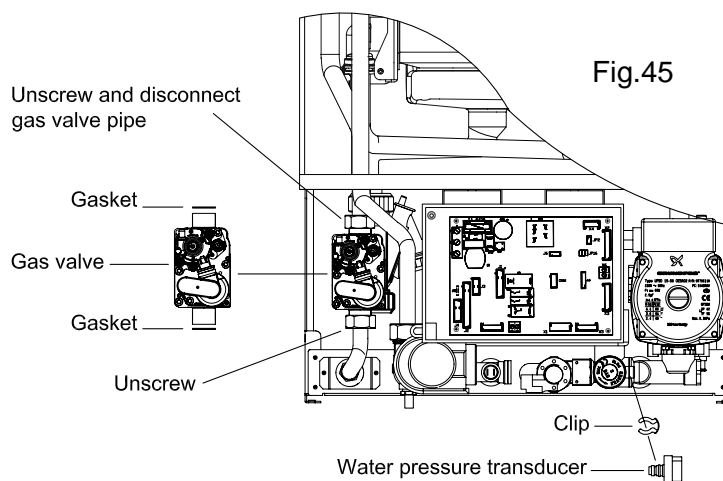


Fig.45

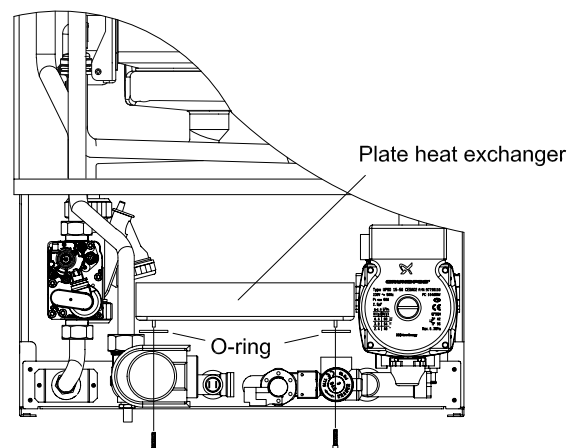

Unscrew the two allen screws and lift up the plate heat exchanger

Fig.46

8.13 TO REMOVE/REPLACE DIVERTER VALVE MOTOR (Fig. 47)

Remove front and bottom panels (fig. 39-40).
Detach the electrical plug and remove the retaining clip. Replace in reverse order.


8.14 TO REMOVE/REPLACE C.H. DIVERTER VALVE (Fig. 47)

Remove front and bottom panels (fig. 39-40).
Remove the panel control box (sect. 8.23).
Close the on/off valves for the heating circuit and drain the water at drain point (fig.36). Remove diverter valve motor switch, to allow access and unscrew the C.H.diverter valve (fig.47).
Replace in reverse order.
NOTE: Always use new O-ring.

8.15 TO REMOVE/REPLACE D.H.W. DIVERTER VALVE MECHANISM (Fig. 47)

Remove front and bottom panels (fig. 39-40).
Remove the panel control box (sect. 8.23).
Close the on/off valves for the heating circuit and drain the water at drain point (fig.36).

Remove flow detector and unscrew DHW diverter valve.
Replace in reverse order.
NOTE: Always use new O-ring.

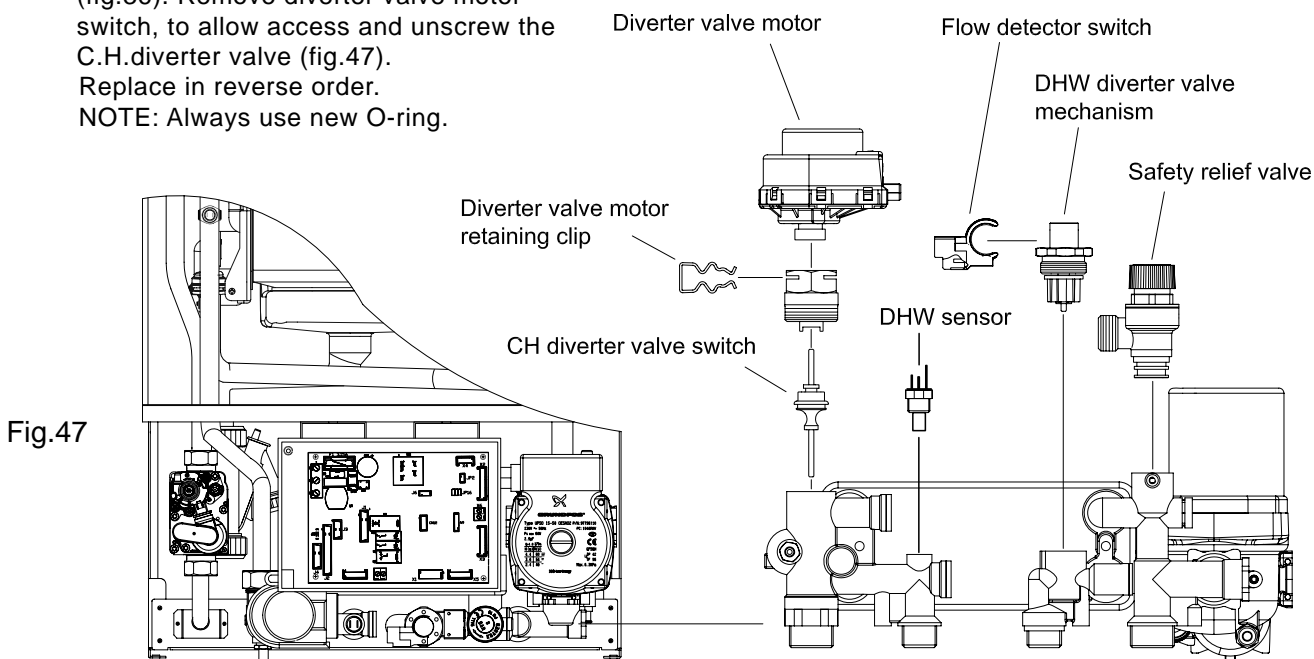


8.16 TO REMOVE/REPLACE PUMP (Fig.48)

Remove front and bottom panels (fig. 39-40).
Close the on/off valves for the heating circuit and drain the water at drain point (fig.36).
Detach the supply wire connector from the pump.
Unscrew the nut that fastens the pump to the CH pipe and remove the pump and remove the securing clip at the pump manifold.
Replace in reverse order.
NOTE: Always use new O-ring.

8.17 TO REMOVE/REPLACE AUTOMATIC AIR VENT (Fig. 48)

Remove front and bottom panels (fig. 39-40).
Remove the panel control box (sect. 8.23).
Close the on/off valves for C.H. circuit and drain the water from at drain point Fig.36.
Remove the clip and pull the automatic air vent from the pump.
Replace in reverse order.
NOTE: Always use new O-ring.

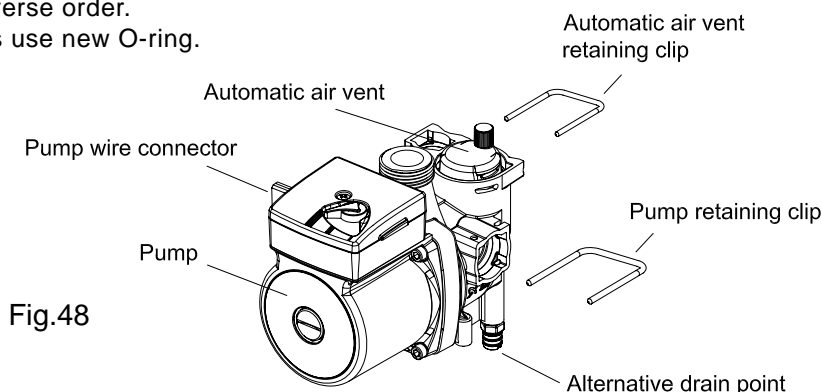

8.18 TO REMOVE/REPLACE SAFETY RELIEF VALVE (Fig. 47)

Remove front and bottom panels (fig. 39-40).
Close the on/off valves for C.H. circuit and drain the water from at drain point fig.36.
Unscrew the safety relief valve screw and pull up.
Replace in reverse order and using a new gasket.

8.19 TO REMOVE/REPLACE D.H.W. SENSOR (Fig. 47)

Remove front and bottom panels (fig. 39-40).
Close the on/off valve for the DHW circuit and drain the hot water from the lowest hot water tap.
Detach the wire connector and unscrew the sensor.
Replace in reverse order.

8.20 TO REMOVE/REPLACE C.H. FLOW AND RETURN SENSORS (Fig. 49)

Remove front panel (fig. 39).
Detach the wire connector and remove the retaining clip sensor from the pipe.
NOTE: When reconnecting ensure the correct wires go to the relevant sensor (the polarity on each one is unimportant).

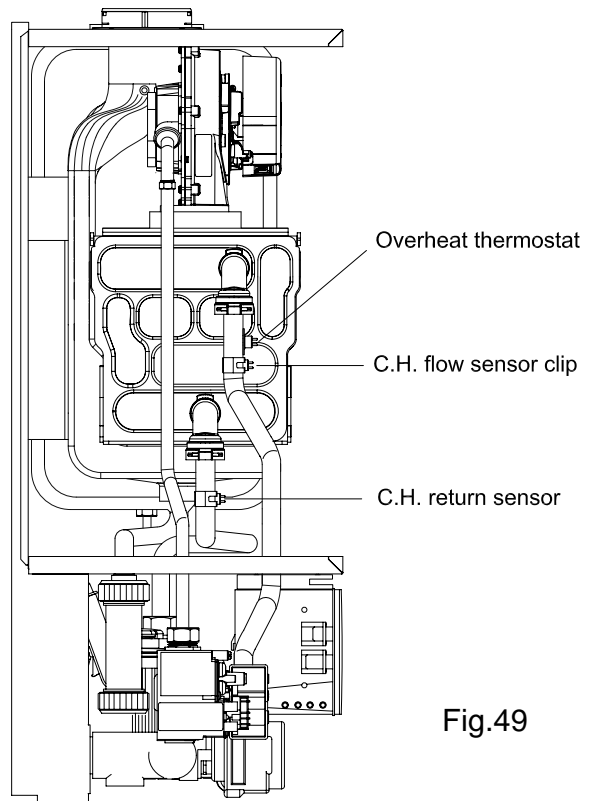


Fig.49

8.22 TO CLEAN AND REMOVE/REPLACE CONDENSING TRAP (Fig. 50)

Remove front panel (fig. 39), bottom and left side panels (fig. 40).
Remove the securing clip and pull out the plastic pipe that connects the condensing trap at the heat exchanger.
Unscrew the nut that fastens the condensing trap to the depression chamber and remove it.
If the side panel can not be removed then remove the gas valve (see sec 8.10) and continue with the above instructions.
Replace in reverse order.

8.21 TO REMOVE/REPLACE FLUE SENSOR (Fig. 3 item 22)

Remove front panel (fig. 39).
Detach the wire connector and rotate the sensor.
Replace in reverse order.

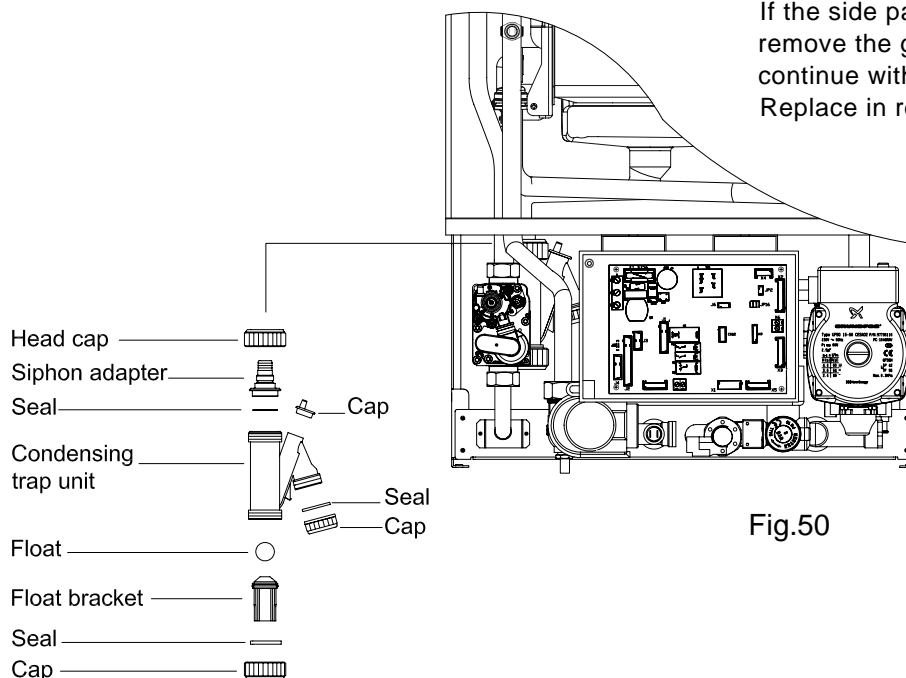


Fig.50

8.23 TO REMOVE PANEL CONTROL BOX (Fig. 51,52,53).

Remove front panel (fig. 39).
Pull forward the control panel box with both hands until it is slightly out of the boiler. As doing so move the box over to the left while still pulling it forward until the control box becomes free.
Lift and fix the box on the depression chamber with the service retaining clips (fig. 53).
This will allow free access to lower part of the boiler.

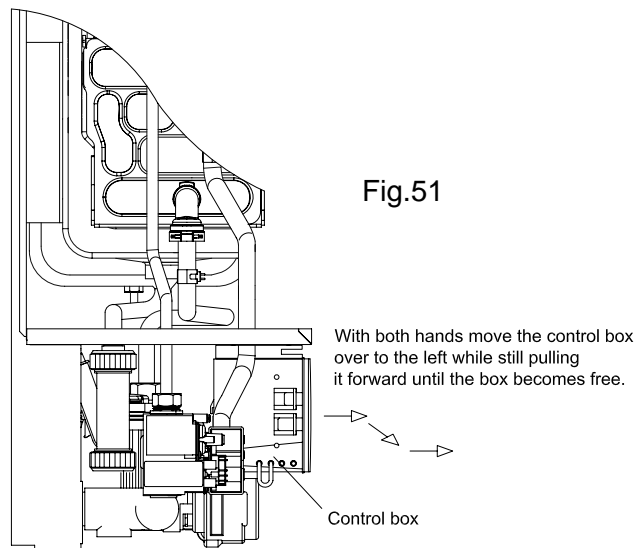


Fig.51

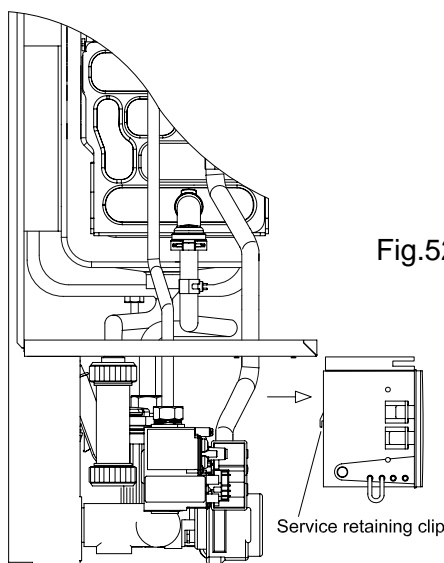


Fig.52

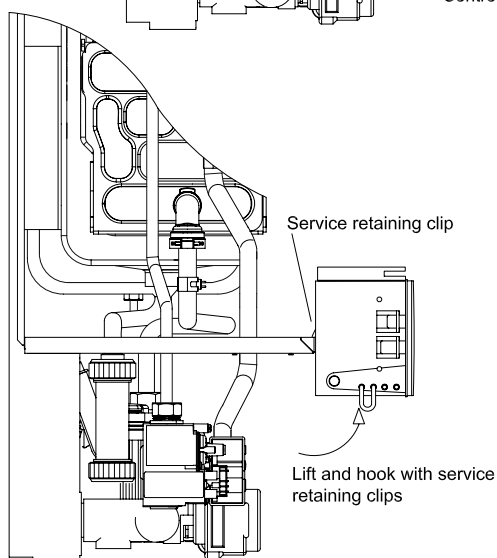


Fig.53

8.27 EXTERNAL CONTROL CONNECTION (Fig. 54)

Remove front panel (fig. 39).
Remove the external wire link on the panel control box.
Replace with external wire controls.
(These must be volt free).

8.24 TO REMOVE THE INSTRUMENT PANEL (Fig. 54).

Remove front panel (fig. 39).
Push the four retaining latches and remove the front of the panel box (fig. 54).

8.25 TO REMOVE/REPLACE CONTROL BOARD (Fig.55).

Remove front panel (fig. 39).
Remove the instrument panel (sect. 8.24).
Detach all connectors from control board, unscrew the four screws and lift up.
Replace in reverse order (fig. 55).

8.26 TO REMOVE/REPLACE DIGITAL DISPLAY BOARD.

Remove the front panel (fig. 39).
Remove the instrument panel (8.24).
Detach the connectors and unscrew the four screws.
Replace in reverse order.

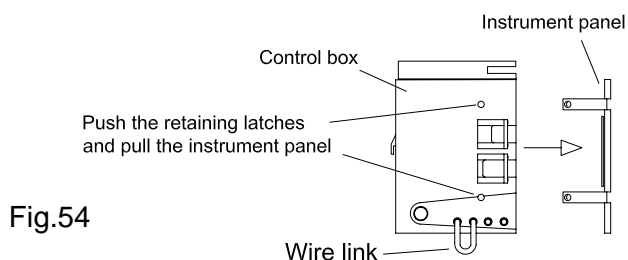


Fig.54


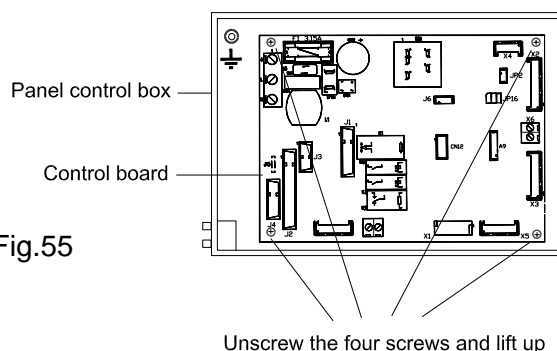


Fig.55

9 FAULT FINDING CENTRAL HEATING

Before trying to operate the boiler make sure that: all gas supply cocks are open and the gas supply has been purged of air. The heating system pressure is at least 1 bar min to 1.5 bar max, select winter position on the digital display and set the central heating temperature to maximum. (sect. 1.5).


Ensure external controls are calling for heat (room thermostat/ digital clock) and check the following appliance operations:

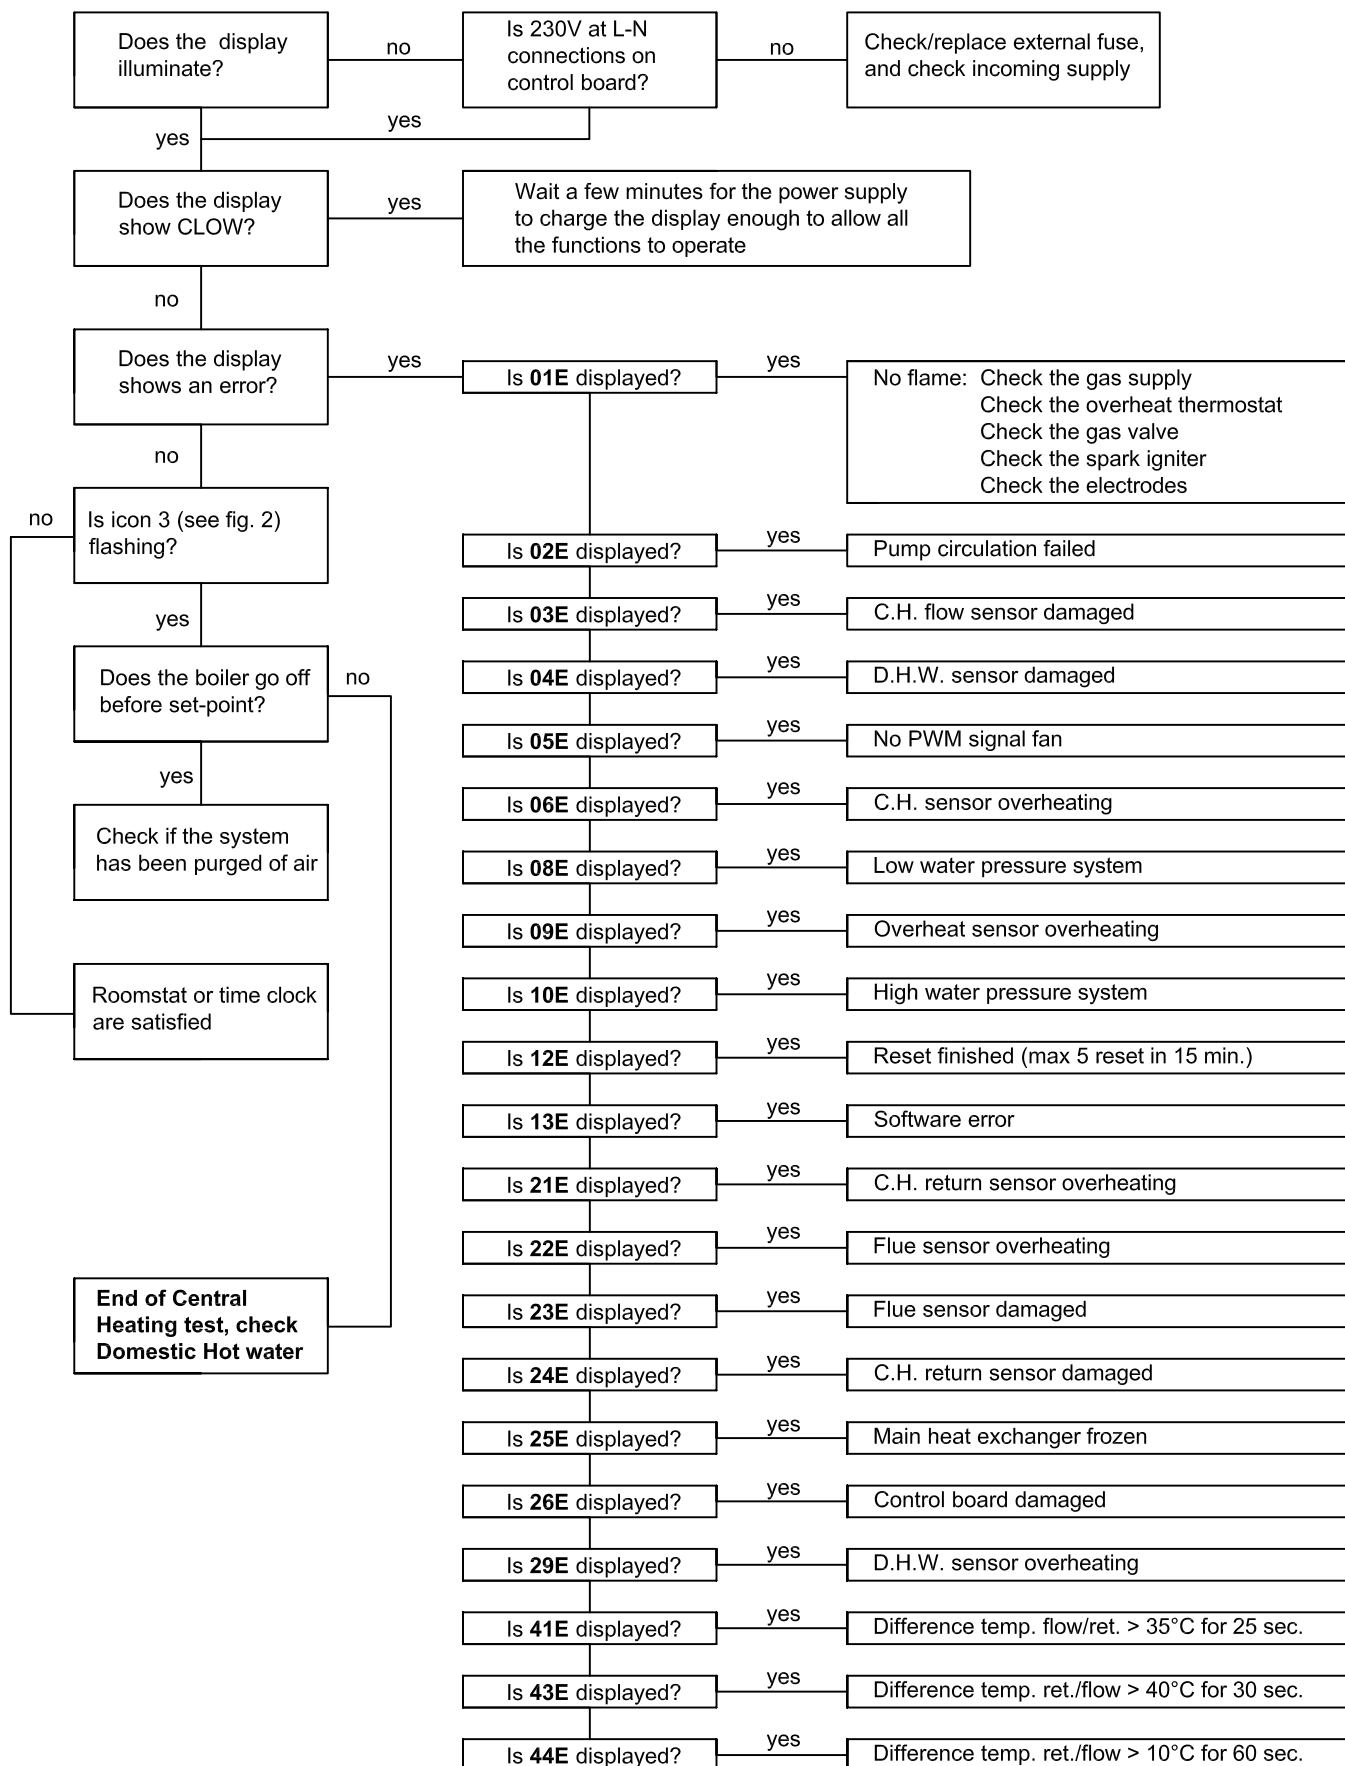

9.1 FAULT FINDING DOMESTIC HOT WATER

Before continuing see section 9, and after selecting the summer position on the digital display and setting the domestic hot water temperature to maximum (sect.1.5).

Open the domestic hot tap and check the following appliance operations:

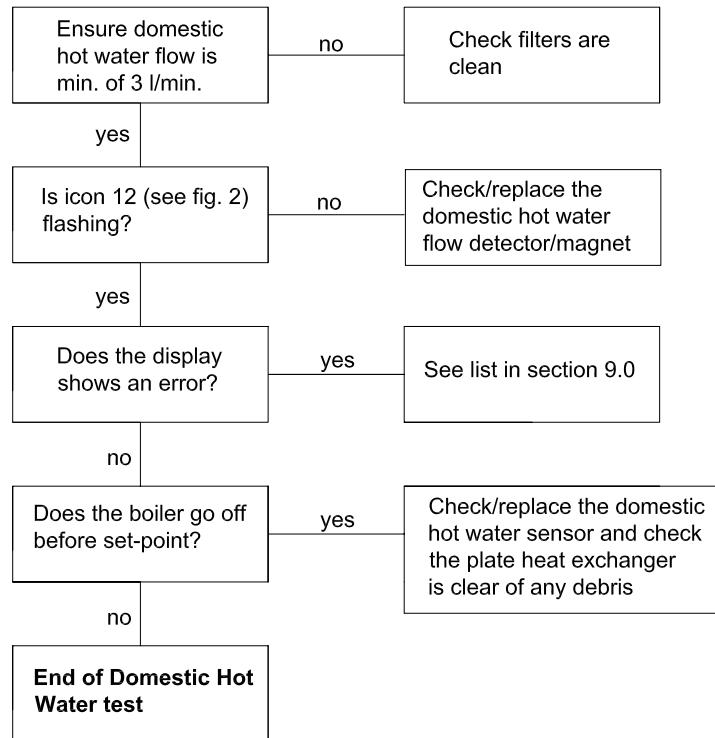

10 ELECTRICAL SYSTEM DIAGRAM

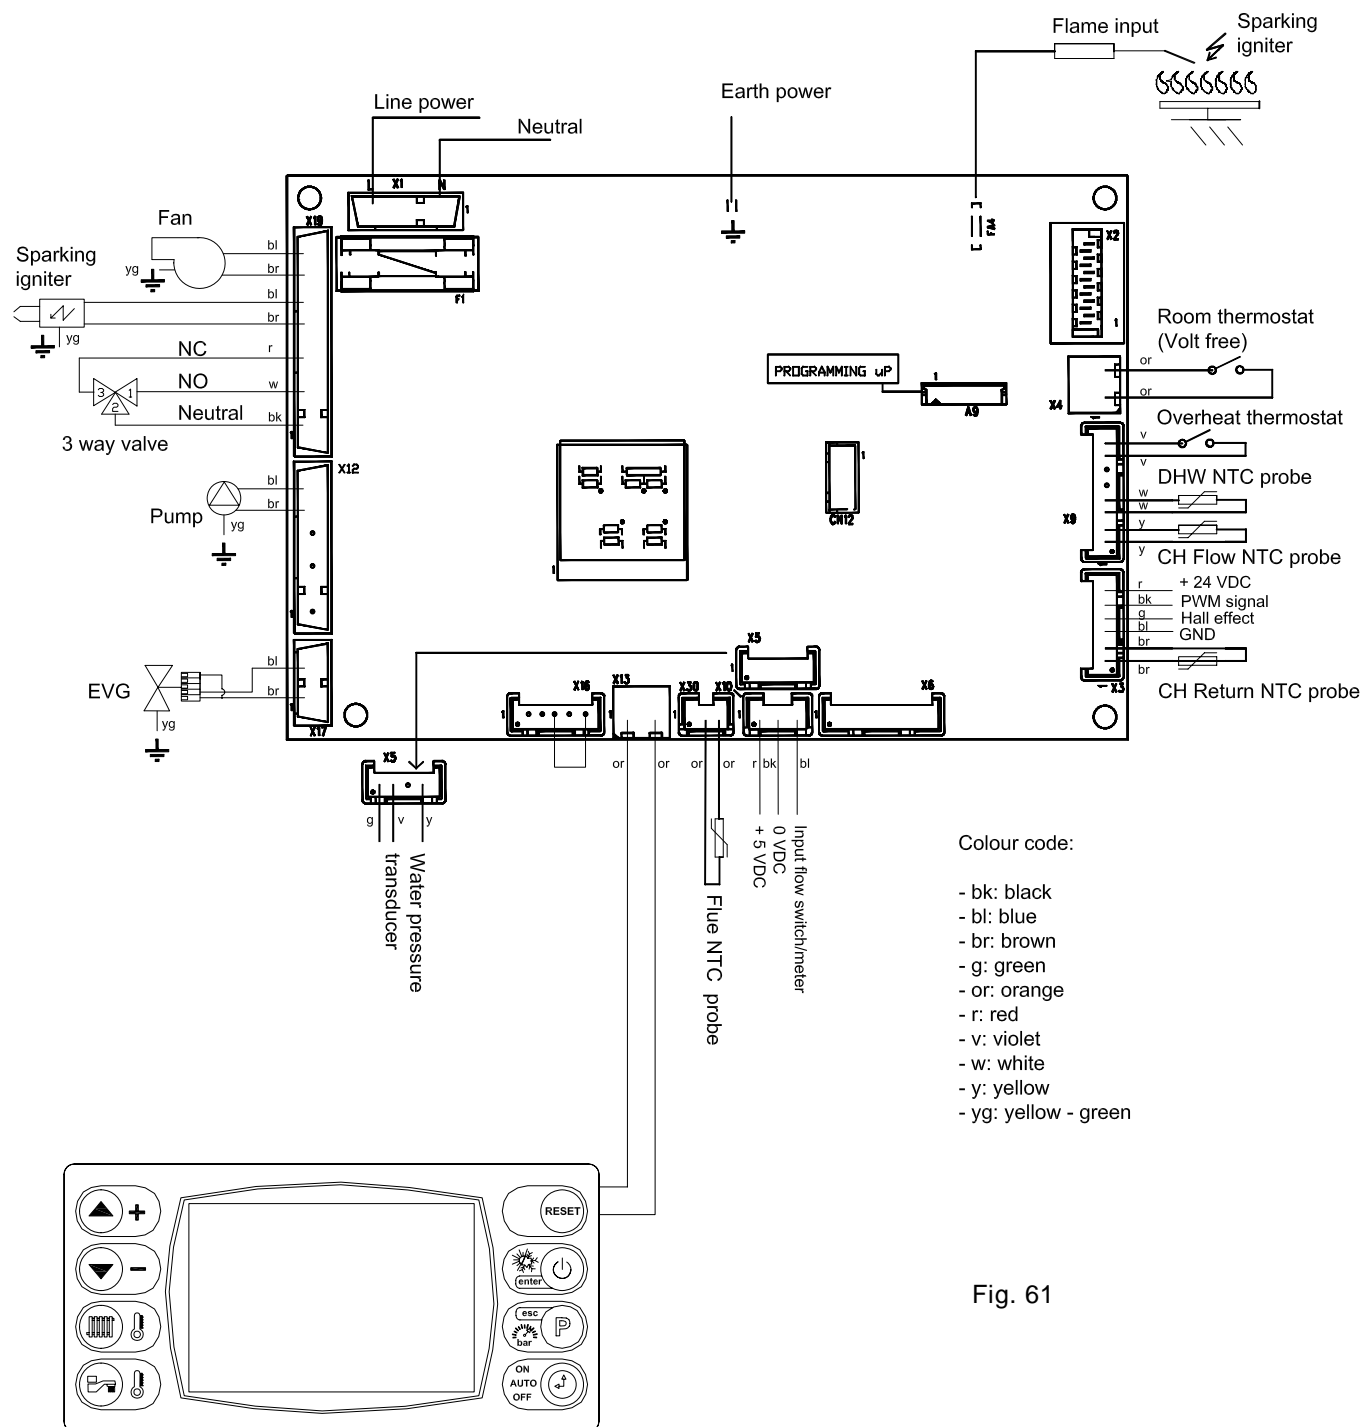


Fig. 61

11 SPARE PARTS

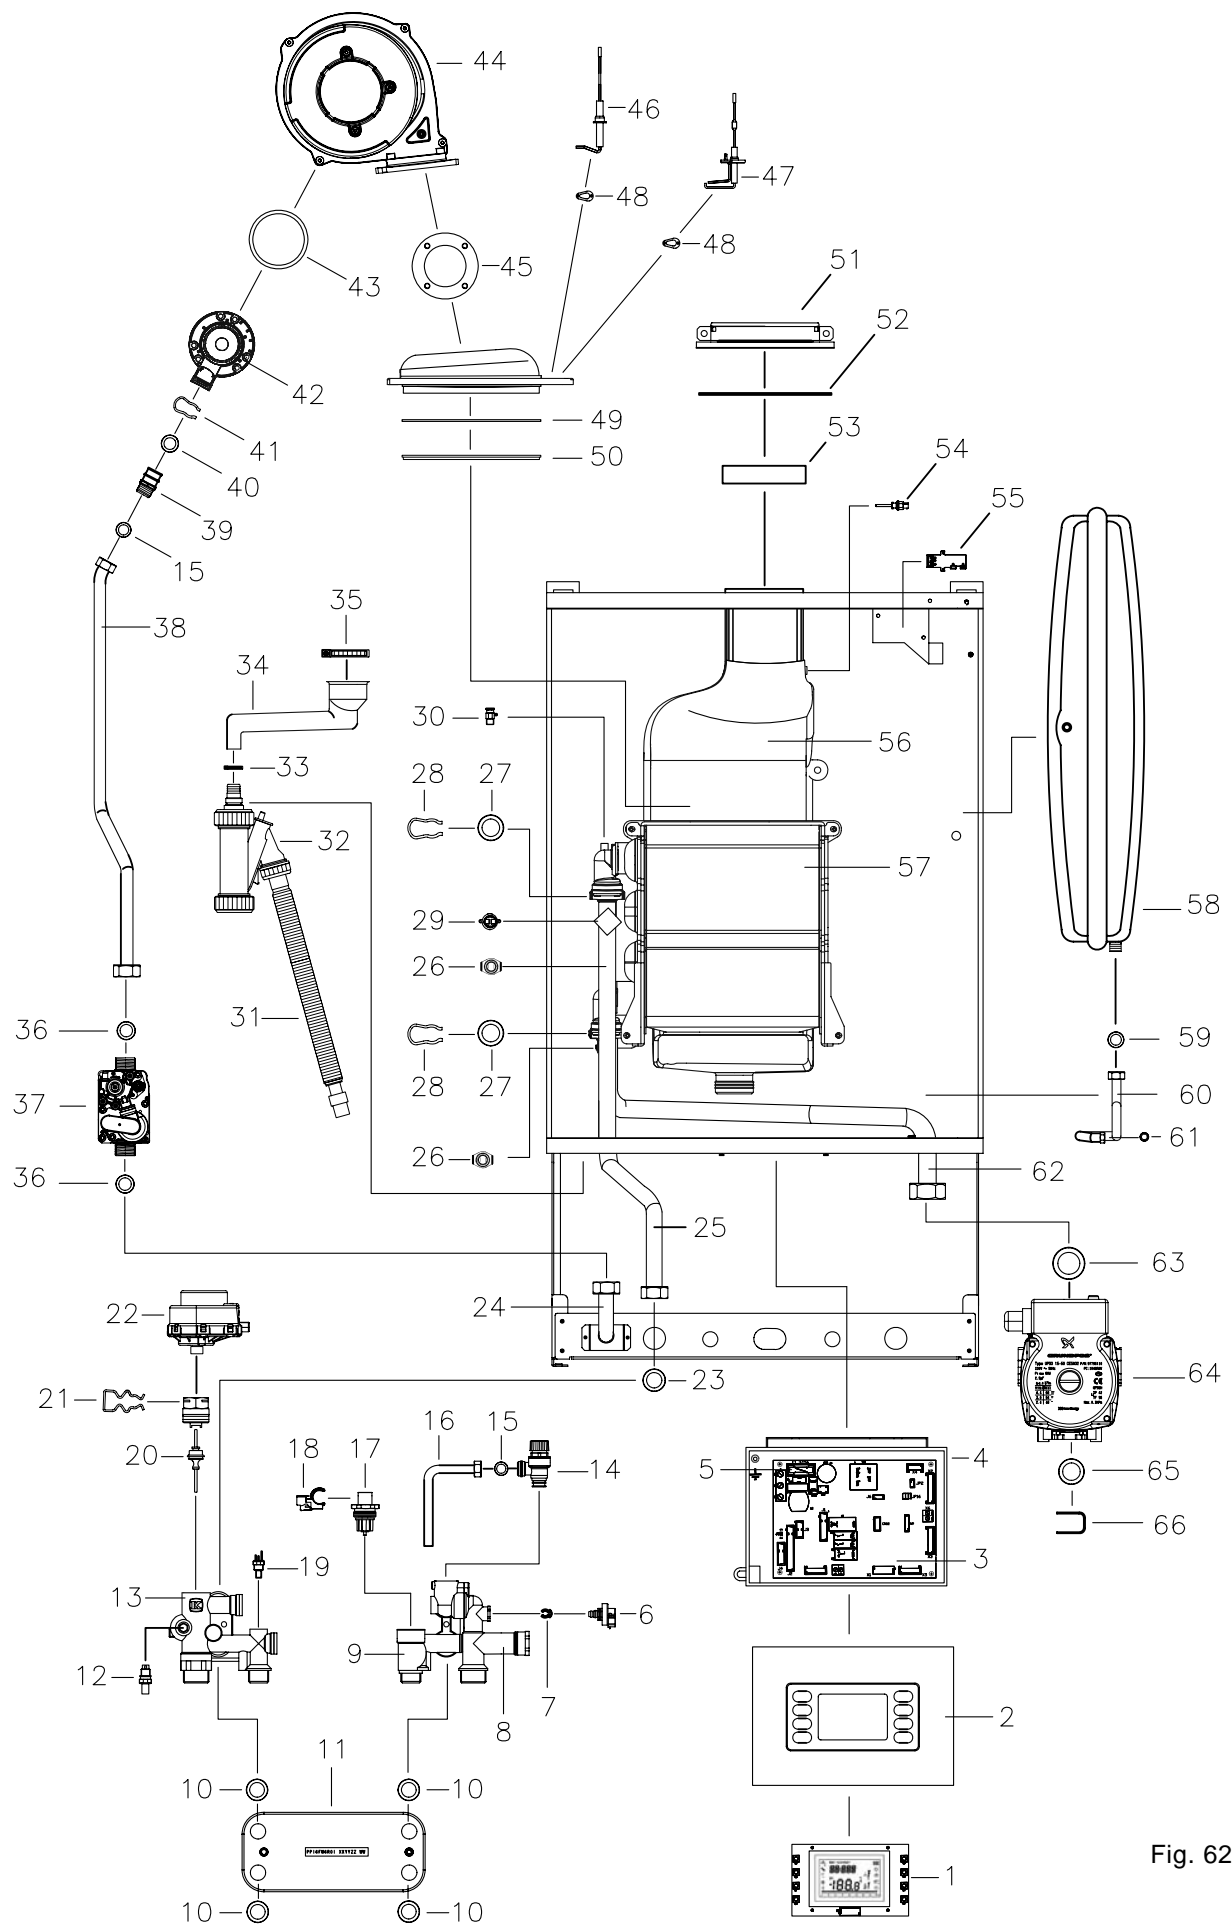


Fig. 62

THE WHITE BOILER COMPANY WH 80/90 (T)
HIGH EFFICIENCY CONDENSING COMBINATION BOILER

SHORT LIST OF SPARE PARTS AND FLUE ACCESSORIES

Pos.	Part. No.	G.C. Part. No.	Description
1	CIR150100		Digital display
2	PAN150050		Instrument panel
3	CIR150050		Control board
4	SCA110051		Instrument panel box
5	FUS010150		Internal fuse 3.15 A
6	TRA15010		Water pressure transducer
7	FOR150250		Water pressure transducer clip
8	GRU150100		Return manifold
9	GRU150100		Turbine manifold
10	ORI110450		Plate heat exchanger O-ring
11	SCA150150		WH 80 plate heat exchanger
11.1	SCA150200		WH 90 plate heat exchanger
12	VAL150250		Drain valve
13	GRU150050		Flow manifold
14	VAL150100		Safety relief valve
15	5018025		1/2" gasket (GUA010200)
16	TUB150480		Safety relief valve pipe
17	TUR150050		Turbine
18	RIV150050		Flow detector switch
19	TER150050		D.H.W. sensor
20	OTT150050		Diverter valve by-pass
21	FOR150050		Diverter valve motor clip
22	MOT150050		Diverter valve motor
23	5018030		3/4" gasket (GUA010250)
24	TUB150150		Gas valve inlet pipe
25	TUB150070		Flow pipe
26	SON110100		C.H. flow and return sensors (SON110150)
27	ORI150100		Primary heat exchanger O-ring
28	FOR150050		Primary heat exchanger clip
29	TER080050		Overheat thermostat (TER060150)
30	VAL150200		Manual air vent
31	TUB110150		Flexible condensing pipe (TUB110300)
32	RAC110050		Condensing trap
33	FAS150050		Condensing trap pipe hose clamp 12-22
34	TUB150050		Condensing pipe
35	FAS150100		Condensing trap hose clamp 30-45
36	GUA010260		3/4" gas valve gasket
37	VAL150150		Gas valve
38	TUB150200		Gas valve outlet pipe
39	RAC150050		Air/gas mixer junction
40	ORI150050		Air/gas mixer junction O-ring

Plume Management Kit (see sect. 5.6)

Part. No.	Description
TER110101	1 metre high plume kit
CUR110050	45° flue exhaust deflection bend
CUR11010	90° flue exhaust deflection bend

Accessories concentric flue 60/100 (see sect. 5.12 - Table 7)


Part. No.	Description
PR5094110A	Straight flue header / sample point 60/100
PRFE	Flue Extension 60/100 L1000
PR45FBI	45° bend 60/100
PR90FBI	90° elbow bend 60/100
PR5023016	Horizontal terminal 60/100
TER110200	Vertical flue Terminal

Accessories concentric flue 80/125 (see sect. 5.18)

Part. No.	Description
PR5094110A	Straight flue header / sample point 60/10
PRO110300	Flue Extension 80/125 L1000
RID110050	125/80 to 100/60 Flue reducer
CUR110250	45° bend 80/125
CUR110300	90° elbow bend 80/125
TER010050	Horizontal Flue Terminal 80/125
TER110200	Vertical Flue Terminal 80/125
TEG060050	Flashing sleeve/slate

Accessories eccentric flue 80/80 (see sect. 5.13 - 5.14 - 5.15 - 5.16 - 5.17)

Part. No.	Description
SDO110100	Twin flue header F80/80
PRO110200	Straight pipe L1000 80
CUR110150	90° elbow bend 80
CUR110250	45° bend 80
GRI110050	Air inlet terminal 80
GRI110100	Exhaust terminal 80
TER060110	Vertical eccentric flue terminal



THE WHITE BOILER COMPANY

A Ravenheat Group Company

Chartists Way, Morley, Leeds, LS27 9ET

Telephone: 0113 252 7007

Fax: 0113 238 0229

Website: www.ravenheat.co.uk

E-mail: sales@ravenheat.co.uk

Ravenheat reserves the right to make changes and improvements in our products which may affect the accuracy of the information contained in this leaflet.

12 BENCHMARK COMMISSIONING CHECKLIST DETAILS

Boiler	Page	Page
Make and model	14/17	Burner operating pressure.....n/a
Appliance serial no. on data badge.....Left side panel		Central heating flow temp..... measure and record
Controls		Central heating return temp.....measure and record
Temperature control to heating.....12		For combination boilers only
Temperature control to hot water.....12		Scale reducer.....25
Heating zone valves.....n/a		Hot water mode
Auto by-pass.....22		Max. operating burner pressure....measure and record
Boiler interlock.....22		Max. operating water pressure.....measure and record
		Cold water inlet temp..... measure and record
For all boilers		Hot water temp..... measure and record
Flushing to BS7593.....24		Water flow rate at max. setting.....measure and record
Inhibitor.....25		For condensing boiler only
Central heating mode		Condensate drain.....38/39
Heat input.....to be calculated		For all boilers: complete, sign & hand over to the customer.

**NOTE TO THE INSTALLER: COMPLETE
THE BENCHMARK COMMISSIONING
CHECKLIST AND LEAVE THESE
INSTRUCTIONS WITH APPLIANCE**



For assistance please call The White Boiler Company technical helpline:
telephone: 0113 252 7007
fax: 0113 238 0229
e-mail: sales@ravenheat.co.uk

Code Of Practice

For the installation, commissioning and servicing
of domestic heating and hot water products

Benchmark places responsibilities on both manufacturers and installers.*
The purpose is to ensure that customers** are provided with the correct equipment for their needs, that it is installed, commissioned and serviced in accordance with the manufacturer's instructions by competent persons and that it meets the requirements of the appropriate Building Regulations. Installers are required to carry out work in accordance with the following:

Standards of Work

- Be competent and qualified to undertake the work required.
- Install, commission, service and use products in accordance with the manufacturer's instructions provided.
- Ensure that where there is responsibility for design work, the installation is correctly sized and fit for purpose.
- Meet the requirements of the appropriate Building Regulations. Where this involves notifiable work be a member of a Competent Persons Scheme or confirm that the customer has notified Local Authority Building Control (LABC), prior to work commencing.
- Complete all relevant sections of the Benchmark Checklist/Service Record when carrying out commissioning or servicing of a product or system.
- Ensure that the product or system is left in a safe condition and, whenever possible, in good working order.
- Highlight to the customer any remedial or improvement work identified during the course of commissioning or servicing work.
- Refer to the manufacturer's helpline where assistance is needed.
- Report product faults and concerns to the manufacturer in a timely manner.

Customer Service

- Show the customer any identity card that is relevant to the work being carried out prior to commencement or on request.
- Give a full and clear explanation/demonstration of the product or system and its operation to the customer.
- Hand over the manufacturer's instructions, including the Benchmark Checklist, to the customer on completion of an installation.
- Obtain the customer's signature, on the Benchmark Checklist, to confirm satisfactory demonstration and receipt of manufacturer's instructions.
- Advise the customer that regular product servicing is needed, in line with manufacturers' recommendations, to ensure that safety and efficiency is maintained.
- Respond promptly to calls from a customer following completion of work, providing advice and assistance by phone and, if necessary, visiting the customer.
- Rectify any installation problems at no cost to the customer during the installer's guarantee period.



*The use of the word "installer" is not limited to installation itself and covers those carrying out installation, commissioning and/or servicing of heating and hot water products, or the use of supporting products (such as water treatment or test equipment).


**Customer includes householders, landlords and tenants.

© Heating and Hotwater Industry Council (HHIC)

www.centralheating.co.uk

INSTALLER NOTIFICATION GUIDELINES

A change to Building Regulations (England and Wales) requires the installer to notify when installing a heating appliance, as from 1st April 2005.

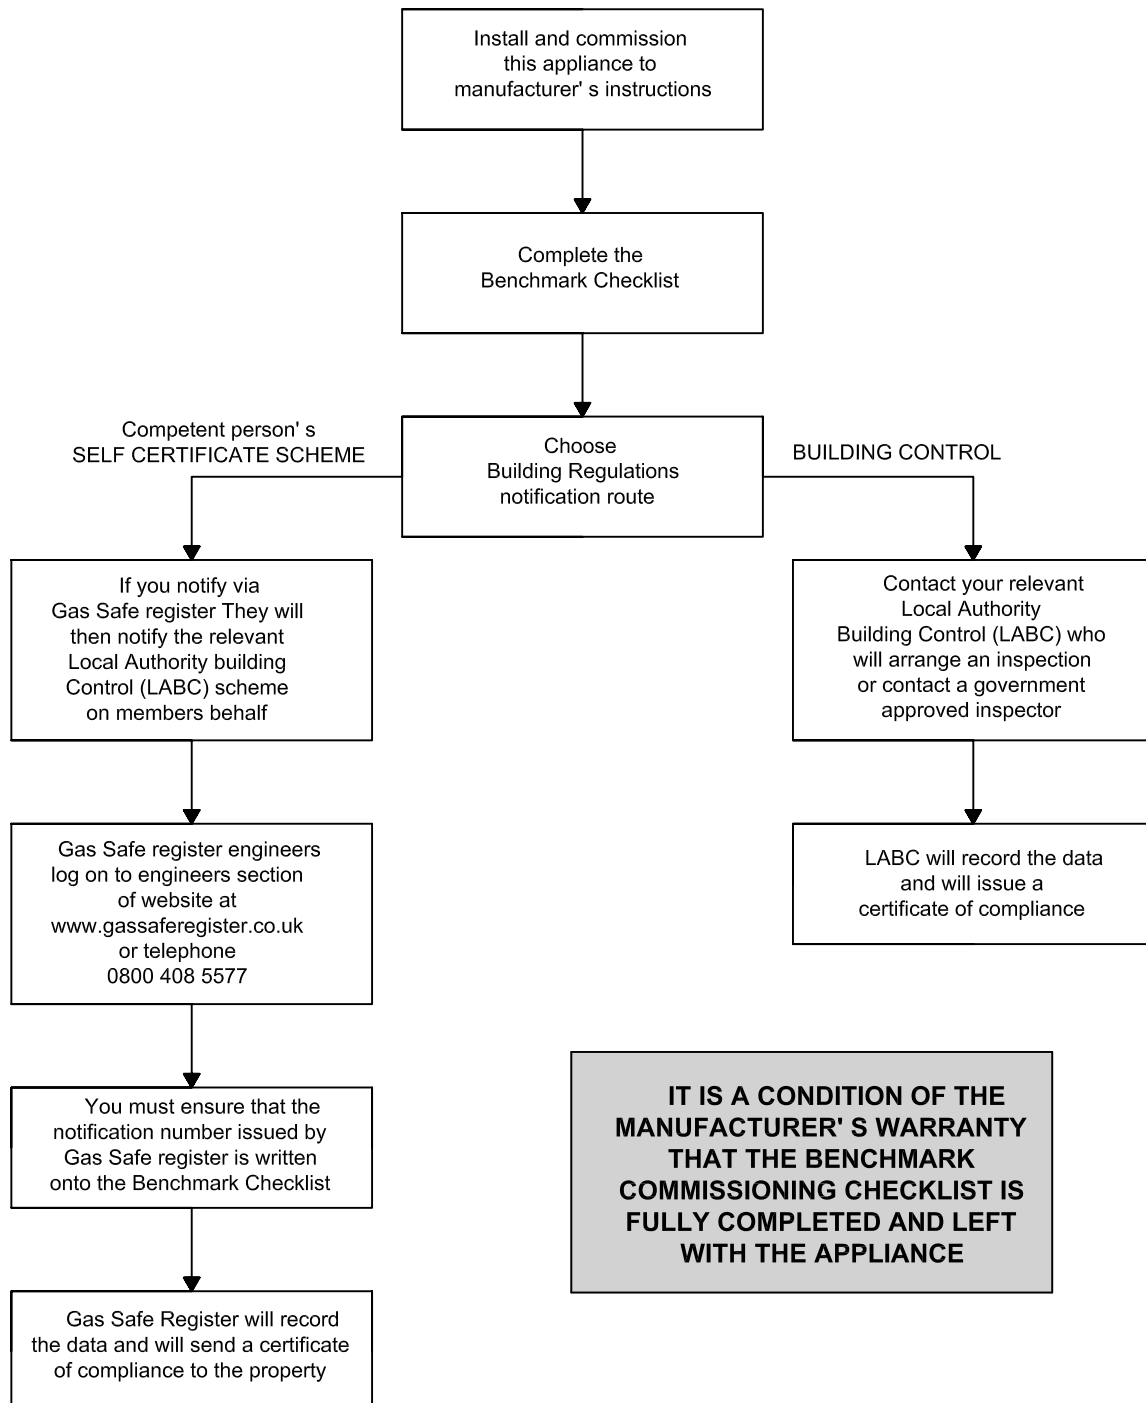

Benchmark Commissioning and Servicing Section

It is a requirement that the boiler is installed and commissioned to the manufacturers instructions and the data fields on the commissioning checklist completed in full.

To instigate the boiler guarantee the boiler needs to be registered with the manufacturer within one month of the installation.

To maintain the boiler guarantee it is essential that the boiler is serviced annually by a Gas Safe registered engineer who has been trained on the boiler installed. The service details should be recorded on the Benchmark Service Interval Record and left with the householder.



www.centralheating.co.uk

FLOWCHART FOR CO LEVEL AND COMBUSTION RATIO CHECK ON COMMISSIONING A CONDENSING BOILER

Important Preliminary Information on Checks

The air gas ratio valve is factory-set and must not be adjusted DURING COMMISSIONING.

If the boiler requires conversion to operate with a different gas family (e.g. conversion from natural gas to LPG) separate guidance is provided with the conversion kit supplied and this must be followed.

PRIOR TO CO LEVEL AND COMBUSTION RATIO CHECK

The installation instructions must have been followed, gas type verified and gas supply pressure / gas rate checked as required prior to commissioning.

As part of the installation process, ESPECIALLY WHERE A FLUE HAS BEEN FITTED BY PERSONS OTHER THAN THE BOILER INSTALLER, visually check the integrity of the whole flue system to confirm that all components are correctly assembled, fixed and supported. Check that maximum flue lengths have not been exceeded and all guidance has been followed (e.g. Gas Safe Register Technical Bulletin (TB) 008 where chimney/flues are in voids).

The ECGA should be of the correct type, as specified by BS 7967.

Prior to its use, the ECGA should have been maintained and calibrated as specified by the manufacturer. The installer must have the relevant competence for use of the analyser.

Check and zero the analyser IN FRESH AIR in accordance with the analyser manufacturer's instructions.

KEY:

CO = carbon monoxide

CO₂ = carbon dioxide

O₂ = oxygen


Combustion Ratio = The CO reading measured in ppm divided by the CO₂ reading first converted to ppm

ppm = parts per million

Setting to Minimum Rate:

- 1 - Put the boiler in Test mode function (see section 6.16)
- 2 - Create a CH demand by ensuring that the system controls are requesting heat and the boiler is set in the Winter Position.
- 3 - Press the arrow down button to set the minimum fan speed.
- 5 - The function is enabled for maximum 15 minutes, press reset to esc test mode.

12.1 ANALYSER CHECK LIST

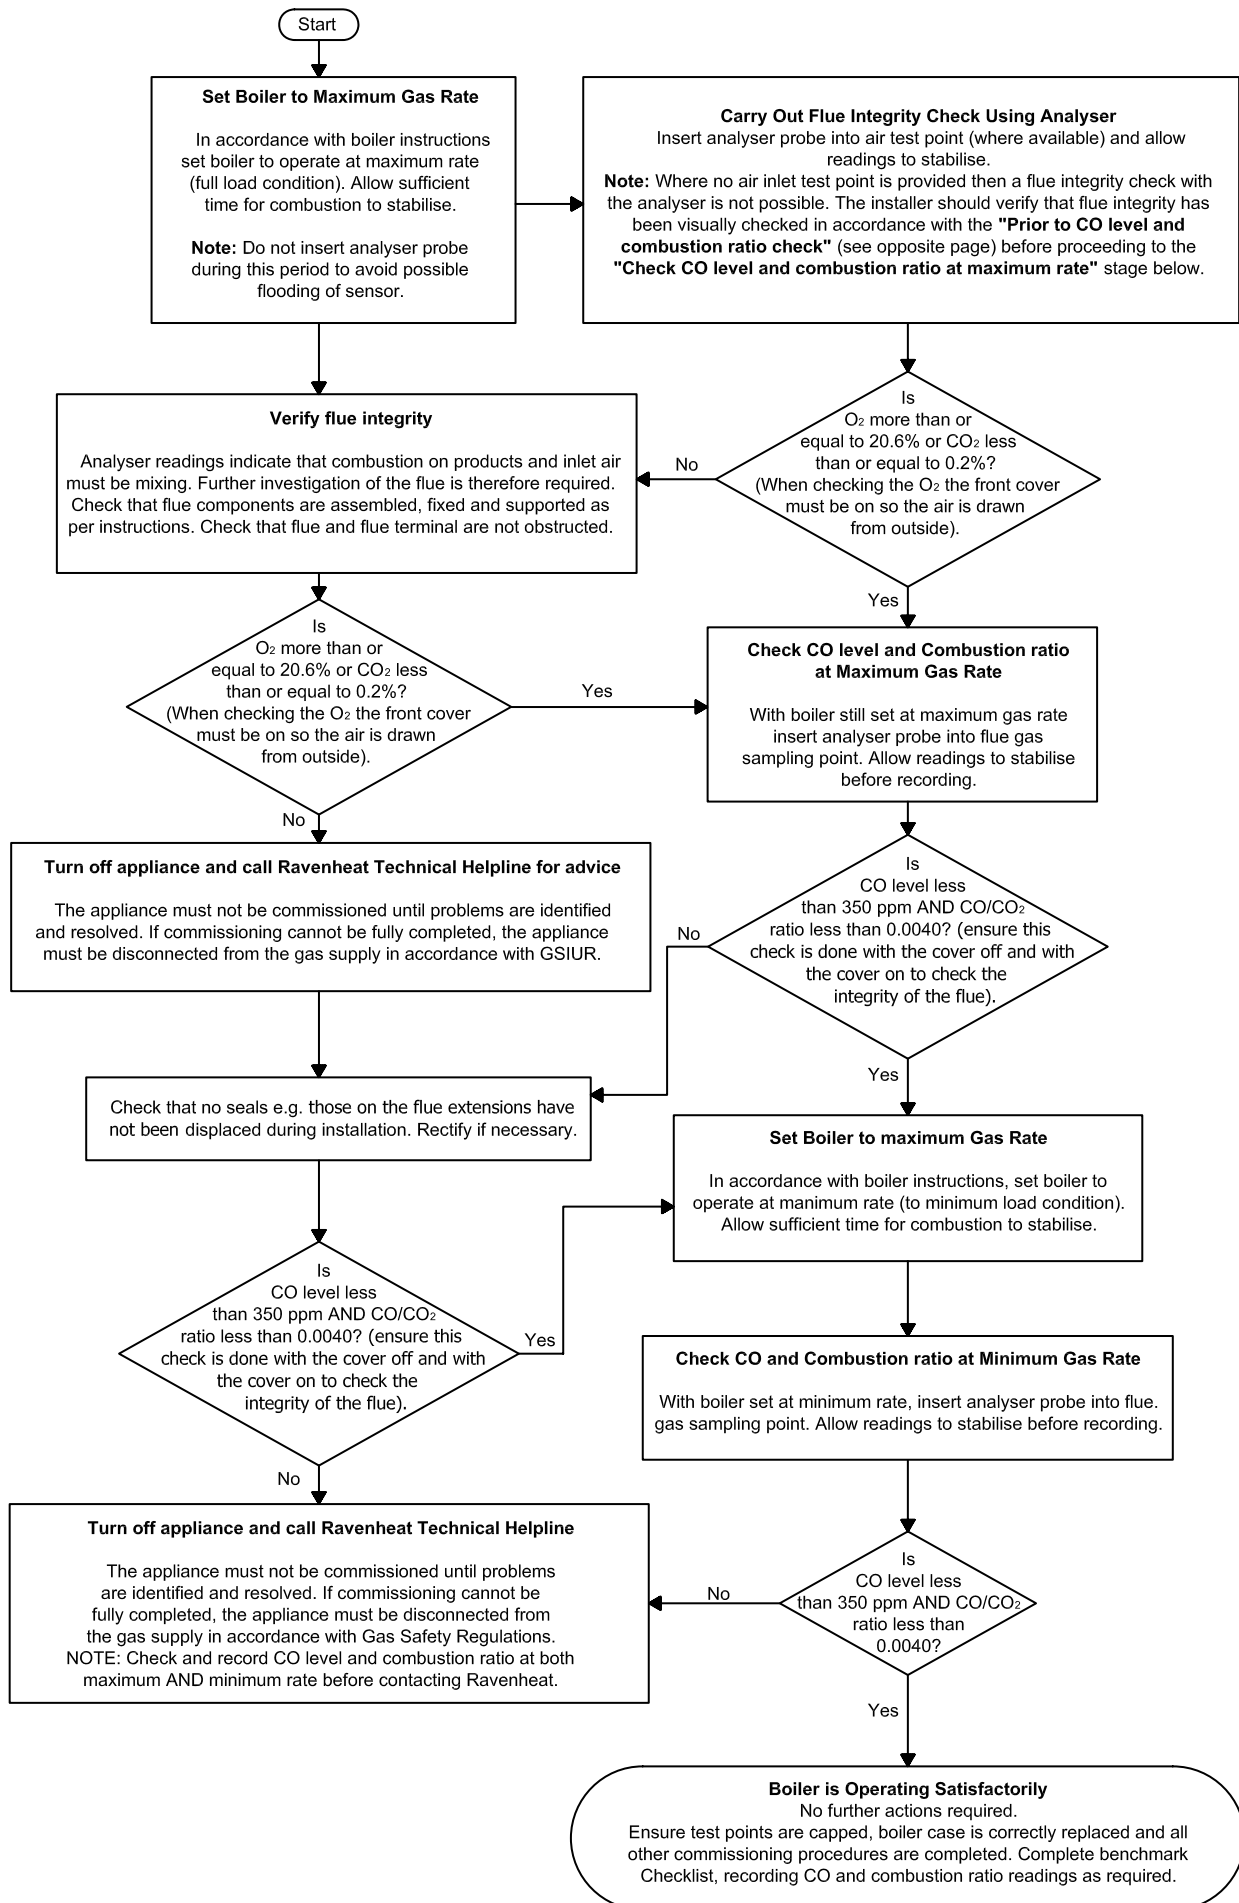

GAS BOILER SYSTEM COMMISSIONING CHECKLIST

This Commissioning Checklist is to be completed in full by the competent person who commissioned the boiler as a means of demonstrating compliance with the appropriate Building Regulations and then handed to the customer to keep for future reference.

Failure to install and commission according to the manufacturer's instructions and complete this Benchmark Commissioning Checklist will invalidate the warranty. This does not affect the customer's statutory rights.

Customer name:	Telephone number:
Address:	
Boiler make and model:	
Boiler serial number:	
Commissioned by (PRINT NAME):	Gas Safe register number:
Company name:	Telephone number:
Company address:	
Commissioning date:	
To be completed by the customer on receipt of a Building Regulations Compliance Certificate*	
Building Regulations Notification Number (if applicable):	

CONTROLS (tick the appropriate boxes)			
Time and temperature control to heating	Room thermostat and programmer/timer		Programmable room thermostat
	Load/weather compensation		Optimum start control
Time and temperature control to hot water	Cylinder thermostat and programmer/timer		Combination Boiler
Heating zone valves	Fitted		Not required
Hot water zone valves	Fitted		Not required
Thermostatic radiator valves	Fitted		Not required
Automatic bypass to system	Fitted		Not required
Boiler interlock			Provided

ALL SYSTEMS			
The system has been flushed and cleaned in accordance with BS7593 and boiler manufacturer's instructions			Yes
What system cleaner was used?			
What inhibitor was used?	Quantity	litres	
Has a primary water system filter been installed?	Yes	No	

CENTRAL HEATING MODE measure and record:			
Gas rate	m ³ /hr	OR	ft ³ /hr
Burner operating pressure (if applicable)	mbar	OR Gas inlet pressure	mbar
Central heating flow temperature	°C		
Central heating return temperature	°C		

COMBINATION BOILERS ONLY			
Is the installation in a hard water area (above 200ppm)?	Yes	No	
If yes, and if required by the manufacturer, has a water scale reducer been fitted?	Yes	No	
What type of scale reducer has been fitted?			
DOMESTIC HOT WATER MODE Measure and Record:			
Gas rate	m ³ /hr	OR	ft ³ /hr
Burner operating pressure (at maximum rate)	mbar	OR Gas inlet pressure at maximum rate	mbar
Cold water inlet temperature	°C		
Hot water has been checked at all outlets	Yes	Temperature	°C
Water flow rate	l/min		

CONDENSING BOILERS ONLY	
The condensate drain has been installed in accordance with the manufacturer's instructions and/or BS5546/BS6798	Yes

ALL INSTALLATIONS					
Record the following:	At max. rate:	CO	ppm	AND	CO/CO ₂ Ratio
	At min. rate: (where possible)	CO	ppm	AND	CO/CO ₂ Ratio
The heating and hot water system complies with the appropriate Building Regulations					Yes
The boiler and associated products have been installed and commissioned in accordance with the manufacturer's instructions					Yes
The operation of the boiler and system controls have been demonstrated to and understood by the customer					Yes
The manufacturer's literature, including Benchmark Checklist and Service Record, has been explained and left with the customer					Yes

Commissioning Engineer's Signature
Customer's Signature
(To confirm satisfactory demonstration and receipt of manufacturer's literature)

*All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.



SERVICE RECORD

It is recommended that your heating system is serviced regularly and that the appropriate Service Interval Record is completed.

Service Provider

Before completing the appropriate Service Record below, please ensure you have carried out the service as described in the manufacturer's instructions. Always use the manufacturer's specified spare part when replacing controls.

SERVICE 01		Date:			
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 02		Date:			
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 03		Date:			
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 04		Date:			
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 05		Date:			
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 06		Date:			
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 07		Date:			
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 08		Date:			
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 09		Date:			
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

SERVICE 10		Date:			
Engineer name:					
Company name:					
Telephone No:					
Gas safe register No:					
Record:	At max. rate:	CO	ppm	AND	CO ₂ %
	At min. rate: (Where Possible)	CO	ppm	AND	CO ₂ %
Comments:					
Signature					

*All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.

THE WHITE BOILER COMPANY

Instructions for Use Installation and Servicing

To be left with the user

HIGH EFFICIENCY

CONDENSING

COMBINATION BOILER

WH 100 (T)

WH 130 (T)

Natural Gas (G20) I_{2H} - II_{2H3+}
G.C. No.

LPG (G30-G31) I₃₊ - II_{2H3+}
G.C. No.



**Listed by The United Kingdom Water
Fitting Byelaws Scheme**



CE 86



Technical and illustrative data are not binding and can be modified without prior notice.
The descriptions and illustrations in the present booklet are for guideline purposes only.

THE WHITE BOILER COMPANY

a Ravenheat Group Company


CHARTISTS WAY, MORLEY, LEEDS, LS27 9ET

TEL. 0044 (0)113 252 7007 - FAX: 0044 (0)113 238 0229

Website : www.ravenheat.co.uk - E-mail : sales@ravenheat.co.uk

INSTALLER NOTIFICATION GUIDELINES

A change to Building Regulations (England and Wales) requires the installer to notify when installing a heating appliance, as from 1st April 2005.

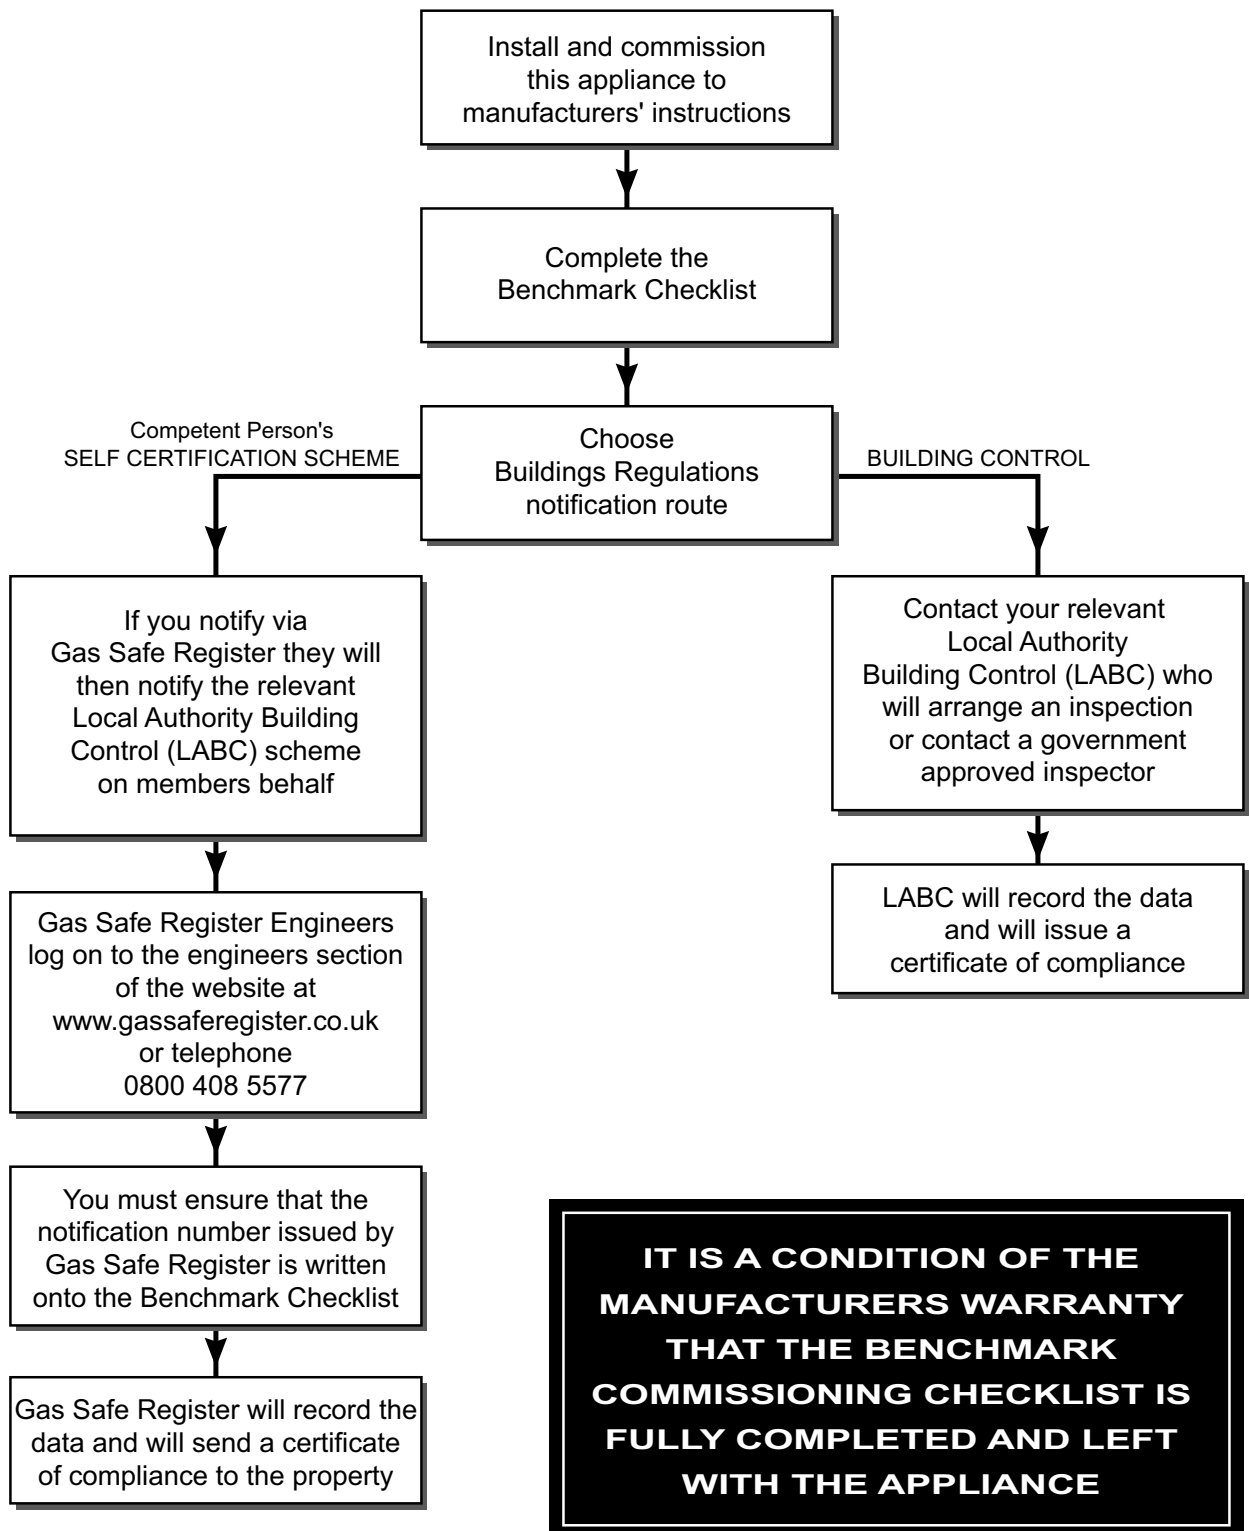

HIGH EFFICIENCY CONDENSING BOILER FOR CENTRAL HEATING AND DOMESTIC HOT WATER

This new super high efficient turbo-modulating boiler is designed to meet domestic hot water and central heating requirements at super high efficiency, unheard of only a few years ago.

POSITION

The appliance is extremely versatile as it can be fitted in almost any room. The appliance is room sealed, there is no contact between combustion chamber and living accommodation. This guarantees maximum safety and efficiency. Indeed, our front cover has been designed to fit, achieving maximum air tight seal using screw down fasteners. Each boiler has been designed and manufactured in our modern plant to exacting ISO 9001 discipline, all boilers carry full CE marking of approval. Technical sales and commercial service are available throughout the UK. This product is guaranteed by The White Boiler Company, Chartists Way, Morley, LEEDS, LS27 9ET. Telephone No (0113) 252 7007.

BASIC COMPONENTS - (See figure 1).

Guarantee is a full 12 months from date of purchase providing the appliance has been fitted in accordance with these instructions and relevant codes of practice.

MAJOR COMPONENTS

- Gas valve.
- Variable head pump suitable for any type of central heating system.
- Burner with flame stabiliser designed to operate under all thermal conditions.
- Primary heat exchanger constructed from stainless steel.
- Unique **patented condensing heat exchanger** for high thermal flue transfer gases to water.
- Stainless steel plate heat exchanger for super high heat transfer to domestic hot water supply.
- Built in frost protection.
- Printed circuit board designed to connect to room stat and/or timer/frost stat. Aesthetically pleasing panels and controls.
- On/Off ball valves for shutting off gas, central heating and domestic hot water circuit.
- Safety relief valve (for safety discharge).

Programmable 7 day module with digital display (optional model).

All front panel controls not often used have been hidden. This achieves simplicity of operation with easy to clean panels.

NOTE: Due to the high efficiency of this boiler a plume of water vapour will form at the flue terminal during operation.

COSHH - CONTROL OF SUBSTANCES HARMFUL TO HEALTH IMPORTANT

This appliance contains materials that are indicated below.

It is the Users/Installers responsibility to ensure that the necessary personal protective clothing is worn when handling, where applicable, the pertinent parts that contain any materials that could be interpreted as being injurious to health and safety.

WARNING: when installing the appliance, care should be taken to avoid any possibility of injury when handling sheet metal parts.

GENERAL INFORMATION:

GLUES AND SEALANTS - exercise caution - if these are still in liquid form.

INSULATION PADS, CERAMIC FIBRE - may be harmful if inhaled, may be irritating to skin, eyes, nose and throat. When handling keep dust generation to a minimum, avoid inhaling and contact with skin or eyes.

When disposing of the product keep dust generation to a minimum and ensure that parts are securely wrapped.

When servicing avoid inhalation by using a vacuum cleaner or in conjunction with other tools. After handling wash hands and other exposed parts.

THE WHITE BOILER COMPANY use only high quality material for production of this product, in an effort to protect the environment components should be re-cycled.

SECTIONS

TABLE OF CONTENTS

PAGE

1	INTRODUCTION	6
2	DESCRIPTION AND SEQUENCE	6
3	TECHNICAL DATA	8
4	GENERAL REQUIREMENTS	12
5	INSTALLATION	18
6	COMMISSIONING	33
7	SERVICING INSTRUCTIONS	38
8	REPLACEMENT OF PARTS	40
9	FAULT FINDING	49
10	ELECTRICAL SYSTEM DIAGRAM	51
11	SPARE PARTS	52
12	BENCHMARK COMMISSIONING CHECKLIST DETAILS	56

GENERAL LAYOUT

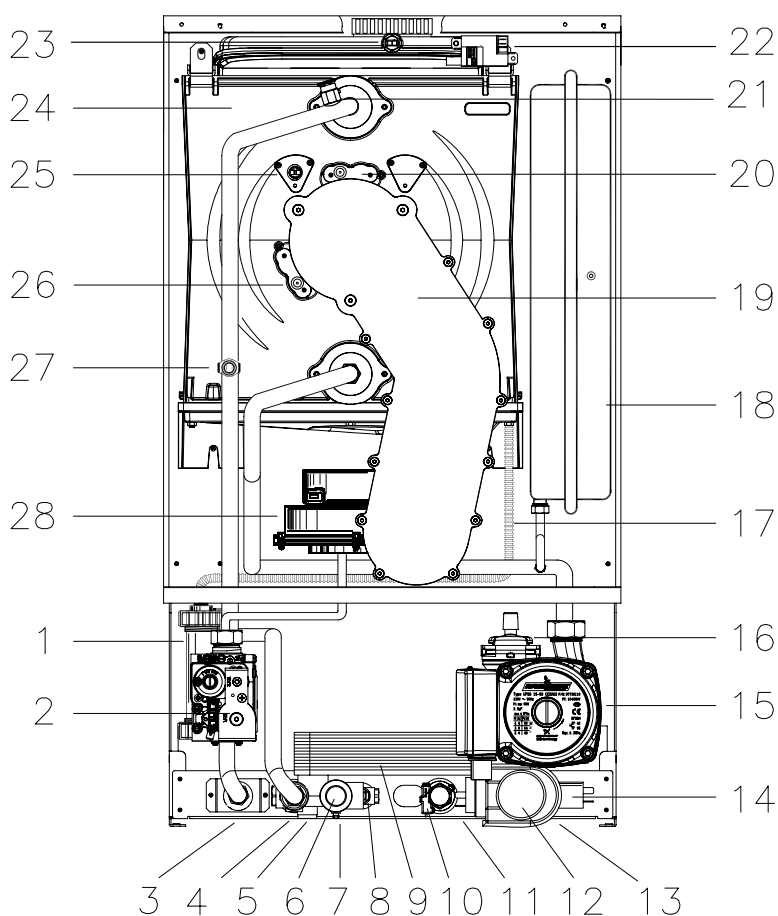


Fig. 1

KEY

1 - Condensate drain	12 - Diverter valve motor	23 - Flue temperature sensor
2 - Gas valve	13 - CH return	24 - Heat exchanger
3 - Gas inlet	14 - Water pressure sensor	25 - Overheat cut off thermostat
4 - CH flow	15 - Circulation pump	26 - Sensing electrode
5 - Drain point	16 - Automatic air vent	27 - CH sensor
6 - Safety pressure relief valve	17 - Condensate drain	28 - Fan
7 - DHW outlet	18 - Expansion vessel	
8 - DHW sensor	19 - Burner manifold	
9 - Plate heat exchanger	20 - Spark electrode	
10 - DHW flow detector	21 - Commissioning manual air vent	
11 - DHW inlet	22 - Spark igniter	

OPERATING SCHEME

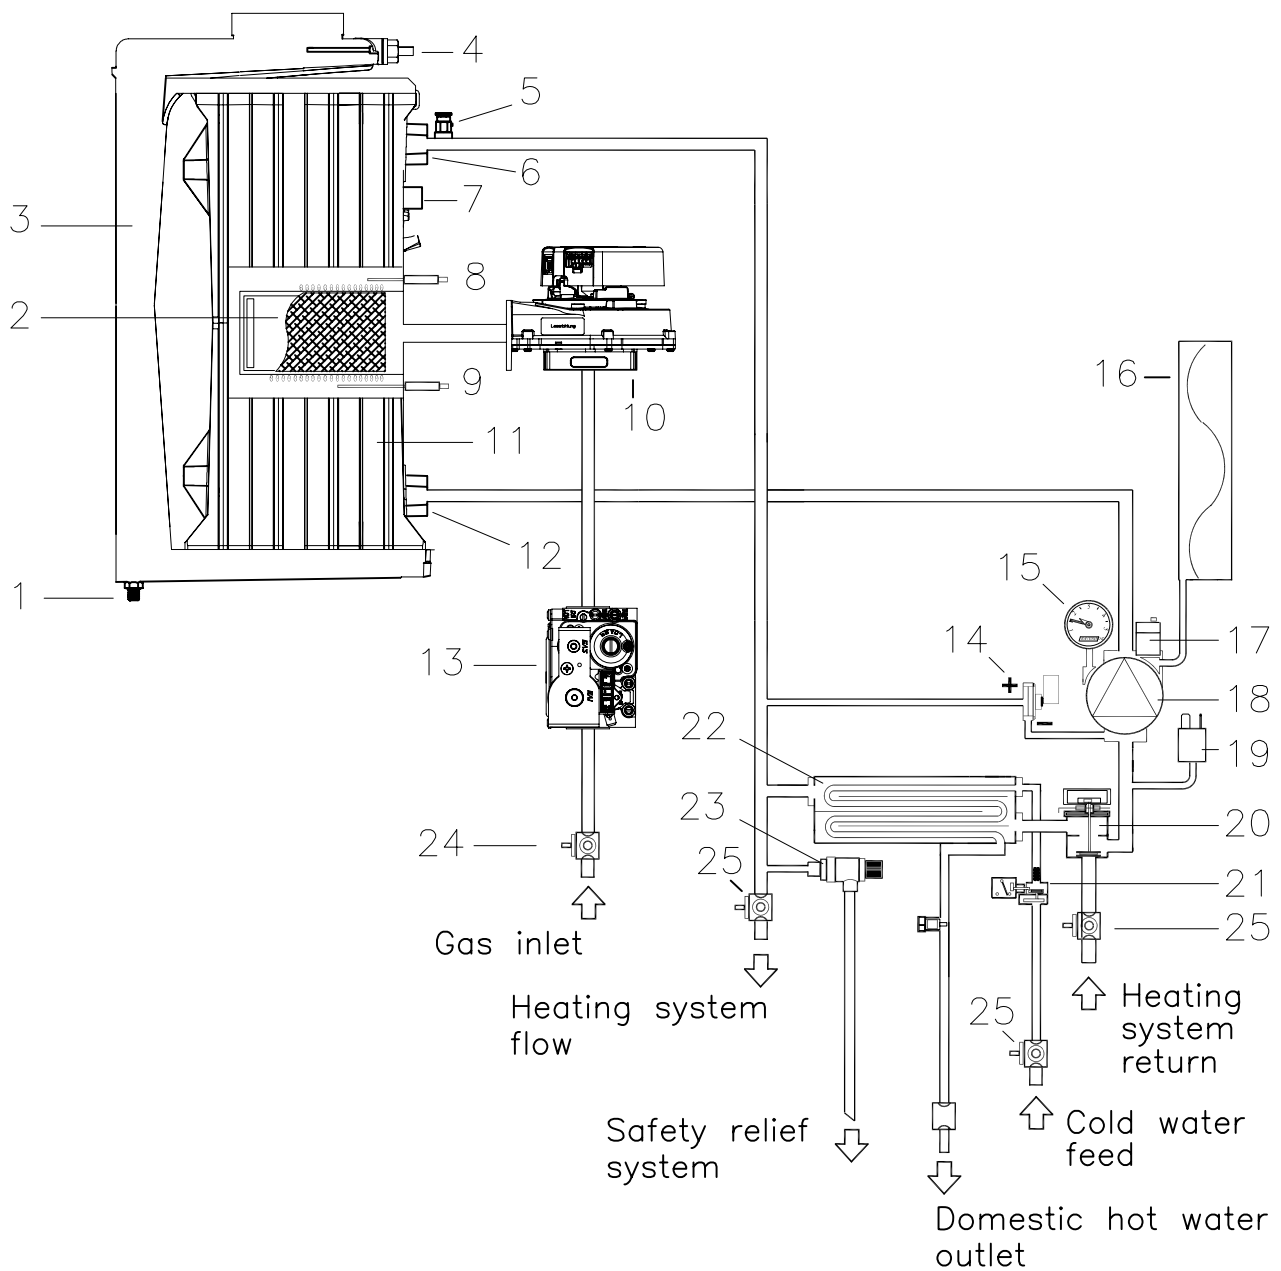


Fig. 2

KEY

- | | | |
|----------------------------------|--|-----------------------------------|
| 1 - Condensate drain | 10 - Fan | 19 - Low water pressure switch |
| 2 - Burner | 11 - Heat exchanger | 20 - Diverter valve motor |
| 3 - Flue gas exhaust manifold | 12 - CH return | 21 - DHW sensor |
| 4 - Flue temperature sensor | 13 - Gas valve | 22 - Plate heat exchanger |
| 5 - Commisioning manual air vent | 14 - Diferential water pressure switch | 23 - Safety pressure relief valve |
| 6 - CH flow | 15 - Water pressure gauge | 24 - Gas service cock |
| 7 - Overheat thermostat | 16 - Expansion vessel | 25 - Compression ball valves |
| 8 - Spark electrode | 17 - Auto air vent | |
| 9 - Sensing electrode | 18 - Circulation pump | |

SECTION 1 INTRODUCTION

- 1.1** The boiler is designed for the production of central heating and domestic hot water combined in one unit.
It is fitted with an automatic domestic hot water priority valve.
A summer/winter switch is fitted on the control panel.
With the Summer only switch position being for domestic hot water.
The summer/winter position being for central heating with domestic hot water priority.
The boiler is equipped with a front cover which can be removed for servicing. The data badge with technical data is placed on the lower part of the left hand side panel.
- 1.2** Fig.1 Illustrates the general layout of components.
Fig.2 Illustrates the operating principles described in section 2.

SECTION 2

2.1 DESCRIPTION OF CONTROL SYSTEM AND SEQUENCE OF OPERATION

2.2 Domestic hot water mode

When the appliance is in rest mode with the mains neon switch on.
Switch the summer/winter switch to summer position, with the heating circuit charged with water (above 1 bar). If the domestic hot water tap is turned on the boiler will function in the following sequence:

- 2.2.1** The pump starts. The fan starts and sends a signal back to the ignition board that the fan is running .
- 2.2.2** The spark ignition system is powered which in turn commences the spark igniter to operate and light the burner.
At this point the ignition board opens the gas valve to light the burner.
- 2.2.3** When the electrode sensor senses the signal that the burner is alight, the spark igniter stops.
- 2.2.4** From the fan speed setting the boiler increases to the maximum permissible speed over a period of 5 seconds and will remain at its maximum required power until its maximum regulated temperature is achieved and then will modulate to maintain this.
- 2.2.5** When the domestic hot water tap is closed the diverter valve goes back into rest mode, the burner is shut down along with the fan which is also switched off.
- 2.2.6 Central heating mode**
- 2.2.7** If the switch is positioned on winter with a demand for heat to supply radiators,

etc , with the heating circuit fully charged above 1 bar, so as to operate the low water sensor device the boiler will start in the same way as domestic hot water mode.

As the heating sensor reaches temperature the fan speed modulates to maintain the temperature set on the display panel.
When starting, the fan will always start at the set-point speed.

- 2.2.8** On the control panel are mounted two potentiometers (thermostats) these control the temperature. One is for domestic hot water and the other for heating.

- 2.2.9** The boiler is fitted with an anti-cycling device on the control board. This delays the boiler from re-firing within 10 minutes.
If the heating temperature goes 20°C below the set point, the burner restarts immediately. The domestic hot water will always take priority and is unaffected by the anti-cycling device.

GENERAL FUNCTION

2.3 Central Heating Mode

- 2.3.1** The potentiometer fitted on the instrument panel permits regulation of the boiler to partial heating requirements, between maximum and minimum settings.
- 2.3.2** Air and gas are drawn by the fan for combustion.
- 2.3.3** The fan also forces exhaust gas through the flue to the outside, this creates a lesser pressure in the sealed combustion chamber, thus sucking in combustion air, through the inlet duct.
- 2.3.4** The boiler water temperature is automatically controlled by a built in thermostat.
- 2.3.5** Interior space temperature is set by the room thermostat to be installed in the heating system. The boiler already carries connection terminals for this thermostat, as well as for a timeclock.
The burner continues to operate until it is stopped by the timer or one of the thermostats.
- 2.3.6** When the internal C.H. temperature sensor intervenes the burner shuts down. The fan stops but the pump continues to operate.
- 2.3.7** When the room thermostats intervene the burner shuts down. The fan stops and the pump after 3 minutes turns off.
- 2.3.8** The boiler also incorporates an anti-block system which powers the pump every 24 hours, allowing it operate for 2 minutes if the boiler has not been in use. This operation may in some cases be heard for a short period when the pump has been activated.

2.4 Domestic hot water mode

2.4.1 The heat exchanger in the D.H.W. circuit is a stainless steel plate heat exchanger water to water, and domestic water is heated by converting the water in the central heating circuit. The transference of heat is very high because the two fluids move in a counter direction.

2.4.2 Select summer/winter switch (Fig.33) switch pressed in the winter position. Switch pressed in, when a hot water tap is turned on the diverter valve motor moves to exclude the central heating circuit, the boiler automatically modulates to maintain the domestic hot water at a constant temperature. Water temperature can be regulated using the D.H.W. thermostat located on the front control panel (fig. 33).

2.4.3 When domestic hot water is being drawn the burner and pump perform as they do during central heating except that the burner is commanded by the D.H.W. thermostat.

2.4.4 When D.H.W. is no longer called for the boiler will automatically return to the central heating mode.

2.4.5 Select summer/winter switch (Fig.33) in summer position. The boiler functions like an automatic gas hot water heater. When D.H.W. is no longer required the burner and pump and fan immediately turn off. This also takes place when the summer/winter switch is on winter if there is no demand for heat to the central heating system or until the timeclock demands for central heating circuit.


2.5 SAFETY DEVICE

In both central heating and domestic hot water mode safe operation is ensured by a control board which shuts off the main burner, if the fan stops or the flue or combustion air intake duct is obstructed.

2.5.1 An overheat cut off thermostat acts to turn off the burner to resetable "lockout" (Fig. 33).

2.5.2 A safety valve is fitted on the central heating circuit set at 3 bar.

2.5.3 A low water pressure switch set at 0.4 bar is fitted on heating circuit, to prevent the boiler operating below this boiler system pressure.

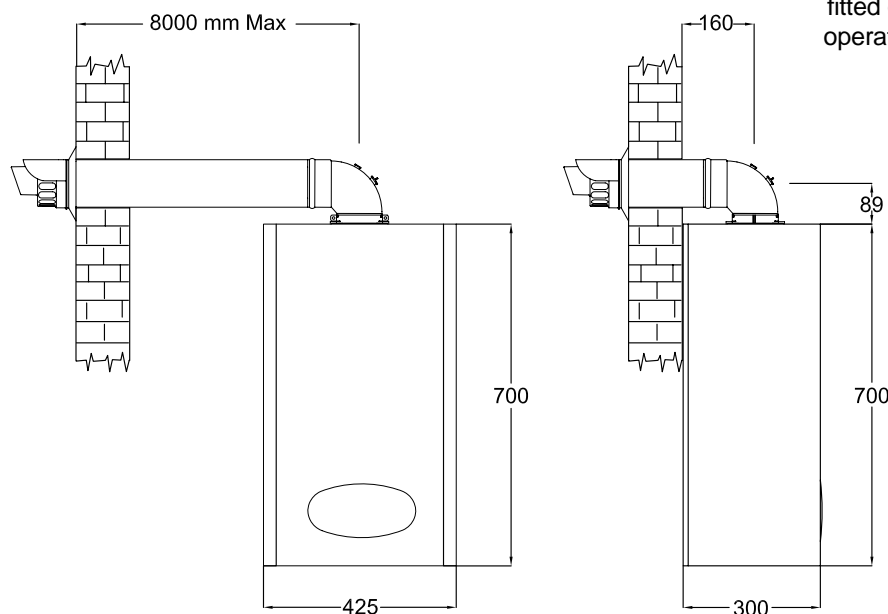


OVERALL DIMENSION

Fig. 3


AVAILABLE PUMP HEAD

Fig. 4a

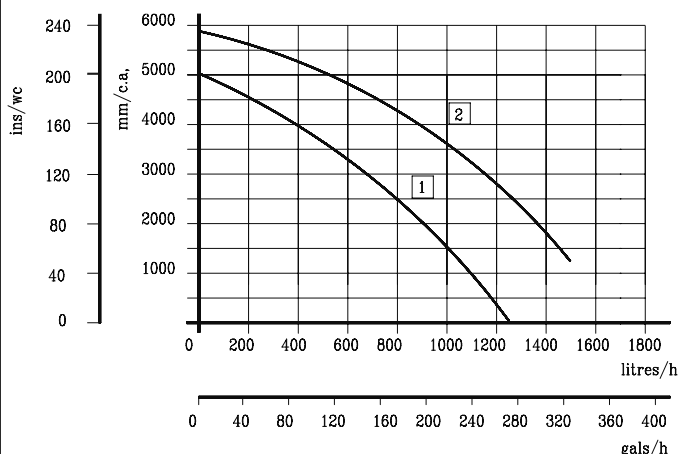

PRESSURE DROP ACROSS APPLIANCE

Fig. 4b

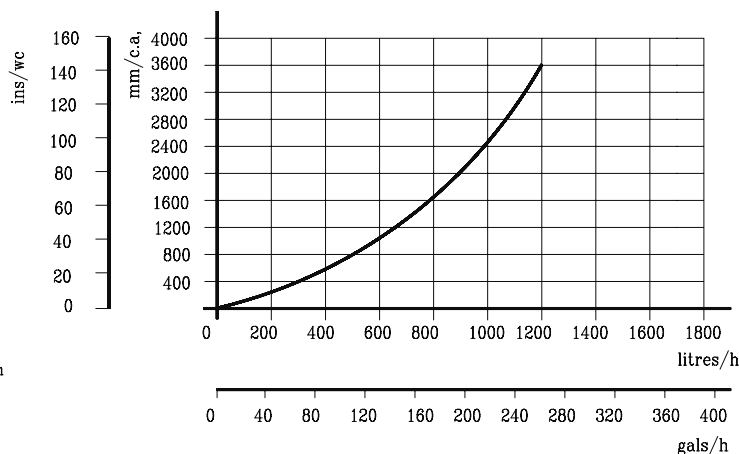

SECTION 3 TECHNICAL DATA

WH 100 (T)

TABLE 1/A

NATURAL GAS (G 20) I_{2H} - II_{2H3+}

NOMINAL HEAT INPUT NET QMS	24.5 kW
MINIMUM HEAT INPUT NET	6.8 kW
NOMINAL HEAT OUTPUT	24.1 kW
NOMINAL HEAT OUTPUT CONDENSING	26.5 kW
MINIMUM HEAT OUTPUT	6.7 kW
MINIMUM HEAT OUTPUT CONDENSING	7.4 kW
GAS RATE	max 2.5 m ³ /h
AFTER 10 MINUTES	min 0.7 m ³ /h
INLET PRESSURE	20 mbar
FAN SPEED Max 5400 rpm - 180 Hz C.H. min 1650 rpm - 55 Hz	Combustion % CO ₂ : G20 - 9.0 (+ 0.4 / - 0.5) Case ON G20 - 8.8 (+ 0.4 / - 0.5) Case OFF
Mixer orifice: fucsia	
ELECTRICAL SUPPLY	230 V ~ 50 HZ
POWER CONSUMPTION	160 W
EXTERNAL FUSE RATING	3A
INTERNAL FUSE	F1 - 3.15 A (20 mm to BS 4265)
DRY WEIGHT	39.5 kg
WATER CONTENT C.H.	2.0 litre
WATER CONTENT	0.5 litre
GAS SUPPLY CONNECTION	15 mm compression isolating valve
FLOW CONNECTION C.H.	22 mm compression isolating valve
RETURN CONNECTION C.H.	22 mm compression isolating valve
INLET CONNECTION D.H.W.	15 mm compression isolating valve
OUTLET CONNECTION D.H.W.	15 mm compression valve
SAFETY DISCHARGE C.H.	15 mm copper pipe
CONDENSATION DRAIN	3/4" (21.5 mm) push fit over flow
MAX COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL 110 LITRE	
SEALED WATER SYSTEM C.H.	
MAX PRESSURE PHS	2.5 bar
MINIMUM WORKING PRESSURE	0.5 bar
8 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE	0.5 bar
CENTRAL HEATING OPERATING TEMPERATURE	MAX 80°C min 45°C
DESIGN FLOW RATE 1383 l/h 20 °C RISE	
MINIMUM FLOW RATE C.H. 503 l/min	
D.H.W. FLOW RATE 30 °C rise	13.4 l/min
D.H.W. FLOW RATE 35 °C rise	11.5 l/min
D.H.W. FLOW RATE 40 °C rise	10.1 l/min
D.H.W. TEMPERATURE	Max 60 °C min 40 °C
FAN SPEED D.H.W.	Max 6300 rpm - 210 Hz min 1650 rpm - 55 Hz
Q _{mw} Input Net	Max 29.0 kW min 6.8 kW
D.H.W. PRESSURE PMW	Max 10 bar (147 p.s.i.)
D.H.W. PRESSURE PMW	min 0.8 bar (118 p.s.i.)
D.H.W. MINIMUM FLOW RATE	3 l/min
FLUE OUTLET NOM. DIAMETER 100 mm specially supplied with boilers (If required)	
DESTINATION: AT, DK, FI, SE & GR	CATEGORY I _{2H}
DESTINATION: GB, IE, CH, ES, IT, PT & GR	CATEGORY II _{2H3+}
FLUE TYPE - C ₁₃ - C ₃₃ - C ₅₃	NO _x 5 SEDBUK A

SECTION 3 TECHNICAL DATA

WH 100 (T)

TABLE 1/B

LPG (G 30 - G 31) I₃₊ - II_{2H3+}

NOMINAL HEAT INPUT NET QMS	24.5 kW
MINIMUM HEAT INPUT NET	6.8 kW
NOMINAL HEAT OUTPUT	24.1 kW
NOMINAL HEAT OUTPUT CONDENSING	26.5 kW
MINIMUM HEAT OUTPUT	6.7 kW
MINIMUM HEAT OUTPUT CONDENSING	7.4 kW
GAS RATE	max G31 0.9 m ³ /h G30 0.7 m ³ /h
AFTER 10 MINUTES	min 0.4 m ³ /h 0.3 m ³ /h
INLET PRESSURE	G31 37 mbar G30 28-30 mbar
FAN SPEED C.H. Max 4800 rpm - 160 Hz	Combustion % CO ₂ : G31 - 10.2 (+ 0.2 / - 0.5) Case ON
min 1650 rpm - 55 Hz	G30 - 11.0 (+ 0.2 / - 0.5) Case ON
FAN SPEED C.H. Max 4800 rpm - 160 Hz	Combustion % CO ₂ : G31 - 9.9 (+ 0.2 / - 0.5) Case OFF
min 1650 rpm - 55 Hz	G30 - 10.8 (+ 0.2 / - 0.5) Case OFF
Mixer orifice: fucsia	
ELECTRICAL SUPPLY	230 V ~ 50 HZ
POWER CONSUMPTION	160 W
EXTERNAL FUSE RATING	3A
INTERNAL FUSE	F1 - 3.15 A (20 mm to BS 4265)
DRY WEIGHT	39.5 kg
WATER CONTENT C.H.	2.0 litre
WATER CONTENT	0.5 litre
GAS SUPPLY CONNECTION	15 mm compression isolating valve
FLOW CONNECTION C.H.	22 mm compression isolating valve
RETURN CONNECTION C.H.	22 mm compression isolating valve
INLET CONNECTION D.H.W.	15 mm compression isolating valve
OUTLET CONNECTION D.H.W.	15 mm compression valve
SAFETY DISCHARGE C.H.	15 mm copper pipe
CONDENSATION DRAIN	3/4" (21.5 mm) push fit over flow
MAX COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL 110 LITRE	
SEALED WATER SYSTEM C.H.	
MAX PRESSURE PHS	2.5 bar
MINIMUM WORKING PRESSURE	0.5 bar
8 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE	0.5 bar
CENTRAL HEATING OPERATING TEMPERATURE	MAX 80°C min 45°C
DESIGN FLOW RATE 1383 l/h 20 °C RISE	
MINIMUM FLOW RATE C.H. 503 l/min	
D.H.W. FLOW RATE 30 °C rise	13.4 l/min
D.H.W. FLOW RATE 35 °C rise	11.5 l/min
D.H.W. FLOW RATE 40 °C rise	10.1 l/min 10°C inlet temperature
D.H.W. TEMPERATURE	Max 60 °C min 40 °C
FAN SPEED D.H.W.	Max 6300 rpm - 210 Hz min 1650 rpm - 55 Hz
Q _{mw} Input Net	Max 29.0 kW min 6.8 kW
D.H.W. PRESSURE PMW	Max 10 bar (147 p.s.i.)
D.H.W. PRESSURE PMW	min 0.8 bar (118 p.s.i.) To obtain heat input 1.2 bar
D.H.W. MINIMUM FLOW RATE	3 l/min
FLUE OUTLET NOM. DIAMETER 100 mm specially supplied with boilers (If required)	
DESTINATION: BE, FR & GR	CATEGORY I ₃₊
DESTINATION: GB, IE, CH, ES, IT, PT & GR	CATEGORY II _{2H3+}
FLUE TYPE - C ₁₃ - C ₃₃ - C ₅₃	NO _x 5 SEDBUK A

SECTION 3 TECHNICAL DATA

TABLE 1/C

WH 130 (T)

NATURAL GAS (G 20) I_{2H} - II_{2H3+}

NOMINAL HEAT INPUT NET QMS	29.6 kW
MINIMUM HEAT INPUT NET	7.8 kW
NOMINAL HEAT OUTPUT	29.0 kW
NOMINAL HEAT OUTPUT CONDENSING	32.0 kW
MINIMUM HEAT OUTPUT	7.6 kW
MINIMUM HEAT OUTPUT CONDENSING	8.4 kW
GAS RATE	max 3.4 m ³ /h
AFTER 10 MINUTES	min 0.85 m ³ /h
INLET PRESSURE	20 mbar
FAN SPEED Max 5400 rpm - 180 Hz C.H. min 1650 rpm - 55 Hz	Combustion % CO ₂ : G20 - 9.0 (+ 0.4 / - 0.5) Case ON G20 - 8.8 (+ 0.4 / - 0.5) Case OFF
Mixer orifice: red	
ELECTRICAL SUPPLY	230 V ~ 50 HZ
POWER CONSUMPTION	160 W
EXTERNAL FUSE RATING	3A
INTERNAL FUSE	F1 - 3.15 A (20 mm to BS 4265)
DRY WEIGHT	42.5 kg
WATER CONTENT C.H.	2.0 litre
WATER CONTENT	0.5 litre
GAS SUPPLY CONNECTION	15 mm compression isolating valve
FLOW CONNECTION C.H.	22 mm compression isolating valve
RETURN CONNECTION C.H.	22 mm compression isolating valve
INLET CONNECTION D.H.W.	15 mm compression isolating valve
OUTLET CONNECTION D.H.W.	15 mm compression valve
SAFETY DISCHARGE C.H.	15 mm copper pipe
CONDENSATION DRAIN	3/4" (21.5 mm) push fit over flow
MAX COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL 110 LITRE	
SEALED WATER SYSTEM C.H.	
MAX PRESSURE PHS	2.5 bar
MINIMUM WORKING PRESSURE	0.5 bar
8 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE	0.5 bar
CENTRAL HEATING OPERATING TEMPERATURE	MAX 80°C min 45°C
DESIGN FLOW RATE 1811 l/h 20 °C RISE	
MINIMUM FLOW RATE C.H. 503 l/min	
D.H.W. FLOW RATE 30 °C rise	17.0 l/min
D.H.W. FLOW RATE 35 °C rise	14.5 l/min
D.H.W. FLOW RATE 40 °C rise	12.7 l/min
	10°C inlet temperature
D.H.W. TEMPERATURE	Max 60 °C min 40 °C
FAN SPEED D.H.W.	Max 6300 rpm - 210 Hz min 1650 rpm - 55 Hz
Q _{mw} Input Net	Max 36.4 kW min 7.8 kW
D.H.W. PRESSURE PMW	Max 10 bar (147 p.s.i.)
D.H.W. PRESSURE PMW	min 0.8 bar (118 p.s.i.)
D.H.W. MINIMUM FLOW RATE	3 l/min
FLUE OUTLET NOM. DIAMETER 100 mm specially supplied with boilers (If required)	
DESTINATION: AT, DK, FI, SE & GR	CATEGORY I _{2H}
DESTINATION: GB, IE, CH, ES, IT, PT & GR	CATEGORY II _{2H3+}
FLUE TYPE - C ₁₃ - C ₃₃ - C ₅₃	NO _x 5 SEDBUK A

SECTION 3 TECHNICAL DATA

TABLE 1/D

WH 130 (T)

LPG (G 30 - G 31) I₃₊ - II_{2H3+}

NOMINAL HEAT INPUT NET QMS	29.6 kW
MINIMUM HEAT INPUT NET	7.8 kW
NOMINAL HEAT OUTPUT	29.0 kW
NOMINAL HEAT OUTPUT CONDENSING	32.0 kW
MINIMUM HEAT OUTPUT	7.6 kW
MINIMUM HEAT OUTPUT CONDENSING	8.4 kW
GAS RATE	max G31 1.3 m ³ /h G30 0.99 m ³ /h
AFTER 10 MINUTES	min 0.3 m ³ /h 0.25 m ³ /h
INLET PRESSURE	G31 37 mbar G30 28-30 mbar
FAN SPEED C.H. Max 4800 rpm - 160 Hz	Combustion % CO ₂ : G31 - 10.2 (+ 0.2 / - 0.5) Case ON
min 1650 rpm - 55 Hz	G30 - 11.0 (+ 0.2 / - 0.5) Case ON
FAN SPEED C.H. Max 4800 rpm - 160 Hz	Combustion % CO ₂ : G31 - 9.9 (+ 0.2 / - 0.5) Case OFF
min 1650 rpm - 55 Hz	G30 - 10.8 (+ 0.2 / - 0.5) Case OFF
Mixer orifice: red	
ELECTRICAL SUPPLY	230 V ~ 50 HZ
POWER CONSUMPTION	160 W
EXTERNAL FUSE RATING	3A
INTERNAL FUSE	F1 - 3.15 A (20 mm to BS 4265)
DRY WEIGHT	42.5 kg
WATER CONTENT C.H.	2.0 litre
WATER CONTENT	0.5 litre
GAS SUPPLY CONNECTION	15 mm compression isolating valve
FLOW CONNECTION C.H.	22 mm compression isolating valve
RETURN CONNECTION C.H.	22 mm compression isolating valve
INLET CONNECTION D.H.W.	15 mm compression isolating valve
OUTLET CONNECTION D.H.W.	15 mm compression valve
SAFETY DISCHARGE C.H.	15 mm copper pipe
CONDENSATION DRAIN	3/4" (21.5 mm) push fit over flow
MAX COLD WATER CAPACITY WITHOUT ADDITIONAL EXPANSION VESSEL 110 LITRE	
SEALED WATER SYSTEM C.H.	
MAX PRESSURE PHS	2.5 bar
MINIMUM WORKING PRESSURE	0.5 bar
8 LITRES EXPANSION VESSEL PRE-CHARGE-PRESSURE	0.5 bar
CENTRAL HEATING OPERATING TEMPERATURE	MAX 80°C min 45°C
DESIGN FLOW RATE 1811 l/h 20 °C RISE	
MINIMUM FLOW RATE C.H. 503 l/min	
D.H.W. FLOW RATE 30 °C rise	17.0 l/min
D.H.W. FLOW RATE 35 °C rise	14.5 l/min
D.H.W. FLOW RATE 40 °C rise	12.7 l/min
	10°C inlet temperature
D.H.W. TEMPERATURE	Max 60 °C min 40 °C
FAN SPEED D.H.W.	Max 6300 rpm - 210 Hz min 1650 rpm - 55 Hz
Q _{mw} Input Net	Max 36.4 kW min 7.8 kW
D.H.W. PRESSURE PMW	Max 10 bar (147 p.s.i.)
D.H.W. PRESSURE PMW	min 0.8 bar (118 p.s.i.)
D.H.W. MINIMUM FLOW RATE	3 l/min
FLUE OUTLET NOM. DIAMETER 100 mm specially supplied with boilers (If required)	
DESTINATION: AT, DK, FI, SE & GR	CATEGORY I _{2H}
DESTINATION: GB, IE, CH, ES, IT, PT & GR	CATEGORY II _{2H3+}
FLUE TYPE - C ₁₃ - C ₃₃ - C ₅₃	NO _x 5 SEDBUK A

SECTION 4 GENERAL REQUIREMENTS

4.1 SAFETY

Gas Safety (Installation and Use) Regulations.

It is law that all gas appliances are installed and serviced by a Gas Safe registered installer in accordance with the above regulations and these installation instructions. All registered installers carry a Gas Safe I.D. card and have a registration number. Both should be recorded in your Benchmark commissioning checklist. You can check your installer on the Gas Safe register. Failure to install appliances correctly could lead to prosecution. It is in your own interest, and that of safety, to ensure the law is complied with. Check the boiler and flue is the correct type for installation.

The installation of the boiler MUST be in accordance with the latest I.E.E. (BS 7671) Wiring Regulations, local building regulations, bye-laws of the local water authority, the building regulations and the Building Standards (Scotland) and any relevant requirements of the local authority.

4.1.1 GENERAL INFORMATION

Both the user and the manufacturer rely heavily on the installer, whose job it is to install the combination boiler and connect it to a correctly designed heating system. Acquaint yourself with the relevant British Standards concerning installation requirements. If you need further advice on any points contact the Technical Services Office who would be pleased to help. It is recommended that tools suitable for brass fittings are used, and have a capability to accommodate hexagon sizes up to 50 mm.

CODES OF PRACTICE/Ref: Documents.

Detailed recommendations are contained in the following British Standard Codes of Practice:

BS6891: Low pressure installation pipes.

BS6798: Installation of gas fired hot water boilers of rated input not exceeding 70 kW.

BSEN12828

BSEN12831

BSEN14336

BS5546: Installation of gas hot water supplies domestic purposes (2nd Family Gases).

BS5440: 1 Flues (for gas appliances of rated input not exceeding 70 kW).

BS5440: 2 Ventilation (for gas appliances of rated input not exceeding 70 kW).

BSEN 677:1998 Gas fired central heating boilers.

In IE the following Codes of Practice apply:

Standard	Scope
I.S. 813	Domestic gas Installations.
The followings standards give valuable additional information:	
BS 5546	Installation of hot water supplies for domestic purposes.
BS EN 12828	Heating systems in buildings.
BS EN 12831	Heating systems in buildings. Circulation of load.
BS EN 14336	Installation & commissioning of water based heating systems.
BS 7074	Expansion vessels and ancillary equipment for sealed water system.
BS 7593	Treatment of water in domestic hot water and central heating system.

Health & Safety Document No.635 The Electricity at Work Regulations, 1989.

The manufacturer's notes must NOT be taken, in any way, as overriding statutory obligations.

IMPORTANT:

These appliances are CE certificated for safety and performance. It is, therefore, important that no external control devices e.g. flue dampers, economisers etc., are directly connected to this appliance unless covered by these Installation and Service Instructions or as otherwise recommended by Ravenheat in writing. If in doubt please enquire.

Any direct connection of a control device not approved by The White Boiler Company could invalidate the certification and the normal appliance warranty.

It could also infringe the Gas Safety regulations and the above regulations.

NOTE:

The White Boiler Company WH 100/130 combi boiler has been tested and examined by BSI, and is certified to comply with PrEN 483 and BS EN 625.

Manufacturers instructions must NOT be taken in any way as overriding statutory obligations. If in doubt on any point please consult The White Boiler Company.

4.2 LOCATION OF BOILER

4.2.1 Siting of The White Boiler Company WH100/130 combi boiler must be as follows.

The position of installation should be within the building, unless otherwise protected by a suitable enclosure.

Adequate space for installation, servicing and air circulation around boiler must be allowed for.

The The White Boiler Company WH 100/130 combi boiler must be fitted on a flat and vertical wall capable of adequately supporting the weight of the boiler and any ancillary equipment.

The appliance may be installed on a combustible wall subject to the requirements of the Local Authority and Building Regulations.

LPG versions of this appliance shall not be installed in cellars or basements.

4.3 CLEARANCES AROUND THE APPLIANCE

4.3.1 The following minimum free spaces, required for installation inspection and servicing, must be left around the boiler:

18 inches (450 mm) in front

5 inches (125 mm) above

6 inches (150 mm), 3 inches (75 mm) min.

0.2 inches (5 mm) on each side

1 inch (25 mm) in front when installed in a cupboard.

4.4 IMPORTANT NOTICE

4.4.1 For installation into timber framed buildings, please refer to the Institute of Gas Engineers Document IGE/UP/7.

The combination boiler may be installed in any room or internal space, although particular attention is drawn to the requirements of the current I.E.E. Wiring Regulations, and in Scotland the electrical provisions of the Building Regulations applicable in Scotland, with respect to the installation of the combination boiler in a room or internal space containing a bath or shower. Where a room sealed appliance is installed in a room containing a bath or shower, any electrical switch or appliance control, utilising mains electricity should be so situated that it cannot be touched by a person using a bath or shower.

A compartment used to enclose the combination boiler MUST be designed and constructed specifically for this purpose. An existing cupboard, or compartment, may be used provided it is modified accordingly Samples of the WH 100/130 combi boiler have been examined by B.G. Technology Notified Body, and is certified to comply with the essential requirements of the Gas Appliance.

Directive 90/396/EEC, the Low Voltage.

Directive 72/23/EEC and shows compliance with the Electro Magnetic Compatibility.

Directive 89/336/EEC and are therefore permitted to carry the CE Mark.

The appliance has been tested and approved by the WRc as meeting the requirements of G3 and L of the Building regulations and water Bylaws Scheme - Approved Products.

4.5 GAS SUPPLY

4.5.1

A gas meter is connected to the service pipe by the Local Gas Region or the Local Gas Region contractor. An existing meter should be checked preferably by the Gas Region to ensure that the meter is adequate to deal with the rate of gas supply required for all appliances it serves. Installation pipes should be fitted in accordance with BS 6891. Pipework from the meter to the boiler must be of adequate size (22 mm) min to within at least one metre of the boiler, (15 mm) min. can then be used for remaining pipe work to the appliance. A smaller size than the boiler inlet gas connection should not be used. The complete installation must be tested for soundness as described in the above Code.

N.B. if the gas supply for the boiler serves other appliances ensure an adequate supply is available both to the boiler and the other appliances when they are in use at the same time.

4.6 FLUE SYSTEM

4.6.1 The terminal should be located where dispersal of combustion products is not impeded and with due regard for the damage or discolouration that might occur to building products in the vicinity (see fig. 5).

The terminal must not be located in a place where it is likely to cause a nuisance In cold and/or humid weather as water vapour may condense on leaving the flue terminal.

The effect of such plumbing must be considered.

The terminal must not be closer than 25 mm (1 in) to any combustible material For protection of combustibles, refer to BS 5440.1.

Where a flue terminal is installed less than 1000 mm. from a plastic, or painted gutter; or 500 mm from painted eaves, an aluminium shield 1000 mm. long, should be fitted to the underside of the gutter or painted surface.


Plumbing will occur at the terminal so, where possible, terminal positions which could cause a nuisance should be avoided.

The flue must be installed in accordance with the recommendations of BS 5440: Part 1.

IMPORTANT NOTES

For greater flue lengths see alternative flue instructions. Flue must be positioned in a place not likely to cause a nuisance from plumbing.

FLUE TERMINAL POSITION

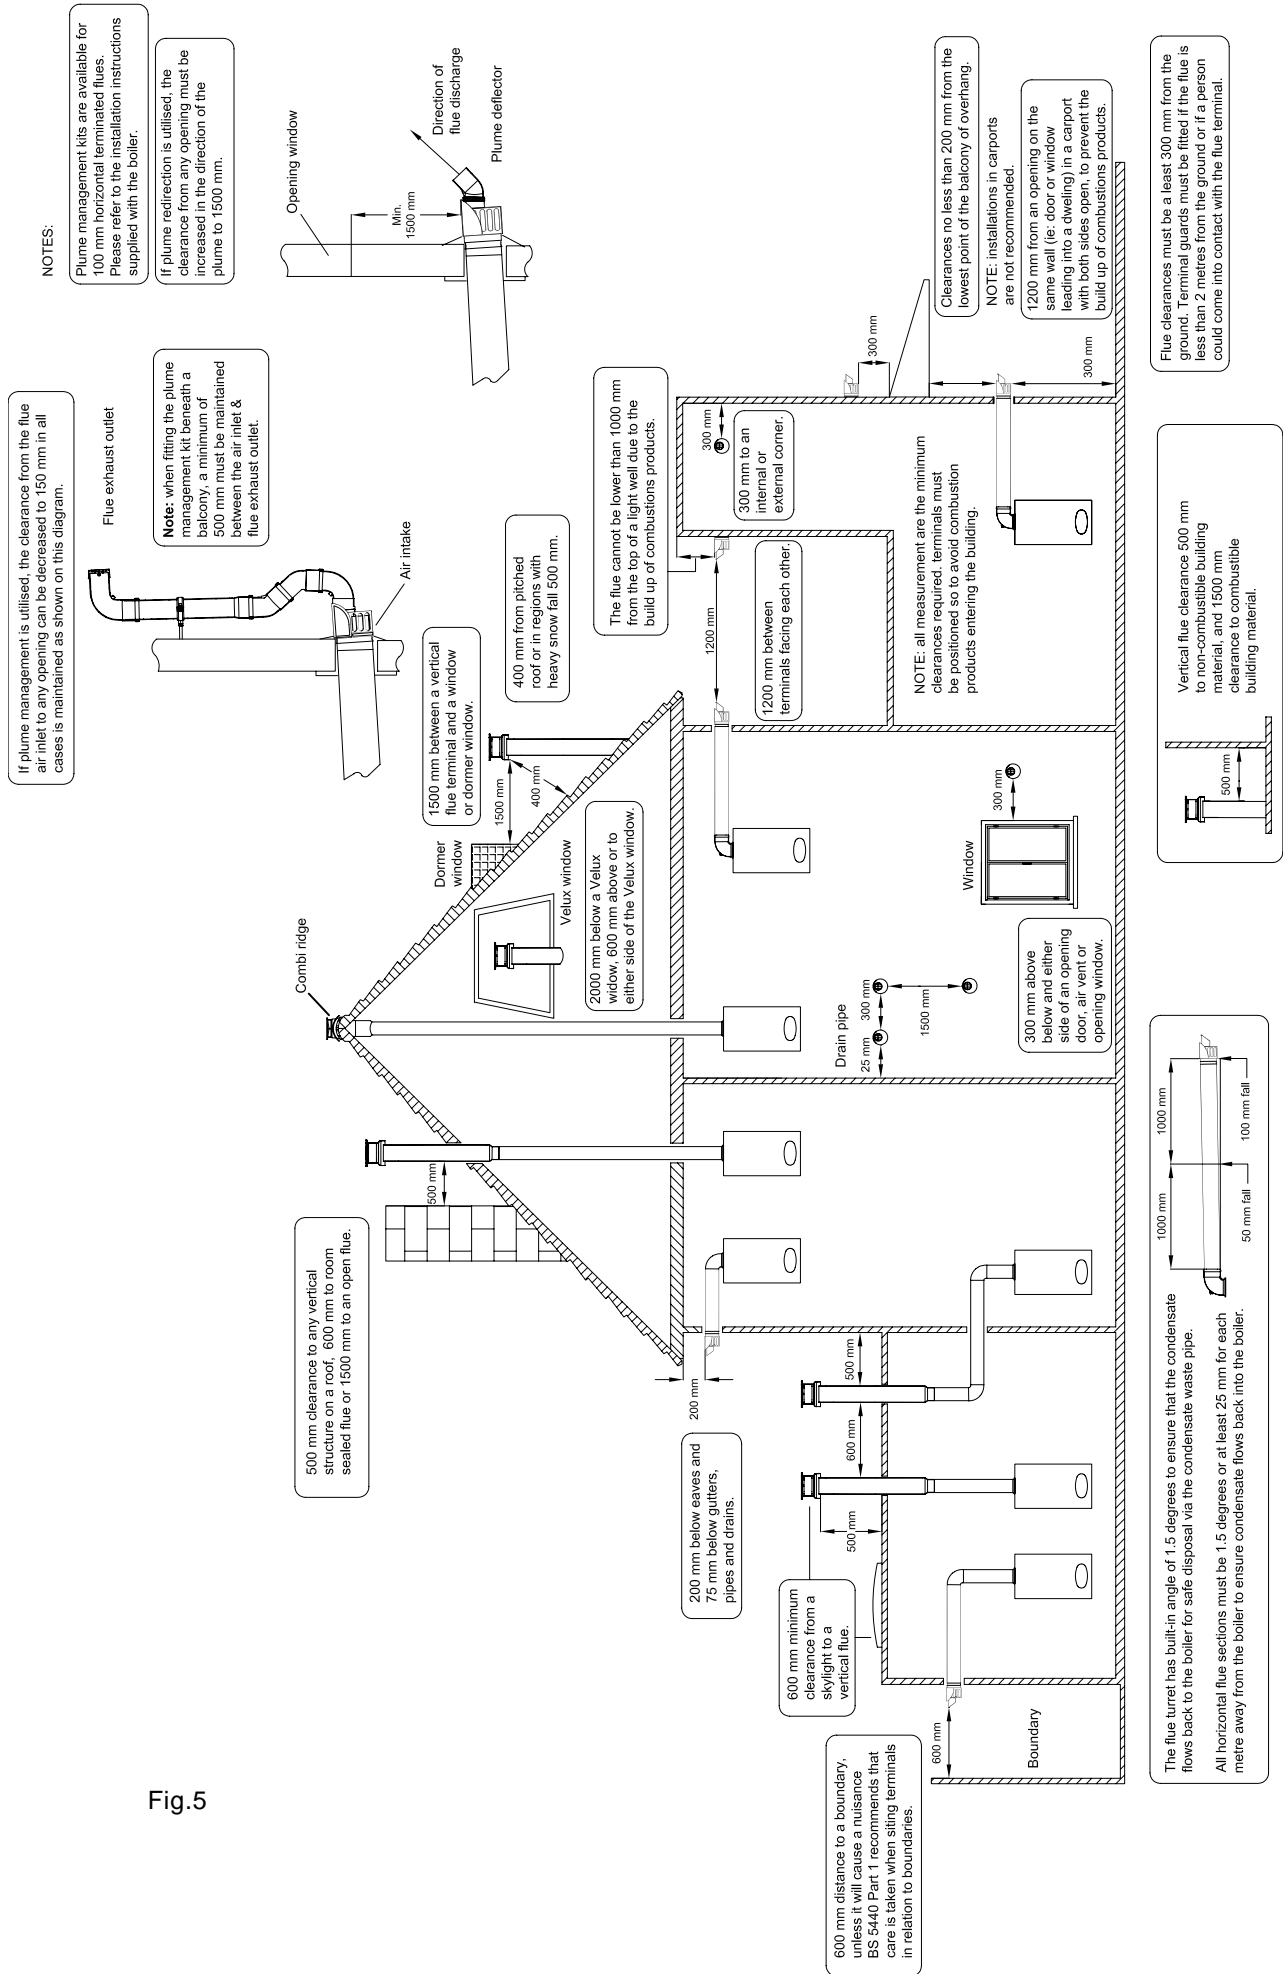

IMPORTANT NOTICE: If the flue terminates below a balcony, above the ground, above a flat roof to which people have access, then a suitable **terminal guard** must be fitted **PRO110100**.

Fit only recommended **FLUE TERMINAL GUARD** by securing concentrically around terminal with screws.

Available on request from:

The White Boiler Company
Morley, Leeds, West Yorkshire
ENGLAND LS27 9ET - UK
Tel.0044(0)113 252 7007

IMPORTANT: The following notes are intended for general guidance.

The boiler **MUST** be installed so that the terminal is exposed to external air.

It is important that the position of the terminal allows the free passage of air across it at all times.

Minimum acceptable spacing from the terminal to obstructions and ventilation openings are specified in Fig. 5.

Note positions: *Due to the terminal design, installation is possible with clearances less than those specified in BS 5440, Part 1*

NOTE: The flue must be terminated in a place not likely to cause a nuisance.

4.6.2 A concentric vertical flue kit is available for flueing applications up to a maximum height (see table 3 page 19).
For further details see vertical flue installation instructions.

4.7 AIR SUPPLY

4.7.1 The following notes are intended for general guidance.
The room sealed fan flued boiler does not require a permanent air vent for combustion air supply.
Where installed in a cupboard or compartment ventilation is not required.

4.8 WATER CIRCULATION (central heating)

4.8.1 Detailed recommendations are given in BS6798 2009/5449:1990 - BSEN12828 - BSEN12831 - BSEN14336 (for smallbore and microbore central heating systems). The following notes are given for general guidance.

4.8.2 PIPEWORK.

Copper tubing to BSEN 1057:1 2006, BSEN 1172, BSEN 1652 and BSEN 1653, is recommended for water pipes. Jointing should be either with capillary soldered or with compression fittings.
Where possible pipes should have a gradient

to ensure air is carried naturally to air release points and water flows naturally to drain taps. It should be ensured as far as possible that the appliance heat exchanger is not a natural collecting point for air except where providing useful heat, pipes should be insulated to prevent heat loss and to avoid freezing. Particular attention should be paid to pipes passing through ventilated spaces in roofs and under floors.

IMPORTANT.

A minimum length of 1 metre of copper pipe **MUST** be fitted to both flow and return connections from the boiler before connection to any plastic piping.

4.8.3 The water through the appliance heat exchanger circuit must exceed the min. 2.38 gals/min. (650 lt/h) when the burner is firing. It is important to ensure that this rate is achieved when sections of the system are shut off either manually or by automatic controls.

If the volume of circulating water is too low, the boiler water temperature will rise too rapidly. This could cause noise in the system or even cause the safety thermostat to trip.

4.8.4 BOILER INTERLOCK CONTROL

Central heating systems controls should be installed to ensure the boiler is switched off when there is no demand for heating, in compliance with Building Regulations.
The boiler has its own built in bypass.

If the system has thermostatic radiator valves on all radiators, or two port valves, then a bypass circuit must be fitted with an automatic bypass valve to ensure a flow of water should all valves be in the closed position.(See fig. 6).

4.8.5 It is important that the system is flushed thoroughly before the appliance is fitted or left to operate (as recommended in BS 7593) in order to maintain an efficiently operating heating system. For replacement installations, the system **MUST** be flushed with the old boiler in situ. In order to prevent system debris. Once the system has been flushed, an inhibitor (suitable for stainless steel heat exchanger) should be added. See section 4.8.11.

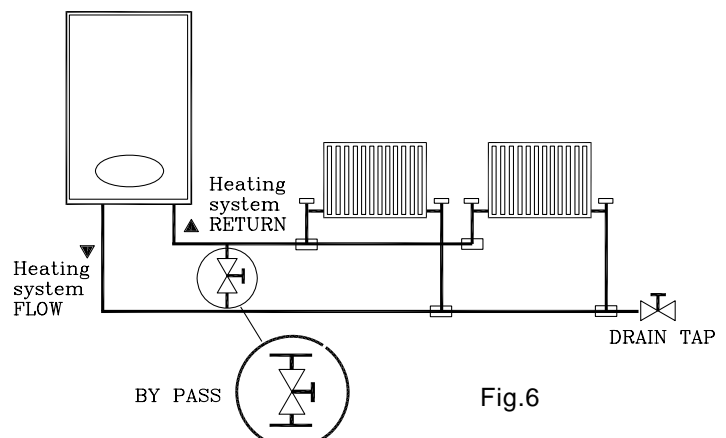


Fig.6

4.8.6 Draining tap


These must be located in accessible positions to permit the draining of the whole system. The taps must be at least 15 mm nominal size and manufactured in accordance with BS 2870 1980.

4.8.7 Air release points

These must be fitted at all high points where air will naturally collect, and must be sited to facilitate complete filling of the system.

4.8.8 The appliance has an integral sealed expansion vessel to accommodate the increase of water volume when the system is heated.

It can accept up to 7 lts of expansion water. If the appliance is connected to a system with an unusually high water content, calculate the total expansion (see table 2) and add additional sealed expansion capacity as appropriate (Fig. 7). In general, modern systems below 7 litre should not present any problem.

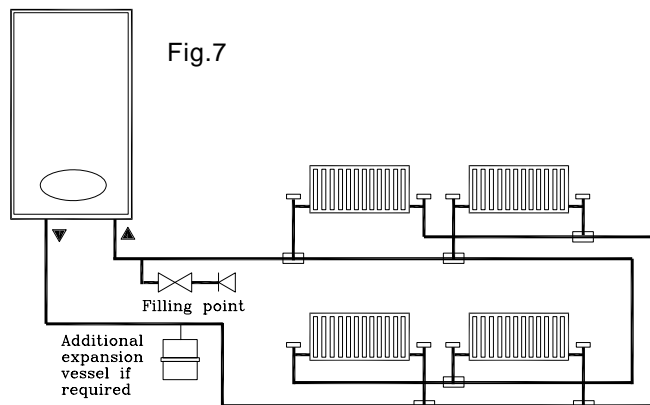

4.8.9 Mains water feed: central heating

There must be no direct connection to the mains water supply, even through a non return valve, without the approval of the Local Water Authority.

4.8.10 Permissible methods of filling

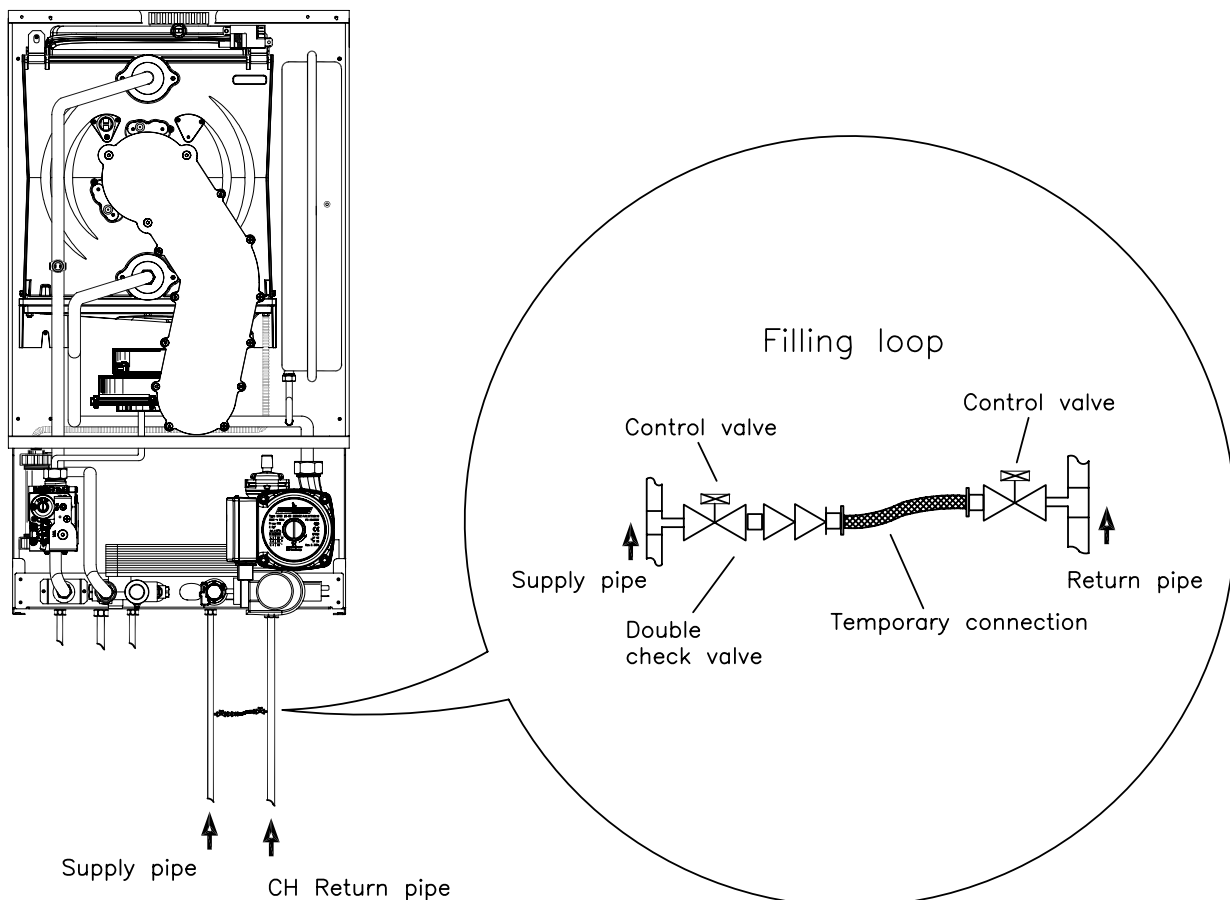


Fig.8

Figure depicts the requirements of Diagram R24.2a of the Water Supply (Water Fittings) regulations 1999.

SIZING OF ADDITIONAL EXPANSION VESSEL: TABLE 2

Deduct from the value given in the table the 7 litre vessel supplied.

Safety valve setting (bar)	3.0								
Vessel charge pressure (bar)	0.5				1.0			1.5	
Initial system pressure (bar)	0.5	1.0	1.5	2.0	1.0	1.5	2.0	1.5	2.0
Total water content of system	EXPANSION VESSEL VOLUME (LITRES)								
Litres									
25	2.1	3.5	6.5	13.7	2.7	4.7	10.3	3.9	8.3
50	4.2	7.0	12.9	27.5	5.4	9.5	20.6	7.8	16.5
75	6.3	10.5	19.4	41.3	8.2	14.2	30.9	11.7	24.8
100	8.3	14.0	25.9	55.1	10.9	19.0	41.2	15.6	33.1
125	10.4	17.5	32.4	68.9	13.6	23.7	51.5	19.5	41.3
150	12.5	21.0	38.8	82.6	16.3	28.5	61.8	23.4	49.6
175	14.6	24.5	45.3	96.4	19.1	33.2	72.1	27.3	57.9
200	16.7	28.0	51.8	110.2	21.8	38.0	82.4	31.2	66.2
225	18.7	31.5	58.3	124.0	24.5	42.7	92.7	35.1	74.5
250	20.8	35.0	64.7	137.7	27.2	47.5	103.0	39.0	82.7
275	22.9	38.5	71.2	151.5	30.0	52.2	113.3	42.9	91.0
300	25.0	42.0	77.7	165.3	32.7	57.0	123.6	46.8	99.3
325	27.0	45.5	84.1	179.1	35.7	61.7	133.9	50.7	107.6
350	29.1	49.0	90.6	192.8	38.1	66.5	144.2	54.6	115.8
375	31.2	52.5	97.1	206.6	40.9	71.2	154.5	58.5	124.1
400	33.3	56.0	103.6	220.4	43.6	76.0	164.8	62.4	132.4
425	35.4	59.5	110.1	239.2	46.3	80.7	175.1	66.3	140.7
450	37.5	63.0	116.5	247.9	49.0	85.5	185.4	70.2	148.9
475	39.6	66.5	123.0	261.7	51.8	90.2	195.7	74.1	157.2
500	41.6	70.0	125.9	275.5	54.5	95.0	206.0	78.0	165.5
For system volumes other than those given above, multiply the system volume by the factor across	0.0833	0.140	0.259	0.551	0.109	0.190	0.412	0.156	0.331

Note: This pressure can be increased up to 1.5 bar to suit high static head situations.

B) Where fitting of a make up vessel would be difficult, re pressurisation of the system can be done. See section on FILLING. If the capacity of the central heating system should exceed 110 Litres, an additional vessel should be installed on the return to the combination boiler from the heating system (Fig. 7). Guidance on vessel sizing is given in (Table 2).

Reference should be made to British Gas Publications, «Material and Installation Specifications for Domestic Central Heating and Hot Water». Draining taps should be at least 1/2" in BSP nominal size and be in accordance with BS 2879.

4.8.11 Installation to an existing central heating system

The combination boiler is designed to operate on a sealed system only. Therefore if the existing system is of the open water type it will have to be modified to comply with BS 5376 Part 2.

Before installing a new combination boiler to an existing system, flush out the old system with a recommended descaling agent.

If the boiler is installed in an existing system any unsuitable additives **MUST** be removed by thorough cleaning.

BS 7593:2006 details the steps necessary to clean domestic central heating system. Also check pipework and renew any corroded pipework or fittings. Valve glands must be repacked or replaced wherever necessary and any defective controls exchanged.

WATER TREATMENT

This boiler has a aluminium and stainless steel heat exchanger, The White Boiler Company recommended the use of FERNOX or SENTINEL, or other treatment products recognised by The White Boiler Company which must be used in accordance with the manufacturers instructions.

4.8.12 Hard water areas

If the area of installation is recognized as hard water, it is recommended that a suitable water treatment device is installed in the mains.

The water hardness can be determined by using the standard test paper or by referring to local water authority.

4.9 DOMESTIC WATER

- 4.9.1 The domestic hot water must be in accordance with the relevant recommendations of BS 5546. Copper tubing to BS 2871 1 is recommended for water carrying pipework and **MUST** be used for pipework carrying potable water.

4.10 ELECTRICAL SUPPLY

Warning: this appliance must be earthed

- 4.10.1 External wiring to the appliance must be carried out by a competent person and be in accordance with the current I.E.E. Regulations and local regulations which apply. The White Boiler Company boiler is supplied for connection to a 230 V ~ 50 Hz single phase supply. **The supply must be fused at 3 A.**

NOTE. The method of connection to the electricity supply **MUST** facilitate complete electrical isolation of the appliance, by the use of a fused, double pole isolator, having a contact separation of at least 3 mm in all poles. The point of connection to the electricity supply must be readily accessible and adjacent to the appliance except, where the appliance is installed in a bathroom.

When the current electrical wiring regulations must be followed in GB the IEE Wiring Regulations and in IE the ETGI Rules.

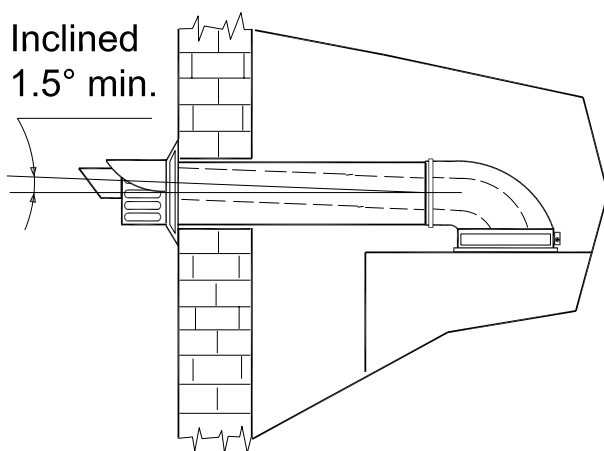


Fig.9

SECTION 5 INSTALLATION

5.1 WARNING

- 5.1.1 It is **MOST IMPORTANT** that this appliance is installed in a **VERTICAL POSITION**, with the flue air duct passing through the wall.
Make sure the flue is at a 1.5° incline, rising from the boiler with 50 mm.
Flue terminal diagram states 1.5° - 25 mm, fall back on flue (see fig. 5).

5.2 DELIVERY

- 5.2.1 **The appliance carton contains**
- a) boiler fully assembled with flue adaptor
 - b) installation instructions, user instructions and Benchmark log book
 - c) white paper template
 - d) hanging bracket
 - e) guarantee card
 - f) Polythene bag containing:
 - 2-22 mm compression ball valves complete with 3/4" washers
 - 1-15 mm compression ball valves complete with 1/2" washers
 - 1- 15 mm compression ball valve
 - 2 fixing bolts and wall plugs
 - screws and dowels.

IMPORTANT NOTES :

This appliance will produce a plume of condensation in cool weather. This is due to the High Efficiency and hence low flue gas temperature of the boiler.
See Optional extras (Fig.12).

5.3 UNPACKING OF BOILER

- 5.3.1 **IMPORTANT:** With regard to the Manual Handling Operations, 1992 Regulations, the following lift operation exceeds the recommended weight for a one man lift.
- 5.3.2
- Stand the boiler carton upright.
 - Open the top of the carton.
 - Rest the carton on the floor (keeping the flaps open).
 - Turn the carton over with the boiler inside and then pull the carton up away from the boiler.
 - Rest the boiler on its back on the floor to prepare it for installation.

5.4 POSITIONING OF THE BOILER

- 5.4.1 Remove the 2 lower and the 2 upper screws that secure the front panel, and then lift off.
- 5.4.2 Unscrew the 4 screws that fasten the lower grating on the casing and remove it from the bottom of the casing.
- 5.4.3 Make sure the casing and screws are put to one side in a safe place.


IMPORTANT: Please, lubricate the internal part of the seals before being fitted.

OPTIONAL EXTRAS: (See Table 4 page 20)

HORIZONTAL FLUE KIT BOX CONTAINING (Fig 10):

- 59 - Rubber seal Ø 60
- 56 - Rubber seal Ø 100
- 60 - Fumes sample point
- 61 - Flue exhaust duct
- 62 - Air intake duct
- 69 - Air sample point
- 127 - Terminal Rubber wall seal
- 128 - Elbow header


Generally speaking, oils and greases are not suitable for the “peroxide -EPDM”, therefore we suggest a correct lubrication using silicon-substances, for instance “Silikon Spray” (Arexons) or the same product from the company “Soltecno s.r.l.”.

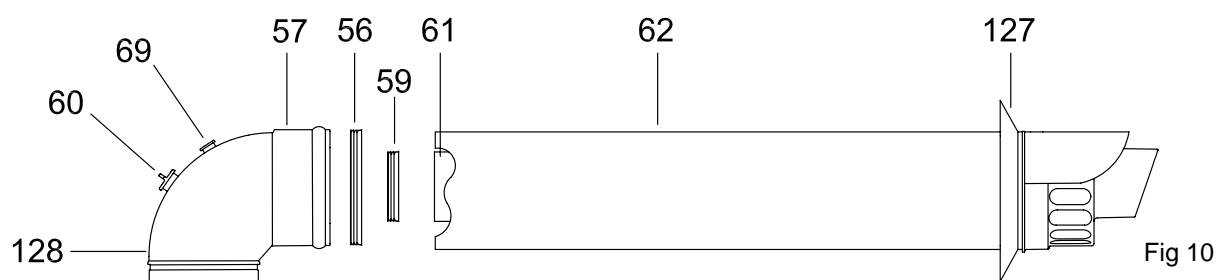

FLUE EXTENSION BOX CONTAINING (Fig. 11):
1000 mm flue extension duct as an extra cost only when requested for side and vertical flue applications.

WARNING: with horizontal concentric flue
Maximum allowable flue length 8 m maximum, flue duct extension used with standard flue (see table 3).

- 59 - Rubber seal Ø 60
- 63 - Air intake duct extension
- 64 - Flue exhaust duct extension

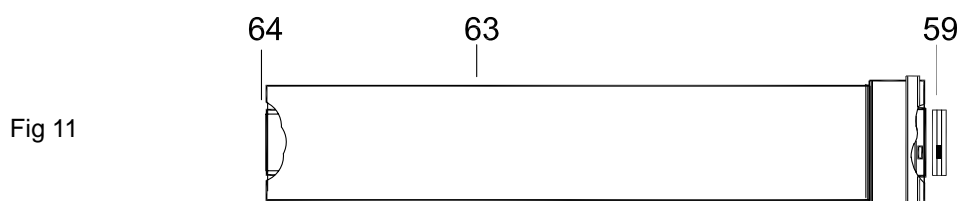

TYPE OF FLUE SYSTEM (All types) - minimum and maximum distance					TABLE 3
Flue type	C ₁₃		C ₃₃		C ₅₃ ¹
Flue Diameter	60/100 (concentric)	80/125 (concentric)	60/100 (concentric)	80/125 (concentric)	80mm single pipe
Minimum length (m)	0.3	0.3	1.0 (vertical length)	1.0 (vertical length)	0.5
Maximum length (m)	8.0	23.0	13.0	26.0	43.0
Equivalent length of 45° bend (m)	0.5	1.25	0.5	1.25	1.25
Equivalent length of 90° bend (m)	1.0	2.5	1.0	2.5	2.5

OPTIONAL EXTRAS:

PLUME MANAGEMENT KIT (Fig 12)

Max 6000 mm flue extension duct as an extra cost only when requested to reduce plumbing nuisance of condensation from 60/100 horizontal concentric flue.

Plume Management Kit	
Maximum Length (mm)	6000
minimum length (mm)	500
Equivalent length of 45° bend (mm)	500
Equivalent length of 90° bend (mm)	1000
The Maximum permitted flue length is measured from the centre line of the flue terminal to the top of the outlet terminal	
IMPORTANT : Max flue length must not exceed 6 m with a horizontal concentric 60/100 flue of 3m (L)	
Plume Management Kit Part No.	
Part. No.	Description
TER110101 (Fig. 12)	1 metre high plume kit containing: n. 1 terminal bend n. 1 90° elbow bend n. 2 45° bend n. 1 metre 60 M-F flue length n. 1 flue length bracket
CUR110050 (Fig. 12a)	45° flue exhaust deflection bend
CUR110100 (Fig. 12a)	90° flue exhaust deflection bend

IMPORTANT : Please, lubricate the internal part of the seals before being fitted.

FLUE EXHAUST DEFLECTION BEND (Fig 12a)

Flue exhaust deflection bend are also available. These come in both 45° and 90° degree versions. These bends fit directly onto the flue exhaust terminal to deflect the flue gas plume in an upward or sideways direction.

Although they are not substitute for a plume kit, they can be considered useful where condensate plumbing is causing a nuisance or can be used to eliminate condensate collecting on the end of the horizontal flue terminal.

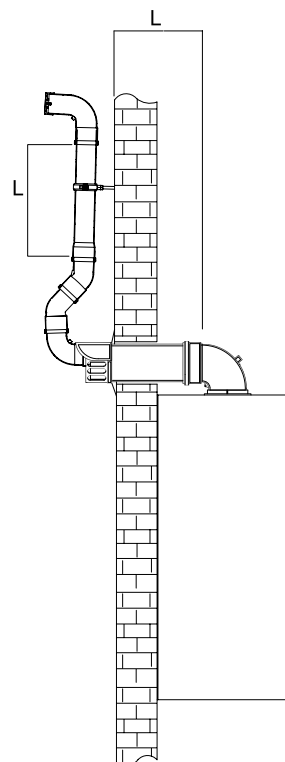


Fig. 12

L+L max 6000 mm
minimum plume kit length 500 mm

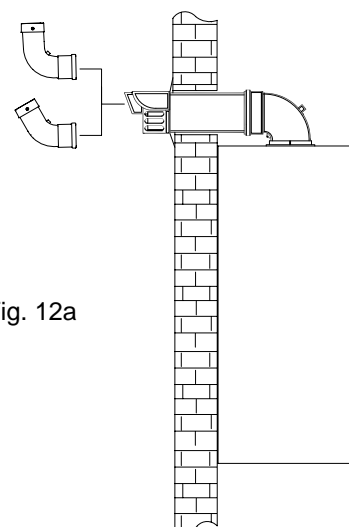


Fig. 12a

5.5 INSTALLING THE APPLIANCE FOR REAR FLUE OUTLET (Fig. 13 15 16 17 18 19).
FOR APPLIANCE CLEARANCES SEE 4.3.1 AND FIG. 5.

- 5.5.1** Use adhesive tape to attach the template to the wall, making sure that the centre line is vertical and that the distance clearance is no less than that shown in Fig. 13.
- Mark the two holes to fix the hanging bracket on the wall as well as the centre of the flue duct.
 - Detach the template from the wall.
 - Use a 10 mm. dia drill to make the 2 holes. Insert the plastic expansion plugs.
 - Cut or core drill a 105 mm dia hole for inserting the flue duct.
 - Locate the wall hanging bracket and fix using the two coach bolts.
- Fit the elbow header positioning it towards the required direction (Fig 13), onto the boiler.

- 5.5.2** Make sure that the rubber Ø 60 is locate into the flue elbow header.

- 5.5.3** If using horizontal flue duct and it is too long it can be shortened. Should it be necessary to cut the flue always. Cut equal amounts from both inner and outer pipes.
- Note :** add 30 mm to overall flue length to allow for terminal wall cover.(Fig.10 item 127).

- 5.5.4** Insert the flue assembly into the wall.

- 5.5.5** Lift the boiler on to the wall (Fig.13), locating onto the fixing jig wall bracket.

- 5.5.6** Working above the boiler pull the flue exhaust duct towards the boiler in order to engage tube (Fig. 17 item 61) into its header. Position flue into elbow header and push so as to locate inner and outer flue correctly ensuring good seal is made with "O" rings.

- 5.5.7** Fit terminal rubber wall seal and if necessary terminal guard.

- 5.5.8** Extensions kits are available to order for flue extension of up to 7 metres total length (Fig.18).

- 5.5.9** Each extension length extends the pipe by approximately 1000 mm long up to a maximum of seven extensions. Pipeline length can be established using the instructions in section 5.5 for rear flue outlets and section 5.6 for side flue outlets. Extensions must be installed with the widened end of the air intake pipe and the tapered end of the flue pipe aimed towards the exhaust terminal.

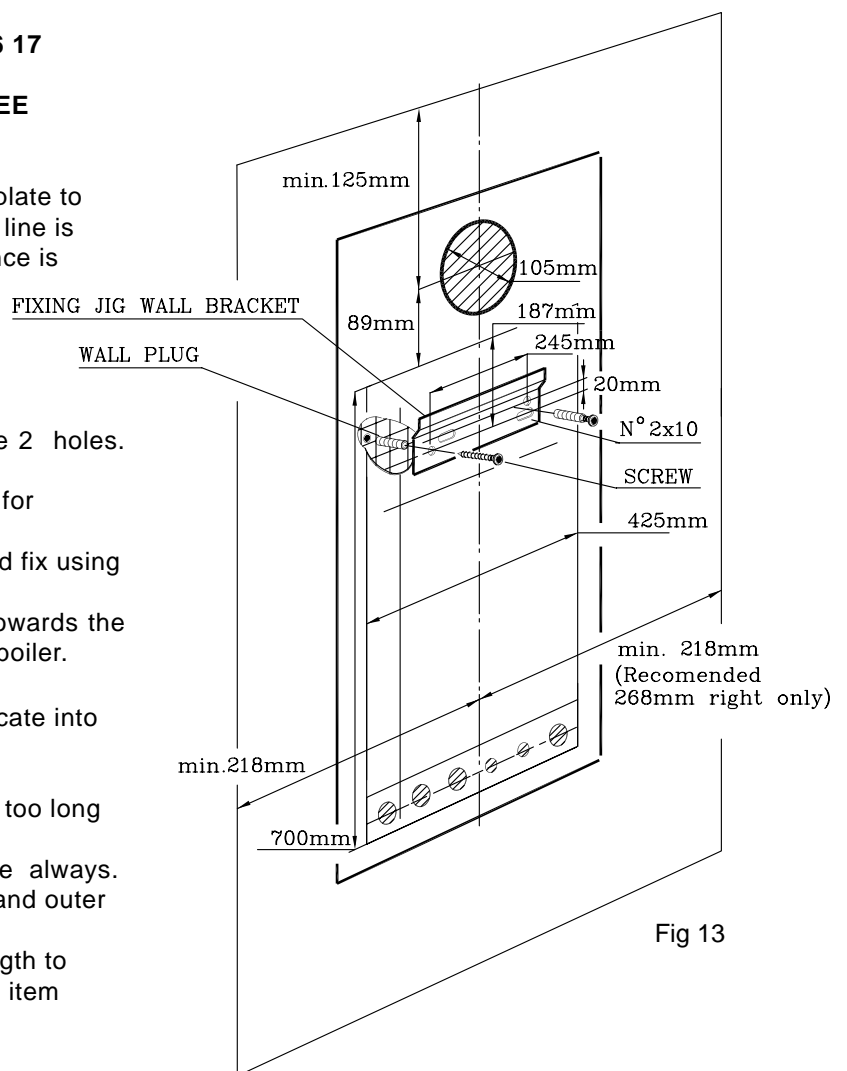


Fig 13

5.6 INSTALLING THE APPLIANCE FOR SIDE FLUE OUTLET (Fig. 14 15 16 17 18 19)

- 5.6.1**
- Attach the template to the wall with adhesive tape, making sure that the centre line is vertical and that the distance from the centre line to the nearest side wall is not less than measurement in Fig.14.
 - Mark the two fixing bracket securing holes on the wall and extend the axis of the flue duct hole to the side wall ensuring it is horizontal.
 - **Make sure flue slopes 1.5° down towards the boiler that is 25 mm fall per metre of the flue length.**
 - Trace the centre of the flue duct hole measure distance . From the corner of the wall (Fig.14), measure the distance (160 mm) between the centre of flue duct hole to the corner. Detach the template from wall.
 - Use a 10 mm. dia. drill to make the 2 holes for securing hanging bracket fixing. Insert the plastic expansion plugs. Core drill a 105 mm dia. hole in the side wall for inserting the flue duct.

5.6.2 Positioning the elbow towards the required direction on the boiler.

5.6.3 Make sure that rubber seal Ø 60 is located into the elbow.

5.6.4 If using horizontal flue duct and it is too long it can be shortened. Should it be necessary to cut the flue always. Cut equal amounts from both inner and outer pipes.

Note : add 30 mm to overall flue length to allow for terminal rubber wall seal. (Fig.10 item 127).

- Remove the centering spring, pull the flue terminal disengage inner flue duct.
- Measure the thickness of the wall.
- Cut the outer air duct (100 mm. dia.) at right angles.
- Cut the inner flue duct (60 mm dia.) at right angles.
- Outer air duct and inner flue duct must be de-burred.
- Reassemble the two tubes.

5.6.5 Insert the flue assembly into the wall, making sure it will not interfere when fixing the boiler on the wall.

5.6.6 Lift the boiler on the wall. Locate onto the wall fixing bracket.

5.6.7 Working above the boiler pull the flue duct towards the elbow in order to engage the tube into its header (Fig.10). Position flue into straight header and push so as to locate inner and outer flue correctly. Ensuring good seal is made with "O" rings.

5.6.8 IMPORTANT: Terminal rubber wall seal must be fitted (Fig.10 item 127).

5.6.9 Each extension length extends the pipe by approximately 1000 mm long up to a maximum of seven extensions. Pipeline length can be established using the instructions in section 5.5 for rear flue outlets and section 5.6 for side flue outlets. Extensions must be installed with the widened end of the air intake pipe and the tapered end of the flue pipe aimed towards the exhaust terminal. Extensions must be joined together with the standard terminal pipe, and inserted in each other as far as they can go. If an extension must be shortened, this must be done from the straight end, and not from the widened or tapered end. To measure the pipeline properly all components must be assembled and total length measured before cutting. The straight end of the extension connects to the boiler. The flue output and air intake pipes fits into the boiler header until it stops (Fig.17 - Fig.18).

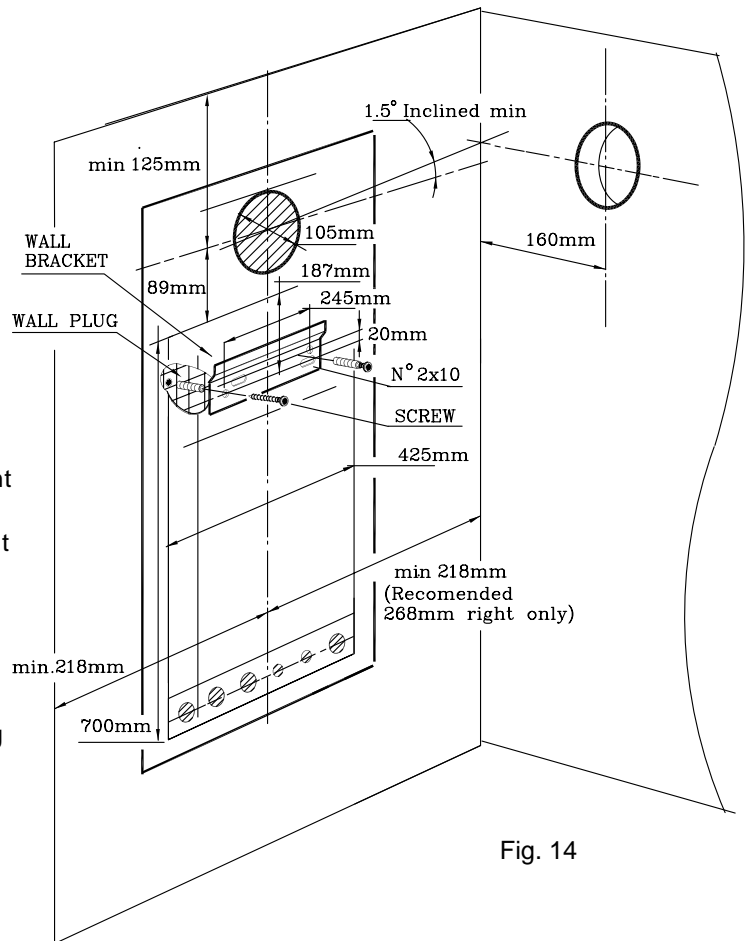


Fig. 14

When cutting both inner and outer ducts of the extension, always ensure that the reduced end (male) of the inner and outer duct are square and to the same length.

All joints must be sealed with the rubber seals supplied.

It is important to put the centering spacer, supplied with the unit, inside between the two pipes, from the side opposite the extension's straight end.

NOTE: a suitable support bracket is available from The White Boiler Company and should be used to support flue length at least every one metre preferably at each joint this bracket should be secured to wall and flue duct.

5.7 COMPLETING BOILER INSTALLATION

5.7.1 Reassemble the outer casing (sect 5.4) in reverse order.

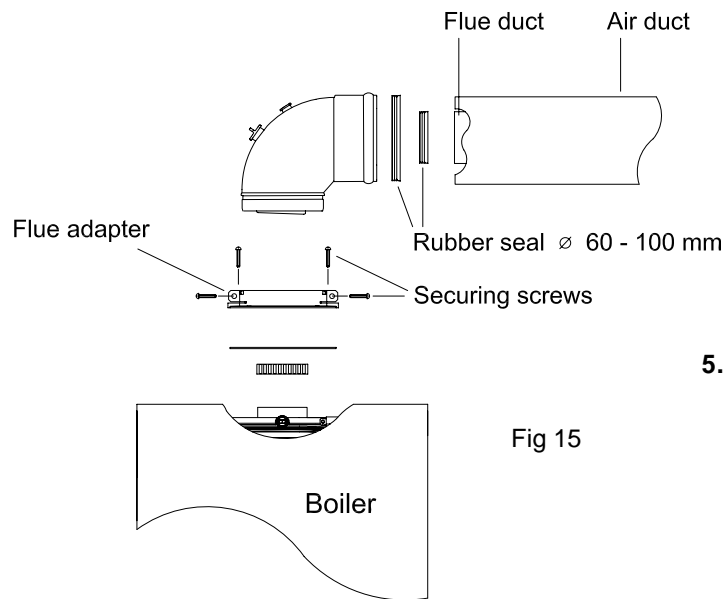


Fig 15

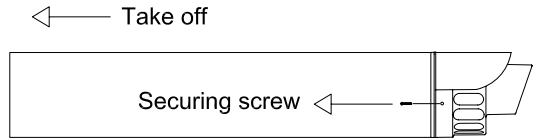


Fig.16

5.7.2 IN LINE FLUE BEND

Measure the distance between the flue bends or the flue/terminal assembly. The measurements should be taken from the outer edge of the flue and bend (Fig. 19).

IMPORTANT: inline flue bend - 1000 mm must be deducted from overall length for each 90° bend. Obtuse flue bend - 500 mm must be deducted from overall length for each 135° bend (Table 3 page 19).

INTAKE AND EXHAUST TERMINAL COMPONENTS

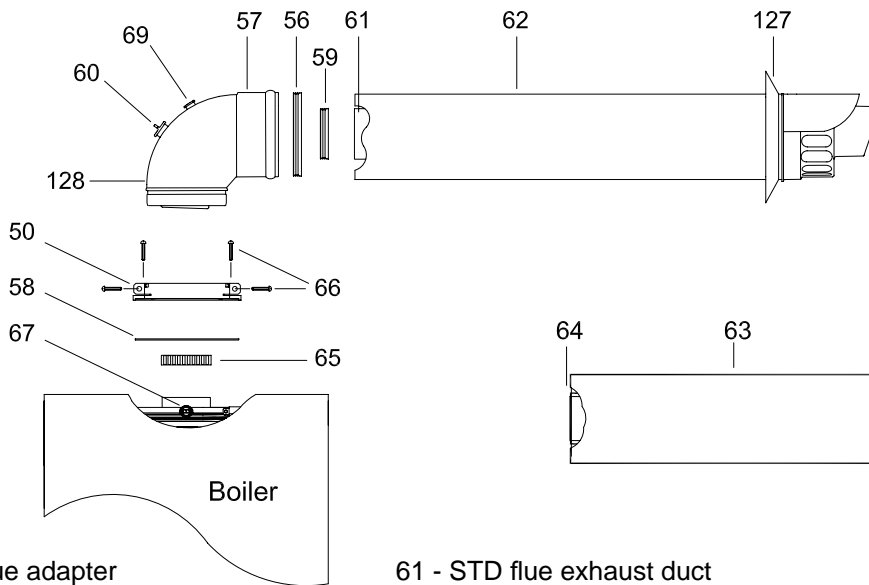


Fig.17

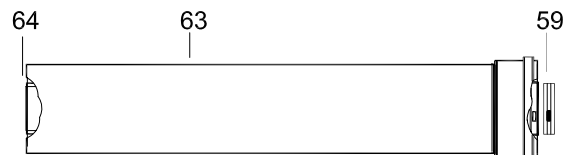


Fig.18

KEY

- 56 - Flue adapter
- 57 - Elbow header
- 58 - Header gasket
- 59 - Rubber seal Ø 60
- 60 - Fumes sample point

- 61 - STD flue exhaust duct
- 62 - Terminal
- 63 - Flue extension
- 64 - Flue exhaust duct extension
- 65 - Flue manifold rubber seal

- 66 - Securing screw
- 67 - Flue temperature sensor
- 69 - Air sample point
- 127 - Terminal Rubber wall seal

IN LINE FLUE BEND AND FLUE EXTENSION

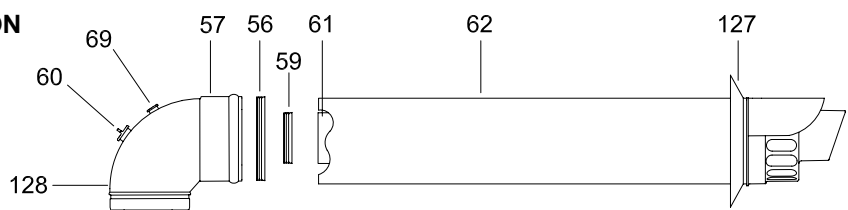


Fig.19

- 128 - In line Flue Bend
- 59 - Rubber seal Ø 60
- 63 - Air intake duct extension
- 64 - Flue exhaust duct extension

IMPORTANT: Please, lubricate the internal part of the seals before being fitted.

5.7.3 VERTICAL FLUE INSTRUCTION ONLY (Fig. 20-21-22) SEE FIG. 5 FOR PERMISSIBLE FLUE POSITION

IN LINE FLUE BEND - 1000 mm MUST BE DEDUCTED FROM OVERALL LENGTH FOR EACH 90° BEND
OBTUSE FLUE BEND -500 mm MUST BE DEDUCTED FROM OVERALL LENGTH FOR EACH 135° BEND.

The vertical flue kit is intended for use where a horizontal flue outlet is not possible or desired. The vertical flue can be used either with a flat roof or a pitched roof (maximum pitch 60°). Where a straight vertical flue is not possible or desired, an offset vertical flue can be used in conjunction with a side horizontal flue extension piece and inline 135°/90° flue bend (Fig. 20).

IMPORTANT NOTES : For greater flue length see twin flue or concentric 80/125 flue instructions

Proceed with installation as detailed in section 5 up to 5.5.8., of the main Installation and Servicing Instruction, ignoring all references to horizontal flue installations.

Use adhesive tape to attach the template to the wall, making sure that the centre line is vertical and that the flue centre line is virtually below the point at which the flue will exit the roof.

L + L = 8m Max

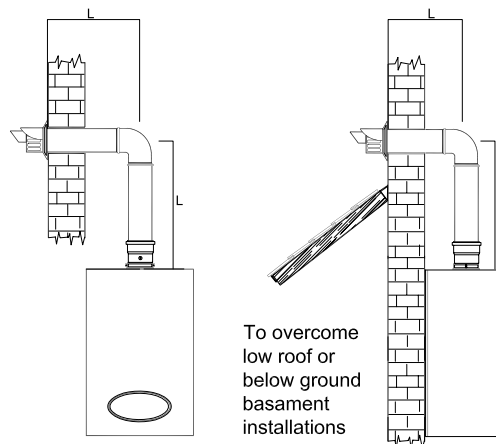


Fig. 20

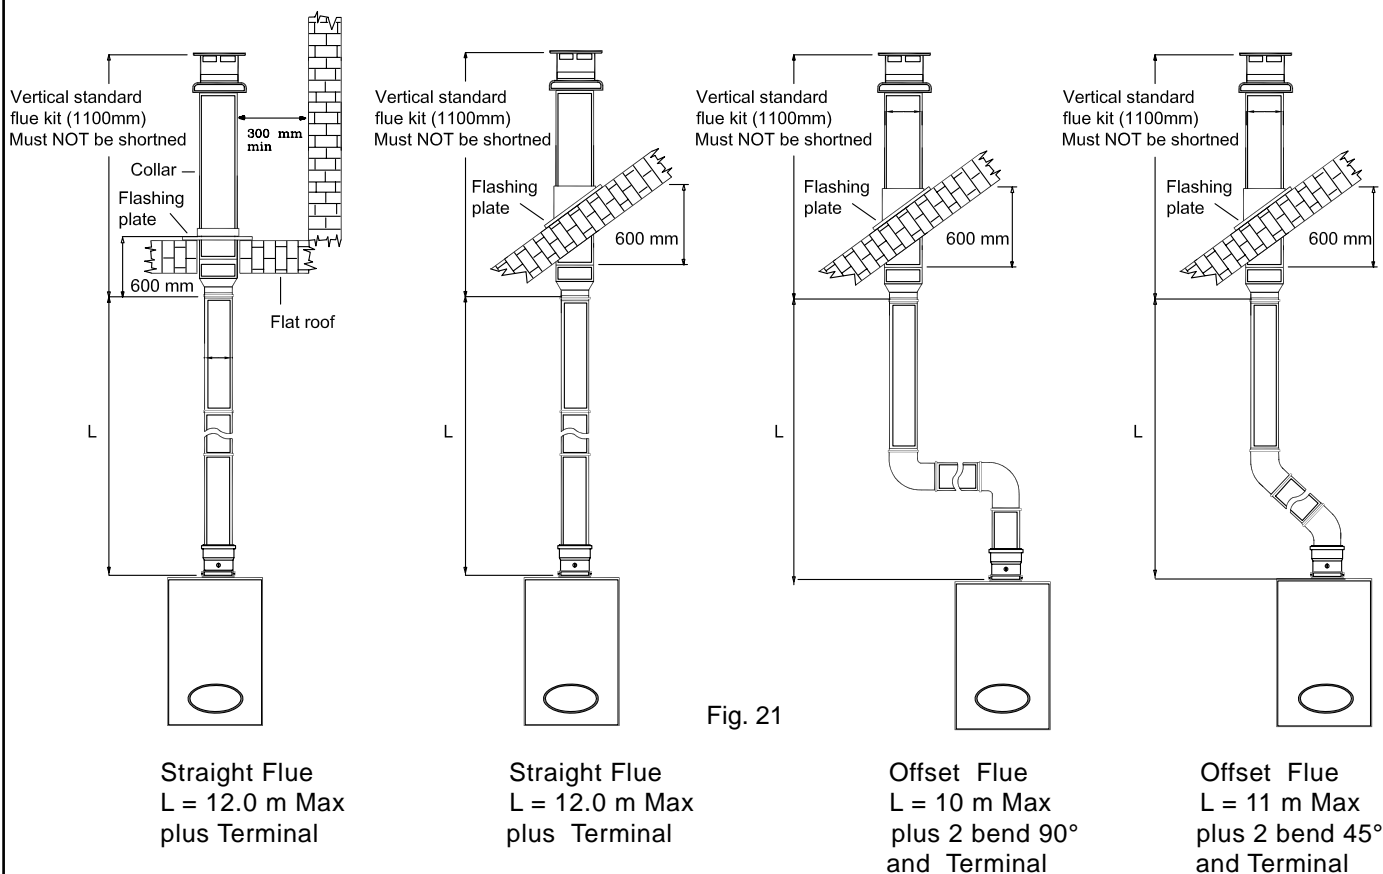


Fig. 21

- Ensure that the maximum permissible flue length is not exceeded (Fig. 21 and table 3).
- Mark the two wall fixing bracket securing holes on the wall.
- Detach the template from the wall.
- Use a 10 mm dia. drill to make the 2 holes securing fixing hanging bracket.
- Insert plastic expansion plugs (Fig. 18).
- Screw in the two coach bolts.

- Position the flue sample point starter (must be fitted) and fix the securing screw on the flue adaptor appliance (Fig. 23) item 66, and ensure that the gasket is correctly fitted.

Important: Make sure that the flue extension dia 60 mm duct is inserted fully into the flue manifold, and the flue manifold rubber seal is correctly fitted.

Cut a 105 mm diameter hole through the ceiling and/or roof, at the point previously marked.

Fit a roof flashing slate to the roof, available from The White Boiler Company.

Insert the Vertical Flue terminal assembly through the flashing slate from the outside.

Fix the appliance to the wall, locating onto the wall fixing bracket.

Measure the vertical distance between the top of the flue and the bottom of the flue terminal assembly (Fig. 22). The measurements should be taken from the outer diameter of the flue.

NOTE: Where this length does not match any standard combination of the extensions, only extension can be cut to the required length (Fig. 24).

When cutting both inner and outer ducts of the extension, always cut on spigot side, and they must be de-burred.

Starting at the appliance end, assemble the extension duct sections, making each inner and outer (flue) joint by inserting the spigot end into the socket end of the next tube, making sure the seal rings are correctly located (Fig. 23). Make sure that the entire flue is adequately supported. Use at least one bracket for each extension used.

Ensure that all inner flue connections have a good fit/seal, and that the space clips in each extension are correctly positioned.

ACCESSORIES CONCENTRIC FLUE 60/100 EXTRAS:

Part. No.	Description
PR5094110A	Straight flue header / sample point 60/100
PRFE	Flue Extension 60/100 L1000
PR45FBI	45° bend 60/100
PR90FBI	90° Elbow bend 60/100
PR5023016	Horizontal terminal 60/100
PR5023016	Horizontal flue kit
TER110200	Vertical flue Terminal

TABLE 4


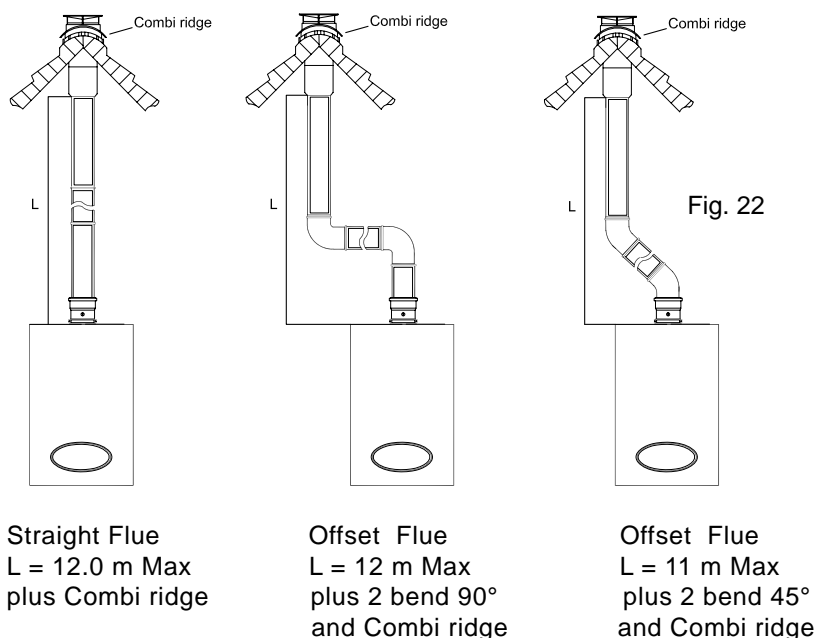


Fig.24

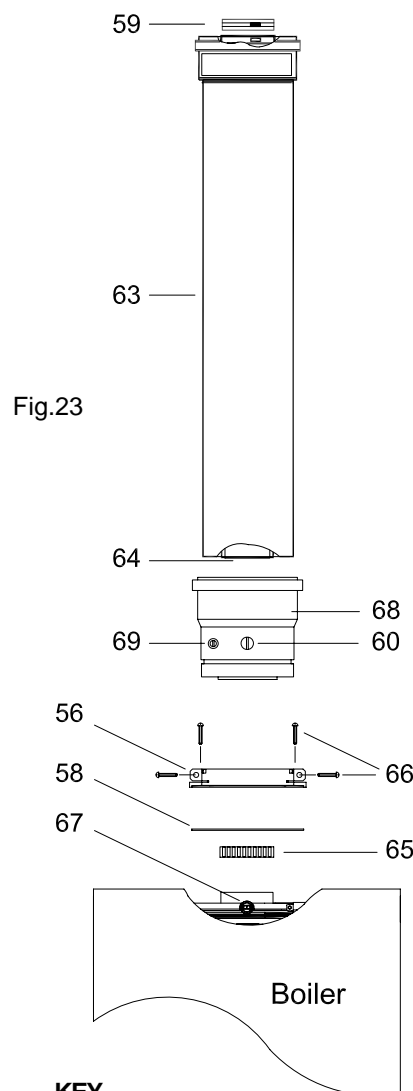

KEY

- 56 - Flue adapter
- 58 - Header gasket
- 59 - Rubber seal Ø 60
- 60 - Fumes sample point
- 63 - Flue extension
- 64 - Flue exhaust duct extension
- 65 - Flue manifold rubber seal
- 66 - Securing screw
- 68 - Flue starter
- 69 - Air sample point

IMPORTANT: Please, lubricate the internal part of the seals before being fitted.

5.8 INSTALLATION INSTRUCTIONS FOR TWIN FLUE PIPE (ECCENTRIC FLUE DUCT SYSTEM)

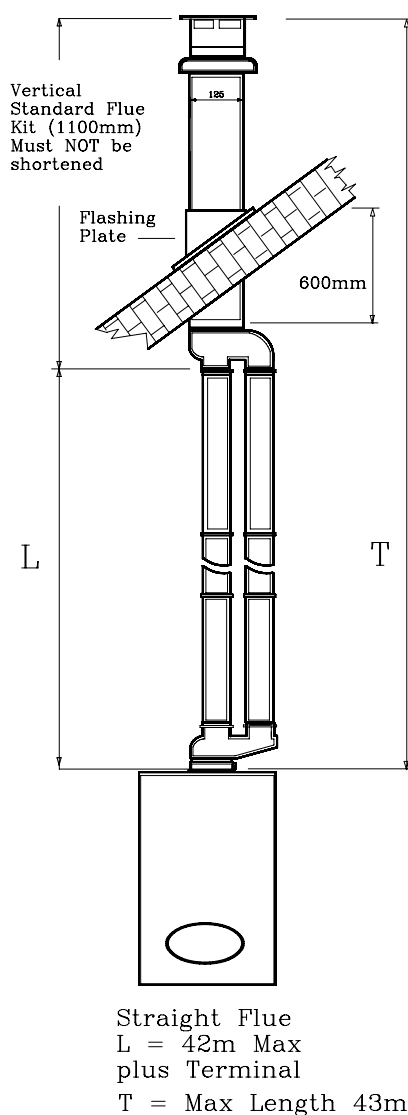


Fig. 25

IMPORTANT: Please, lubricate the internal part of the seals before being fitted.

IMPORTANT

These instructions must be read in conjunction with the main installation and servicing instructions. As with all flues the kits must be installed taking due account of the current issue of BS 5440 parts 1 & 2 and timber frame housing DM2 is referenced to the Institute of Gas Engineers Document IGE/UP/7. Also note that the requirements will vary depending upon the kit being installed. Guidance is provided but unless otherwise stated, always comply with the recommendations of the relevant codes of practice.

Part. No	Description
SDO110050	Twin flue header F80/F80
PRO110200	Straight pipe L.1000 80
CUR110150	90° elbow bend 80
CUR110200	45° bend 80
GRI110050	Air inlet terminal 80
GRI110100	Exhaust terminal 80
TER060110	Vertical eccentric flue Terminal

5.8.1 TWIN FLUE INSTRUCTIONS

This part of the installation manual covers the installation and fixing instructions of the twin flue eccentric flue duct systems only. When ordering twin flue it must be stated for WH 100/130 range. Typical installation procedures are illustrated by drawings. Remove the front panel of the case (sect.8.1). Unscrew the screw (Fig.17 item 66) on the flue adapter.

Make sure that the Flue manifold rubber seal is located into the flue manifold, and lubricate the internal part of the seal before assembly. Locate the header gasket on the twin flue header and push into the flue adaptor (Fig.17 item 56) making sure that the inner plastic exhaust locates firmly in the outlet spigot of the flue manifold, and screw the securing screw that secures the twin flue header on the boiler.

Locate the 2 x 80 mm 'O' rings in the twin flue header and lubricate the internal part of the seal before assembly to ensure easy snug fit.

Figures show the versatility of this flueing system. Measurements and bends must be calculated correctly so as not to oversize maximum flue lengths.


All located 'O' rings must be lubricated with a silicone grease to ensure easy, snug fit.

NOTE: Exhaust flue must slope 1.5° down towards the boiler 25 mm/m fall per metre of flue length.

Spacing Clips

Spacing Clips are available on request should they be required.

NOTE: for eccentric vertical flue a 125 mm (5 in) diameter flashing plate will be required.

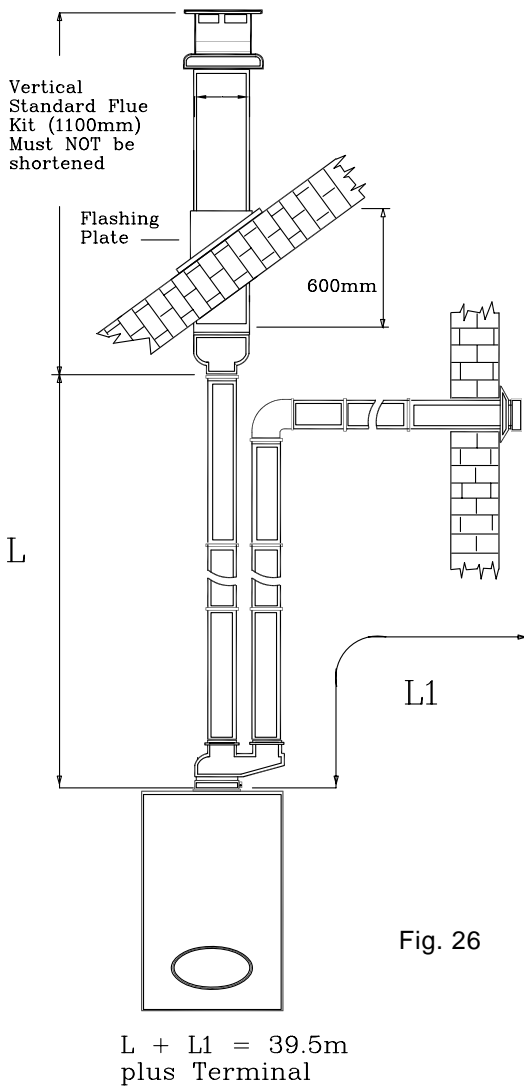


IMPORTANT:

- See Fig. 5 for terminal clearances.
- The pressure loss see table 3.

IMPORTANT NOTICE:

- inlet and exhaust terminals must never be installed on opposite walls of the building (PrEN 483).
- If the flue terminates less than 2 m above a balcony, above the ground, or above a flat roof to which people have access, then a suitable terminal guard must be fitted.
- Fit only recommended flue terminal guard by securing concentrically around terminal with screws.

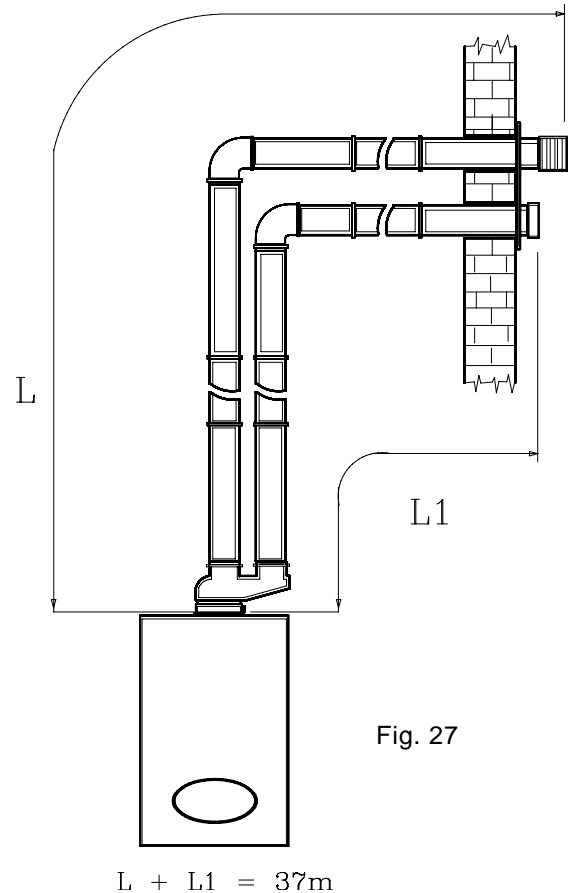

5.8.2 Exhaust/suction system with concentric pipes for flat or sloping roofs. Extensions with two separate pipes (Fig. 25).

Maximum distance : $T = L = 21 + 21 = 42$ metre + Terminal

Minimum distance : $L = 0.5 + 0.5 = 1$ metre + Terminal

Exhaust terminal must not be cut.

NOTE:

- If bends are used in the exhaust flue then horizontal sections must be avoided and there must be a 1.5° slope towards the boiler 25 mm fall per metre.

5.8.3 Exhaust/suction system with two separate rated 80 dia. Pipes - exhaust on flat or sloping roof, suction from vertical wall (Fig. 26).

Maximum distance $D = L + L1 = 39.5$ metre + Terminal

Minimum total length = 2 metre

NOTE: Exhaust flue must slope 1.5° down towards the boiler 25 mm fall per metre.

5.8.4 Exhaust/suction system with two separate pipes through a single vertical wall (Fig. 27).

Maximum distance : $D = L + L1 = 37$ metre

Minimum distance : $D = L + L1 = 1$ metre

Min distance between pipe 50 mm.

IMPORTANT: Please, lubricate the internal part of the seals before being fitted.

Available on request from:
THE WHITE BOILER COMPANY
 Chartist Way, Morley, Leeds, West Yorkshire
 ENGLAND LS27 9ET - U.K.
 Tel. 0044(0) 113 252 7007

5.9 INSTALLATION INSTRUCTIONS FOR CONCENTRIC 80/125 FLUE SYSTEM


5.9.1 The vertical 80/125 flue kit is intended for use where a horizontal 60/100 flue outlet is not possible or desired. The vertical flue can be used either with a flat roof or a pitched roof (maximum pitch 60°). Where a straight vertical flue is not possible or desired, an offset vertical flue can be used in conjunction with a side horizontal flue extension piece and an inline 135°/90° flue bend (Fig. 28).

IMPORTANT:


- See Fig. 5 for terminal clearances.
- The pressure loss see table 3 page 19.

IMPORTANT NOTICE:

- When using our vertical flue kit the 125 mm x 100 reducer is supplied complete with the vertical terminal simply remove this and fix it into the flue adaptor on the top of the boiler.

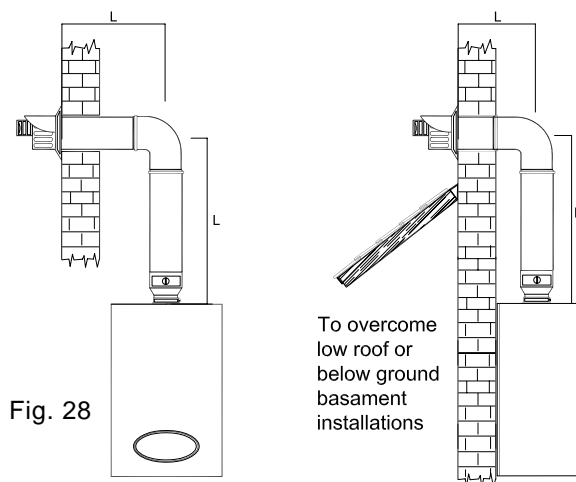

$L + L = 23.5\text{m Max}$

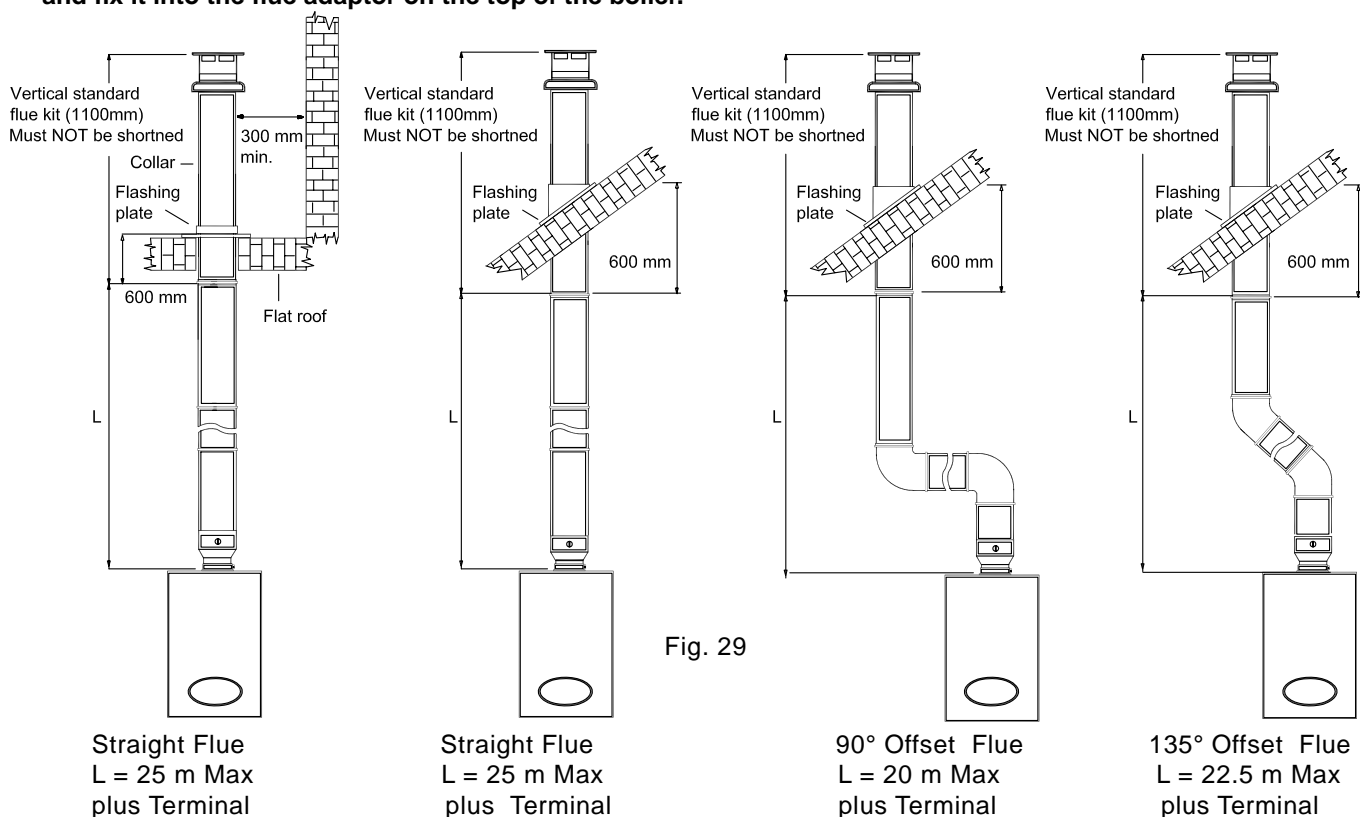

NOTE : If using Flue arrangement in Fig. 28 then the 125x100 Flue reducer must be purchased separately.

Part No	Description
PR5094110A	Straight flue header / sample point 60/100
PRO110300	Flue Extension 80/125 L1000
RID110050	125/80 to 100/60 Flue reducer
CUR110250	45° flue bend 80/125
CUR110300	90° elbow flue bend 80/125
TER010050	Horizontal Flue Terminal 80/125
TER110200	Vertical Flue Terminal 80/125
TEG060050	Flashing sleeve/slate

IMPORTANT: Please, lubricate the internal part of the seals before being fitted.

Available on request from:
THE WHITE BOILER COMPANY
 Chartist Way, Morley, Leeds, West Yorkshire
 ENGLAND LS27 9ET - U.K.
 Tel. 0044(0) 113 252 7007

5.10 ASSEMBLE BOILER

5.10.1 Fitting valve pack

Remove plastic caps from boiler connection and fit valves as per Fig. 31 using washers provided.

It is recommended fixing the valve pack before installing the boiler on the wall.

5.11 GAS CONNECTION (Fig. 31)

5.11.1 A minimum working gas pressure of 20 mbar (8 in w.g.) must be available at the boiler inlet at full flow rate (37 mbar for propane, 29 mbar for butane).

5.11.2 Fit gas service cock to the boiler via the union nut and connect gas pipe. Do not overtighten and use another spanner as a counter force to avoid straining internal connections. Important consult (sect 4.5.1).

5.12 CENTRAL HEATING CONNECTION (Fig. 31)

IMPORTANT:

when initially filling the system (with the front cover off) open the manual air vent (fig. 30) taking care to avoid spilling water, and re-close prior to commissioning and operating the boiler.

Manual air vent

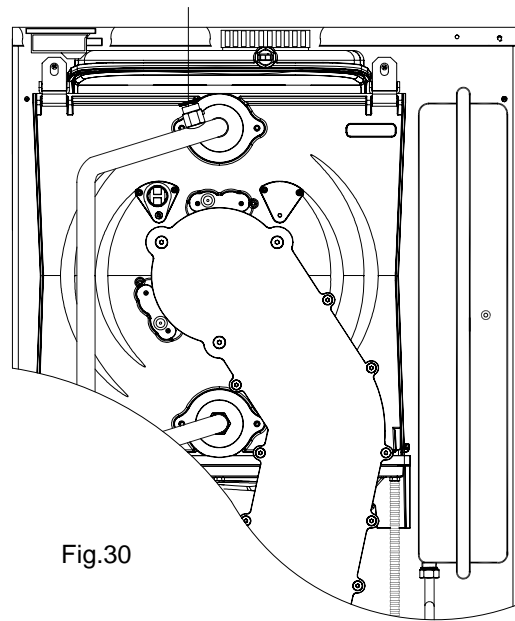


Fig.30

5.12.1 Before any central heating connections are made to the boiler all system valves should be opened and the system thoroughly flushed out with cold water.


- Connect the central heating return pipe to the isolating cock.
- Connect the central heating flow pipe to the isolating cock marked CHF.
- Pipe dimensions and positions are marked on template supplied and fig. 32.

5.13 DOMESTIC HOT WATER (Fig. 31)

5.13.1 The domestic hot water circuit does not need a safety valve but it is essential to ensure that the pressure of the cold water supply does not exceed 10 bar. If in doubt it is advisable to install a pressure reducing valve. The minimum pressure needed to operate the domestic hot water system is 0.5 bar with a flow of approx 3 Lts per min. Flush out all foreign matter from the supply pipe before and after connecting to the appliance.

- Connect the 15 mm. cold water pipe to the appliance inlet.
- Connect the 15 mm. hot water pipe to the appliance outlet.

Fig.31

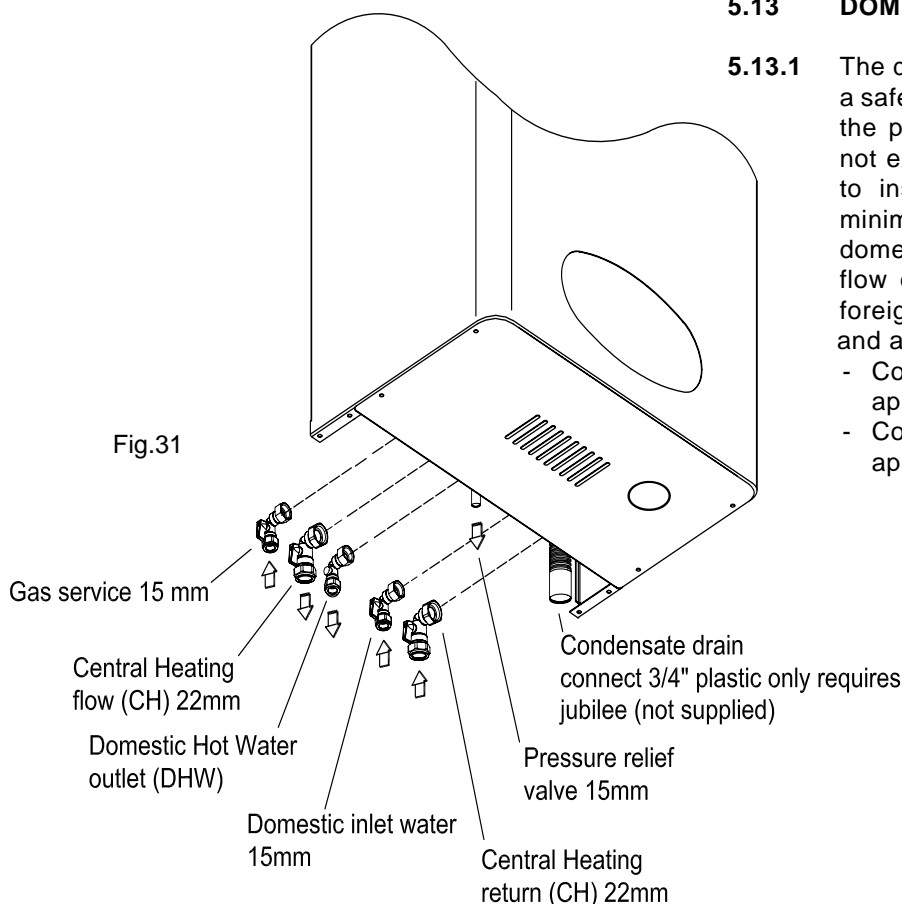

5.14 SAFETY VALVE DISCHARGE

- 5.14.1** The safety valve is located to the rear (15 mm copper) to permit a discharge pipe to be connected. When connecting ensure the discharge pipe does not restrict access. The discharge should terminate facing downward exterior to the building in a position where discharging (possibly boiling water & steam) will not create danger or nuisance, in easily visible position, and not to cause damage to electrical components or wiring. The discharge must not be over an entrance or a window or any other type of access.

5.15 CONDENSATE DRAIN CONNECTION

- 5.15.1** The condensate drain connection is a flexible 3/4" pipe and is therefore adjustable Fig. 31.

The drain pipe should have a fall of at least 2.5° away from the boiler. Condensate should, if possible be discharged into the household internal drainage system.

If this is not practicable, discharge can be allowed into the external household drains or a purpose designed soak away.


It is recommended that any external condensate drain pipe is insulated and also must be of 40 mm (1 1/2") diameter, through the outside wall to prevent freezing in adverse weather conditions. The condensate is discharged periodically in "slugs" by siphonic action. It is not necessary to provide air breaks or extra traps in discharge pipe as there is already a 125mm high trap inside the boiler.

Fitting an extra trap may cause the boiler siphon to work incorrectly.

Refer to BS5546 or BS6798 for advice on disposal of boiler condensate.


Notes: ALL EXTERNAL PIPE RUNS MUST BE IN ACCORDANCE WITH BS 6798

1 - INTERNAL TO SINK WASTE UPSTREAM OF SINK WASTE TRAP

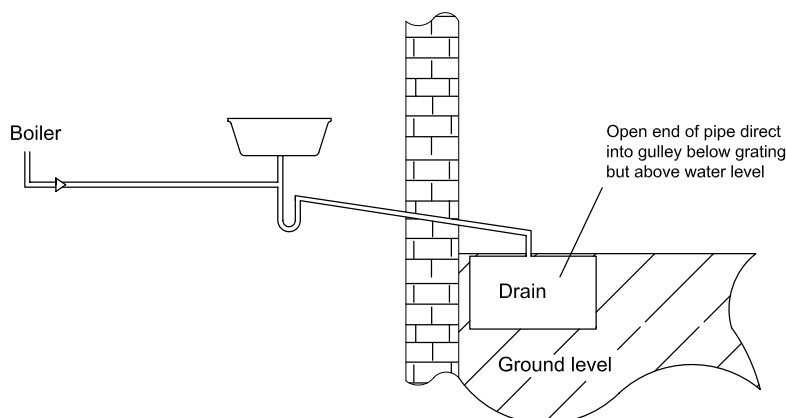


2 - INTERNAL CONNECTION TO SOIL AND VENT STACK


Make connection to SVP using a solvent welded saddle.

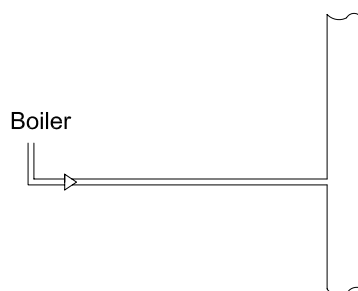

3 - TERMINATION TO SOAK AWAY

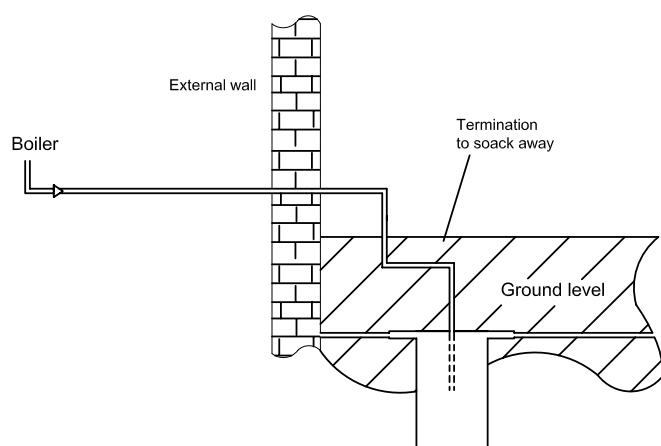

4 - TERMINATION TO DRAIN / GULLY

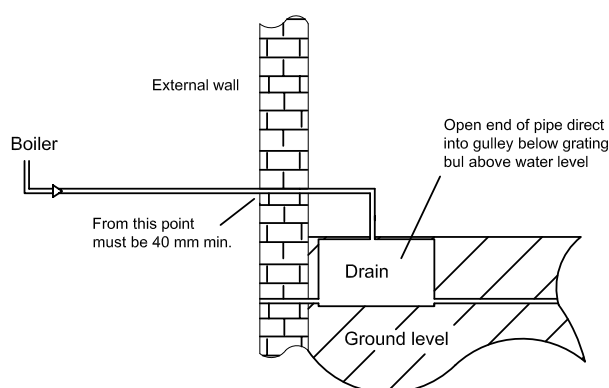

5.16 CONVERTING THE APPLIANCE TO DIFFERENT GAS TYPES

5.16.1 Boilers are factory set to work for use with Natural gas or LPG gas. This is clearly marked on the packing and boiler data badge.

To convert a boiler from one gas to another this operation must be carried out by a qualified competent person, with all necessary equipment authorised by the manufacturer.

It will also be necessary to obtain a data badge conversion kit directly from The White Boiler Company.

- 1 - Remove the case.
- 2 - Check gas mains pressure at the gas valve test nipple upstream (Fig.34) with boiler operating. Sect.6.8.
- 3 - Adjust Fan Speed as Sect.3 (technical data).
- 4 - Measure the level of CO₂ as sect.6.9 and adjust to correct data settings information.
- 5 - Affix new data badge.
- 6 - Replace in reverse order.

5.17 ELECTRICAL CONNECTIONS

5.17.1 IMPORTANT: Electricity supply must be as specified in clause (sect. 4.10).
- When controls external to the appliance are required, design of the external electrical circuits should be undertaken by a competent person. In accordance with the IEE wiring regulations.

It is essential that all external controls are VOLT FREE.

Factory fitted internal wiring must not be disturbed when wiring external controls.

- To gain access to the electrical box remove the front panel of the case as described in clauses sect. 8.1.4.

You can slide towards the top the instrument panel box and push the retaining latches and remove the instrument panel (Sec. 8.19).

- Heat resistant flexible cable is fitted between the isolator and the terminal block A 3 core cable of 0.75 mm² (24x0,2 mm) to BS 6500.

Make sure all wires to the appliance are routed away from sharp edges and hot surfaces.

The cable must be fastened with its cord anchorage and connected so that should the cable slip from the anchorage the current carrying conductors become taut before the earthing conductor. Securely tighten all terminal screws and arrange the cable with slack between the cord anchorage and the terminal block.

WARNING: If the supply cord is damaged, it must be replaced by a service engineer (supply cord available from The White Boiler Company).

5.18 PROGRAMMABLE TIMECLOCK

Instructions for use consult User's Guide.

5.19 OUTDOOR SENSOR

For use, consult Outdoor Sensor instructions.

POSITION OF WATER AND GAS CONNECTIONS

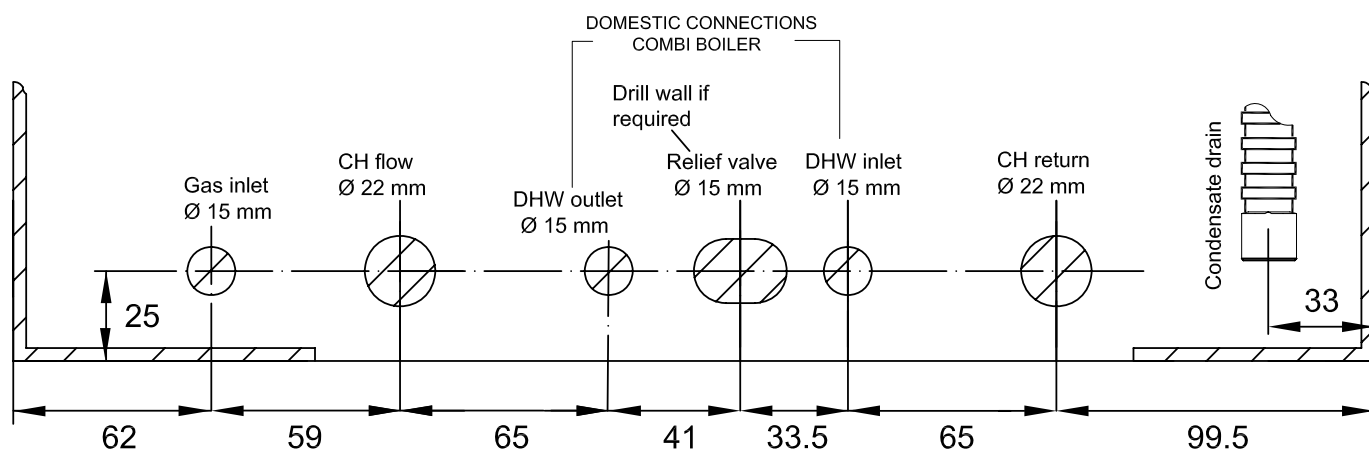


Fig. 32

INSTRUMENT PANEL

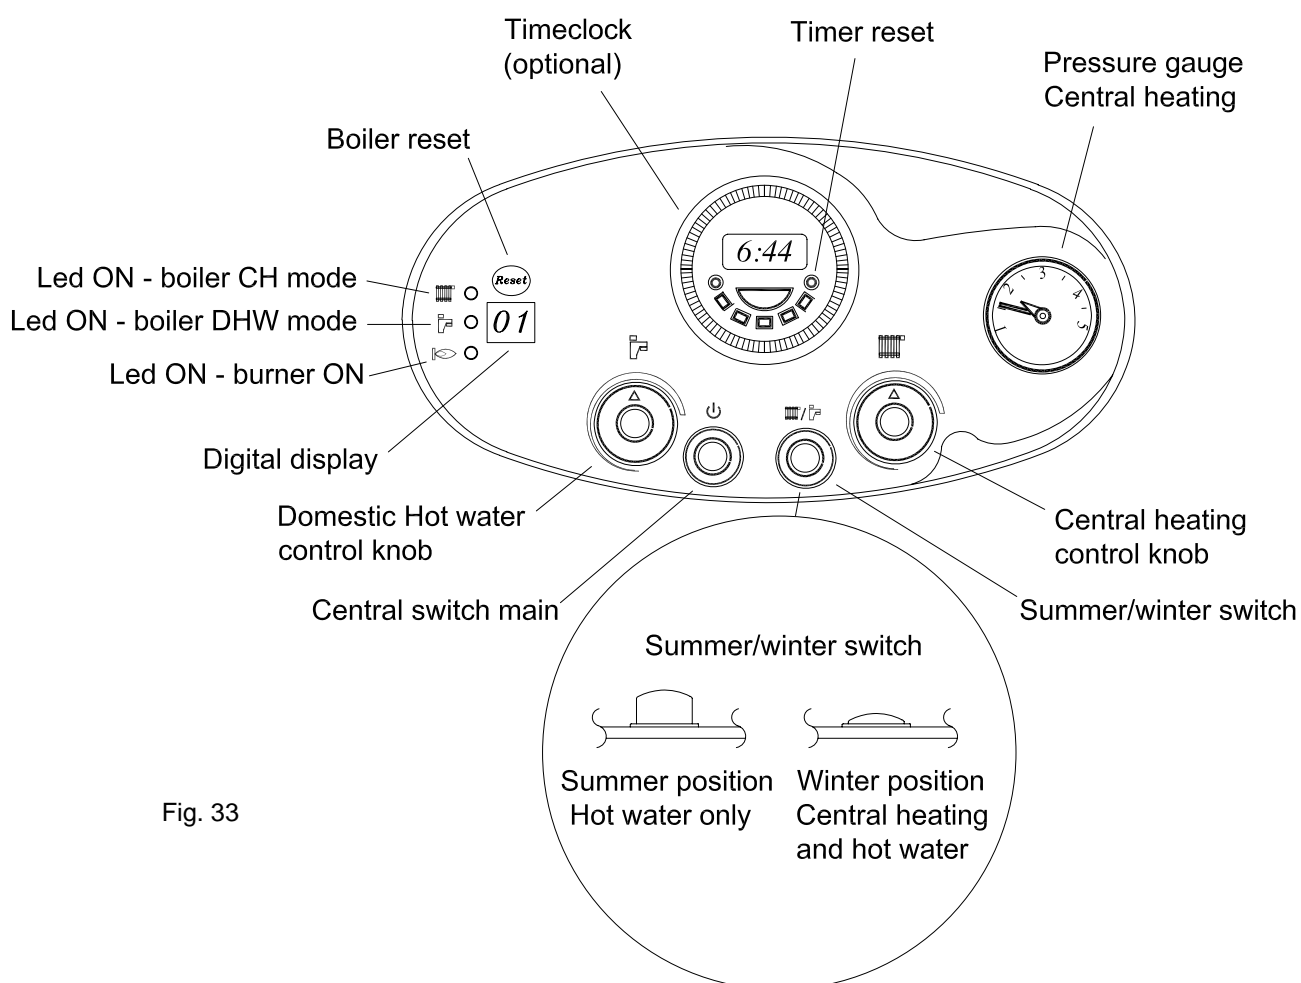


Fig. 33

SECTION 6 COMMISSIONING

6.1 Each boiler has been through a rigorous operational procedure at our factory and should not require any further adjustment, if you are not the installer but just commissioning this boiler check that the boiler has been installed in accordance with these instructions, and the integrity of the flue system and the flue seals, as described in the Flue installation section.

6.2 GAS SUPPLY INSTALLATION

6.2.1 Inspect the entire installation including the gas meter, test for soundness and purge, all as described in BS 6891.
In IE refer to IS 813:2002.

6.3 ELECTRICAL INSTALLATION

Preliminary electrical systems checks to ensure electrical safety shall be carried out by a competent person.

ALWAYS carry out the preliminary electrical system checks:

i.e. earth continuity, polarity, resistance to earth and short circuit, using a suitable test meter.

6.4 INITIAL FILLING OF THE SYSTEM

Open central heating flow and return valves
Unscrew the cap on automatic air release valve positioned on the top of the pump housing one full turn (leave open permanently).

- Close all air release taps on the central heating system.
- Gradually open stopcock at the filling point connection to the central heating system until water is heard to flow.
- Starting with the lowest radiator open each air release tap in turn. Close it only when clear water, free of bubbles, flows out. In the same way release air from any high points in the pipework.
- Open the manual air vent at the boiler heat exchanger flow pipe, see fig. 30, may require repeating to assist commissioning.

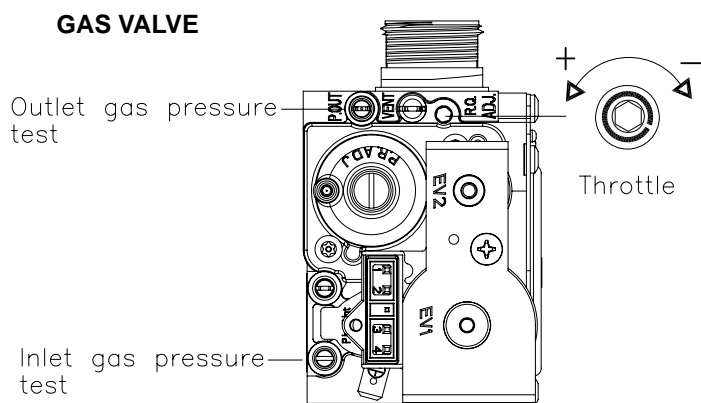


Fig. 34

- Continue filling the system until 1.5 bar register on gauge. Then turn off the filling points stopcock.
- Inspect the system for water soundness and remedy any leaks discovered.

6.5 SETTING THE HEATING SYSTEM DESIGN PRESSURE

The design pressure must be a min. 1 bar and max. 1.5 bar. These figures are read off the pressure gauge.

- The actual reading should ideally be 1 bar + the height in metres to the highest point of the system above the base of the appliance (up to max of 1,5 bar).
N.B.: The safety valve is set to lift at 3 bar (30 mt/42.5 psi).
- To lower the system pressure to the required value remove at the drain point (fig. 35) or drain on the heating circuit.

6.6 FILLING THE HOT WATER SYSTEM

Close all hot water draw-off taps.

Open the cold water inlet cock.

Slowly open each draw-off tap until clear water is discharged.


6.7 LIGHTING THE BOILER

Before lighting the boiler make sure that the heating circuit flow and return valves are open and also that the cold water input cock is open.

- If external controls are installed (e.g. timeclock and thermostat) make sure that they call for heat.
- Push Summer/Winter switch Fig.33 to Winter.

IMPORTANT:

Before switching on the boiler POWER SWITCH FOR THE FIRST TIME when commissioning, turn the heating control knob (Fig.33) DOWN TO ITS MINIMUM setting leaving it at minimum for approx 5 mins to purge air safely from the boiler heat exchanger.

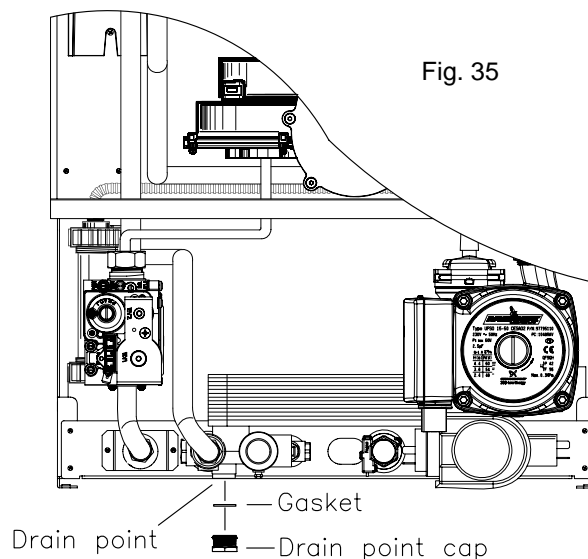

- Turn control knob (Fig.33) down to its **minimum** setting.
- Push the power main switch to on (Fig.33)
- The digital display will show water set point temperature in central heating.
- The fan starts and after a second or so the digital led display will show that the ignition has commenced.

- NOTES : It maybe necessary to reset the Digital Timer on boiler (if fitted) to start.

Put the timer to on position (Fig.33).

- The ignition control will automatically have three attempts , but initially this may be due to air in the gas supply line.If the burner fails to light, the digital led display and fan will stop, and the display will show the lockout code.
 - If necessary push the boiler Reset button (Fig.33) and the boiler will restart automatically.
 - After the boiler has lit, allow to warm at minimum temperature setting to purge any air from the system.
 - Once the system has been purged of air turn the control knob to the desired position.
- With leak detection fluid test for gas tightness of all gas components and joints.See paragraph 6.14 for regulating the heating circuit control knob.

6.8 CHECK THE GAS PRESSURE

Check the gas mains pressure at the gas valve inlet pressure test (Fig.34) with boiler operating.

Check with the Local Gas supplier if the pressure differs significantly from 20 mbar G20 (natural gas), 37 mbar G31 (propane) and 29 mbar G30 (butane).

IMPORTANT : the Gas Valve Throttle adjuster is required to be sealed with tamper proof paint after adjustment (fig. 34).

6.9 COMBUSTION CHECK

Check gas carrying components along with, the combustion of the appliance which should be checked as follows.

Remove the front panel of the case.

Ensure the boiler and external controls are calling for heat. Turn on electrical supply. Open the Hot water tap at maximum flow rate. Wait at least five minutes or until the unit has reached its operating temperature.

Unscrew the test sample screw on the boiler elbow bend (Fig.10 item 60). Measure the level of CO₂. Check the reading against the corresponding value in sect.3 TECHNICAL DATA. If adjustment proves necessary then proceed as follows.

IMPORTANT : Any adjustment to the gas valve should only be carried out by a qualified person.

Refer to tables 1/A, 1/B, 1/C and 1/D section 3 adjust the maximum level of CO₂ by turning the Throttle (allen screw 2.5 mm) on the gas valve (Fig.34).

Anti-clockwise to increase CO₂.

Clockwise to decrease CO₂.

After any new regulation wait to stabilise about one minute.

- Replace the sample point screw on the flue manifold (Fig.10 item 60).
- Replace the front panel of the case.

IMPORTANT: do not insert analyser probe into the sample point immediately or for long periods. This will prevent saturation of the analyser.


During the calibration function the combustion ratio may increase for short time while the boiler performance is optimised.

The person carrying out a combustion measurement should have been assessed as competent in the use of a flue gas analyser and be able to interpret of the results.

The flue gas analyser used should be one meeting the requirements of BS7927 or BS-EN50379-3 and be calibrated in accordance with the analyser manufacturer's requirements.

ELECTRODES POSITION

Fig. 36

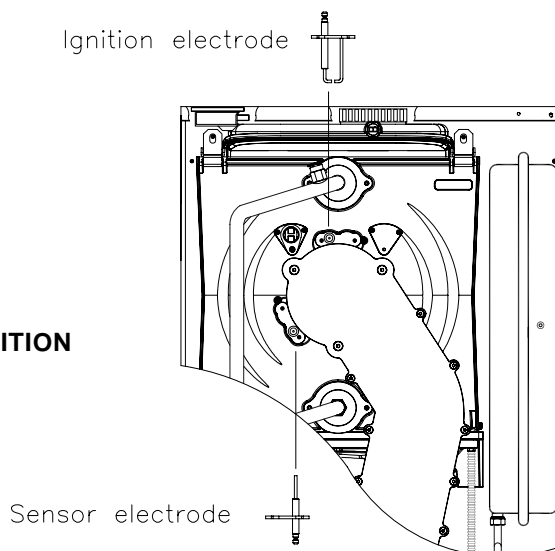

ATTENTION
IT IS A CONDITION OF THE MANUFACTURERS WARRANTY THAT THE BENCHMARK COMMISSIONING CHECKLIST IS FULLY COMPLETED AND LEFT WITH THE APPLIANCE



Once the process of commissioning the boiler is complete, the commissioning engineer **MUST** complete his section in the Benchmark log book.

6.10 CHECKING THE FLUE SYSTEM

- 6.10.1** The flue system should be visually checked for soundness. Check all connections and fixings are secure and tight.

6.11 CHECKING THE HEATING THERMOSTAT

- 6.11.1** Allow the system to warm up and then turn the C.H thermostat to ensure the main burner modulates from "high" to "low" and "low" to "off" and vice versa (scale range covers approx 45°C - 80°C).

6.12 TESTING AND REGULATING THE DOMESTIC HOT WATER SYSTEM FLOW

6.12.1 CHECK THE OPERATIONAL (WORKING) INLET PRESSURE

Set up the boiler to operate at maximum rate by opening the hot tap to maximum flow. With the boiler operating at the maximum rate check the operational dynamic (working) gas pressure test complies with the requirements.

Ensure that this inlet pressure can be obtained with all other gas appliances in the property working.

- 6.12.2** Put the appliance in summer position with the summer/winter switch (Fig.33).
- Open a domestic hot water tap (preferably the bath tap). Ensure cold water inlet stopcock is open and the D.H.W. control knob (Fig.33) is set at maximum.
 - Digital display shows water temperature in demand (led on).
 - If the boiler does not light check that the water flow rate is above the min. required to operate the differential pressure 2.8 Lts./min. (0.61 gals/min).

- The temperature of the water will depend on the rate at which it flows. If, due to high water pressure, the flow rate is too high (and the temperature too low for practical use) the flow rate may be adjusted. It is better to set for the lowest acceptable temperature preferably at the bath tap since the user can gain higher temperatures at other restricted flow taps.
- If the cold supply is subject to large fluctuations or is above the permitted max. water pressure, a suitable pressure/flow regulator should be fitted in the cold water supply to the appliance.
- Slowly close the draw off tap to reduce the flow rate to the min (approx. 2.8 litre/min).
- Rotate the D.H.W. control knob to ensure it operates at its various setting.
- Close the draw-off tap still further. The burner should stop when the rate falls below about 2.8 litres/min (0.61 gals/min).

6.12.3 CHECKING MAX/MIN. FAN SPEED (see tables 5/A and 5/B).

6.12.4 To check max fan speed, place the jumper on JP16, and select the summer/winter switch in winter position (DHW tap open). See sect. 6.14.1 and fig. 39. To check min fan speed, place the jumper on JP16, and select the summer/winter switch in summer position (DHW tap open). See sect. 6.14.1 and fig. 39. This can be checked using a (frequency) meter JP2.

IMPORTANT: DO NOT ADJUST THE MINIMUM SET POTENTIOMETER R10, THIS IS SET AN SEALED. THIS CAN BE CHECKED USING A FREQUENCY METER JP2. (Fig. 39a).

RATIO BETWEEN FAN SPEED AND HEAT INPUT

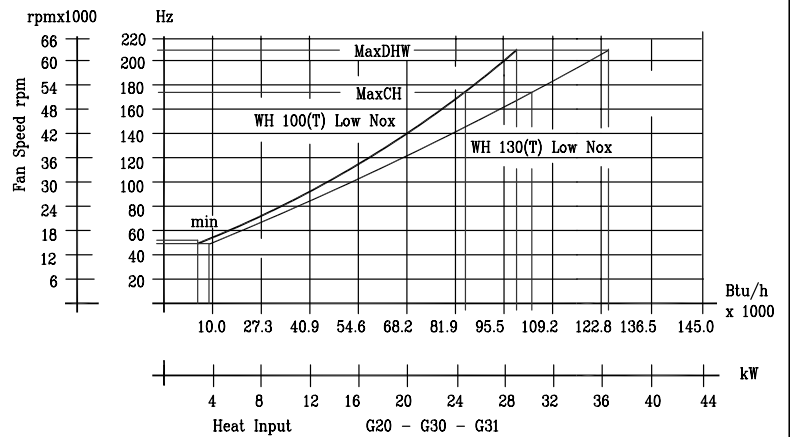


Fig. 37


TABLE 5/A

Range rating regulation of Central Heating				
C.H. regulations	Heat input (kW)		Fan speed (rpm)	
	WH100	WH130	WH100	WH130
Maximum setting	24,5	31,4	5400	5400
minimum setting	6,8	9,8	1650	1650

TABLE 5/B

Range rating regulation of Domestic Hot Water				
D.H.W. regulations	Heat input (kW)		Fan speed (rpm)	
	WH100	WH130	WH100	WH130
Maximum setting	29	36,4	6300	6300
minimum setting	6,8	9,8	1650	1650

Fig. 38

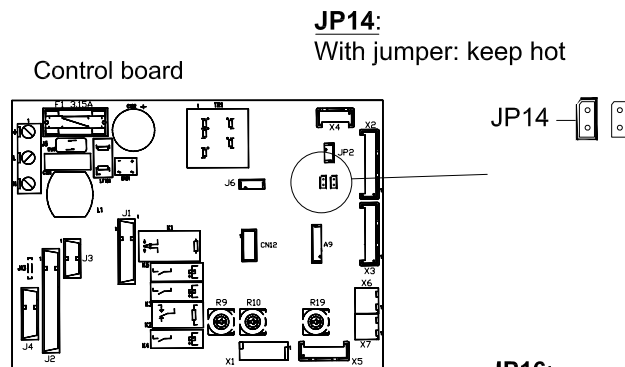

6.13 KEEP HOT (Fig. 38).

The boiler comes with an optional keep hot facility.

This can be switched on by placing the jumper JP14 on the circuit board over the pins, or remove this to cancel, then reset the boiler.

This will result in the boiler, at any time, periodically firing to keep the water within the boiler up to temperature to reduce the time delay of hot water delivered to any hot draw off point.

6.14 RANGE RATING CENTRAL HEATING OR/AND DOMESTIC HOT WATER

The boiler comes set, in Central heating, at the MID RANGE of its output.

6.14.1 When the boiler operates in the C.H. mode, the fan speed, can be set between the min. and max. values. (See fig. 37). This permits capacity to be adjusted to suit system demand, if adjustment is required proceed as follows:

- Remove front casing (sect. 8.1.4).
- Push the retaining latches and remove the front of the instrument panel (Fig. 54).
- Place instrument front panel into service holding bracket (just above control box (Fig. 55).
- Place jumper on JP16 for test mode function, "Co" (Control) is displayed on the digital display (see sect. 7.1).
- Using a small screw driver to adjust the potentiometer R9 (CH max fan speed) or/and R19 (DHW max fan speed), clockwise to decrease the fan speed and anti-clockwise to increase the fan speed.
- When viewing fan speed slightly move the potentiometer to display the speed and adjust only if necessary (fig. 37) the fan speed will flash the first two digits on the display in the control panel in rpm (eg. 42 = 4200 rpm).

6.15 HANDING OVER TO THE USER

6.15.1 After completion of installation and commissioning of the system, the installer should hand over to the Householder by taking the following actions:

- Hand the "User's Instructions" to the Householder and explain His/Her responsibilities under the "Gas Safety Regulations 2000".
- Explain and demonstrate the lighting and shutting down procedures.

- The operation of the boiler including the use and adjustment of ALL system controls which should be fully explained to the Householder. This then ensures the greatest possible fuel economy consistent with household requirements of both heating and hot water consumptions. Advise the User of the precautions necessary to prevent damage to the system, and to the building, in the event of the system remaining inoperative during frost conditions.
- Explain the function and the use of the boiler, the summer/winter switch, the ON/OFF switch and the reset of the digital display.
- Explain and demonstrate the function of temperature controls, neon lights, radiator valves etc for the economic use of the system.
- If an optional time clock is fitted, then draw attention to the time clock User's Instructions and hand them to the Householder.
- Stress importance of regular servicing by a qualified Heating Engineer and that a comprehensive service should be carried out AT LEAST ONCE A YEAR.
- Fill in the Benchmark log book and leave completed with the customer.

JP2:
Frequency meter connection

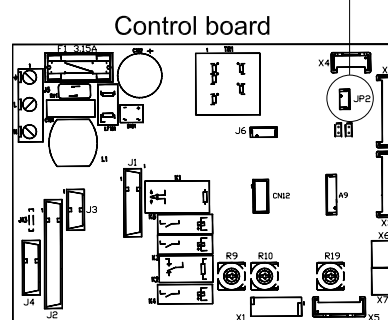


Fig. 39a

SECTION 7 SERVICING INSTRUCTIONS

The White Boiler Company is a member of the Benchmark initiative and fully supports the aims of the programme. Benchmark was instructed to improve the standards of installation and commissioning of central heating systems in the UK and to encourage in the regular servicing of all central heating systems to ensure safety and efficiency.



Combustion testing must be carried out by competent person using a combustion analyser conforming to BS7927.

During routine servicing, and after any maintenance or change of part of the combustion circuit, the following must be checked:

- The integrity of the flue system and the flue seals.
- The integrity of the boiler combustion circuit and the relevant seals.
- The operational dynamic (working) gas inlet pressure at maximum rate.
- The gas rate.
- The combustion performance.

COMPETENCE TO CARRY OUT THE CHECK OF COMBUSTION PERFORMANCE.

Please note: BS6798:2009 Specification for installation and maintenance of gas-fired boilers of rated input not exceeding 70 kW net advises that:

- The person carrying out a combustion measurement should have been assessed as competent in the use of a flue gas analyser and the interpretation of the results.
- The flue gas analyser used should be one meeting the requirements of BS7927 or BS-EN 50379-3 and be calibrated in accordance with the analyser manufacturers requirements.
- Competence can be demonstrated by satisfactory completion of the CPA1 ACS assessment which covers the use of electronic portable combustion gas analysers in accordance with BS 7967, Parts 1 to 4.

7.1 SERVICE INFORMATION FUNCTION

When the jumper JP16 is inserted, "Co" (Control) is displayed on the digital display (fig. 33), no water or heating led are ON, only the yellow led is ON when boiler is running.

In summer position, with DHW operating, it is possible to set the minimum power by R10 trimmer (Fig. 39).

In winter position, with heating operating, it is possible to set the maximum CH power by R9 trimmer. In DHW operation, it is possible to set the maximum DHW power by R19 trimmer.

Moving the knob of a trimmer the fan speed is displayed flashing for 10 seconds on the digital display (see Technical data section 3, tables 5/A and 5/B page 34 and fig. 39).

7.2 SEQUENCE HISTORY CODES

It is possible to see up to the last ten sequence of events on the digital display by pushing the reset button for 10 seconds.

In this case, when the function is enabled the 3 leds on the panel start flashing. Pushing the reset button again it is possible to view the others codes up to a maximum of ten.

After the tenth, push the reset button to repeat the history.

Exit from history is automatic after 10 seconds.

The sequence history starts after 1 hour of first continuous power onto the board.

7.3 BOILER FROST PROTECTION

The appliance has built in frost protection device that protects the boiler from freezing. With the gas and electric supplies ON and irrespective of any room thermostat setting, the frost protection device will operate the pump when the temperature falls below 10°C and will operate the burner when the temperature falls below 5°C.

The burner will switch off when the temperature reaches 27°C.

When the frost protection device operates "AF" is displayed on the digital display.

IMPORTANT NOTE:

The system should be protected by incorporating a system frost thermostat.

- 7.4** To ensure continued efficient operation of the appliance it is necessary to carry out servicing and cleaning at regular intervals. The frequency of cleaning will depend upon the particular installation conditions and usage but in general, once a year is advisable.

WARNING

Before the start of any servicing or replacement of components always isolate electricity supply to the appliance and always turn off the appliance gas supply at the gas service cock.

The Data badge is positioned low on left panel.

- The following notes apply to the appliance and its controls but it should be remembered that attention must also be paid to the heating and hot water circuits with special attention to radiator valves, thermostats, clocks, leaking hot water taps etc.
- Where it is necessary to replace a gasket that relies on adhesive for securing - this adhesive will be supplied with the gasket as a spare item.
- In all cases prior to servicing, remove the front panel of the case. Operate the appliance by turning the hot water services on to a high water flow, measurement of the products of combustion can be achieved by connection of a probe to the combustion analyser test point.


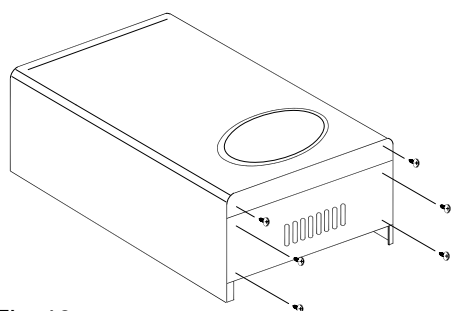


Fig.40

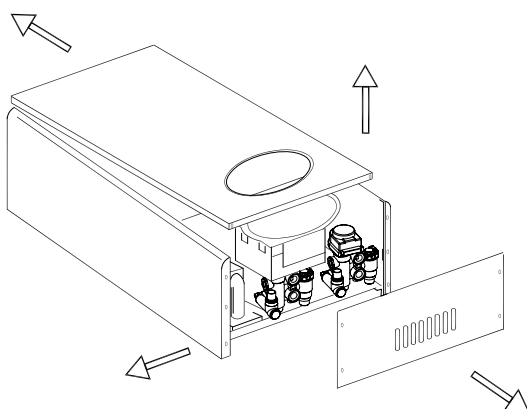

- **IMPORTANT:** After completing any servicing or replacement of gas carrying components it is essential that a test for gas soundness is always carried out along with functional checks in operation.

7.5

TO INSPECT AND CLEAN THE APPLIANCE

7.5.1

Before carrying out cleaning operation, cover the electrical control panel with a piece of waterproof material to protect it from debris.

7.5.2

Inspect the heat exchanger for any blockage. Deposits of any material should be brushed away using a soft brush.

NOTE: Do not use brushes with metallic bristles.

7.5.3

Examine internal pipe-work connections and automatic air vent for any water leaks. Rectify if necessary.

7.5.4

Examine and remove loose debris from the combustion chamber using a soft brush and vacuum cleaner. Carefully flush, by spraying water any remaining debris through the condensate trap. (Ensure the water is kept away from electrical components).

7.5.5

Inspect the siphonic condensate trap for a blockage.

Remove the cap at the base of the condensate trap.

Remove any solid found.

Remove the float to clean it.

Any deposits should be flushed out. Reassemble and refit the condensing trap.

When refitting the cap ensure that a watertight seal is achieved, but do not use excessive force.

7.5.6

Examine the spark and sensing electrodes for any mechanical damage, Clean away any debris and check the spark and sensing gap.

7.5.7

Examine flue duct and flue manifold and ensure that there is no obstruction. Examine the gasket at the entry into the flue manifold.

7.5.8

It is essential that a good seal is made at the outlet to the flue manifold, renew this gasket if there is any sign of damage or deterioration.

SECTION 8 REPLACEMENT OF PARTS

8.1 GENERAL

8.1.1 Replacement of parts must be carried out by a competent person.

8.1.2 Before replacing any parts the boiler should be isolated from the mains electric supply and the gas should be turned off at the service cock on the boiler.

8.1.3 After replacing any parts always test for gas soundness and if necessary carry out functional test of the controls.

8.1.4 For replacement of parts, the front, side and bottom panel panels of the boiler will need to be removed.

To remove the front panel unscrew the two cover screws that secure the front panel to the boiler and lift off.

To remove the bottom panel unscrew the four screws and lift off.

To remove the side panels, remove the front and bottom panels, unscrew the screws below and remove (Fig.40) .



8.2 TO REMOVE/REPLACE SPARK IGNITER BOX (Fig. 41)

8.2.1 Remove the front casing (sect. 8.1.4).

8.2.2 Detach all the connectors from the igniter control box.

8.2.3 Remove the 2 screws that secure the spark igniter to the bracket.

8.2.4 Replace in reverse order.

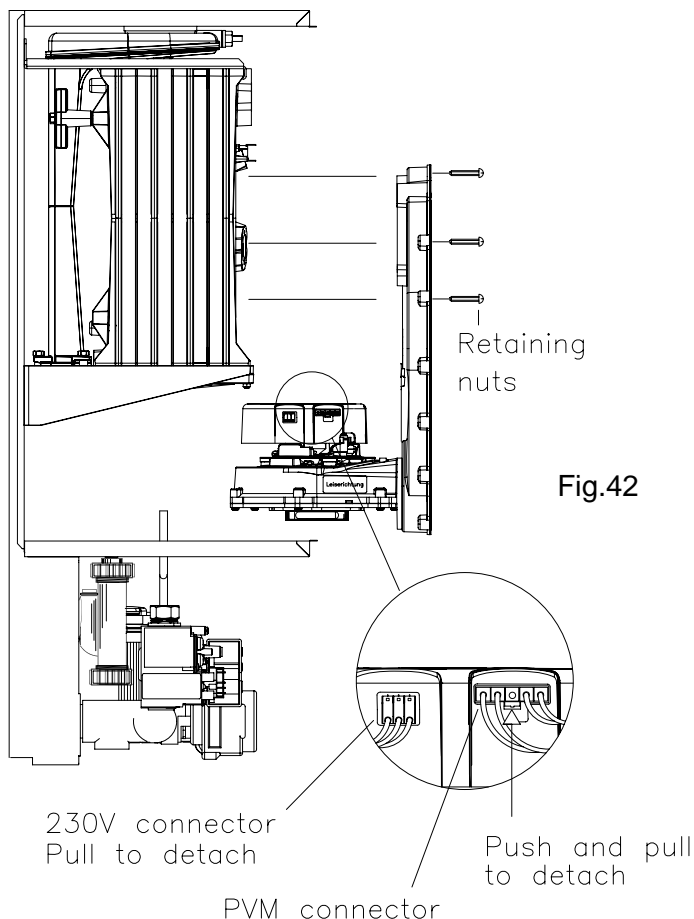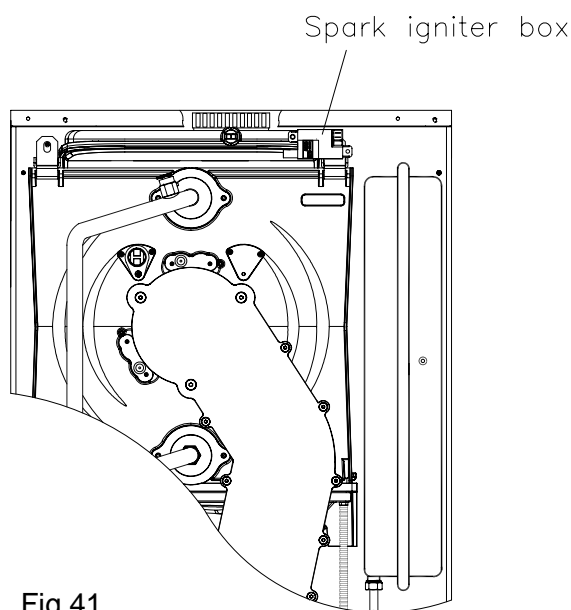

8.3 TO REMOVE/ REPLACE THE ELECTRODES (Fig.36)

8.3.1 Remove the front casing panel (sect. 8.1.4).

8.3.2 Remove the ignition and/or sensing lead plug.

8.3.3 Unscrew the two securing screws and put them into a container so that they don't get lost. Withdraw the Spark electrode and /or sensing electrode carefully from the combustion chamber cover being careful not to damage the seal.

8.3.4 Replace with new electrode in reverse order. Ensure gap is correct and there is a good seal when replaced.

8.4 TO REMOVE/REPLACE FAN (Fig. 42-43)



8.4.1 Remove front panel only (sect. 8.1.4).

8.4.2 Remove three manifold/burner retaining nuts Fig. 42). Pull forward and lift up manifold slightly to remove.

8.4.3 Detach power supply cables to fan (Fig.42). The fan and the manifold can then be removed from the boiler.

8.4.4 To separate the fan from manifold remove the two retaining bolts and the three screws retaining the air/gas mixture plate (Fig. 43/44).

8.4.5 Reassemble in reverse order. Ensure wires are connected correctly.

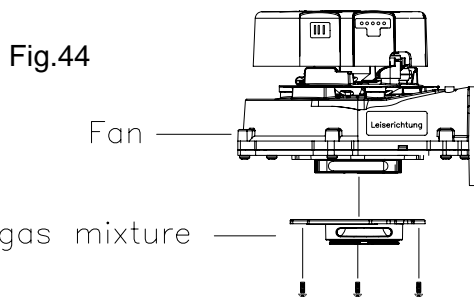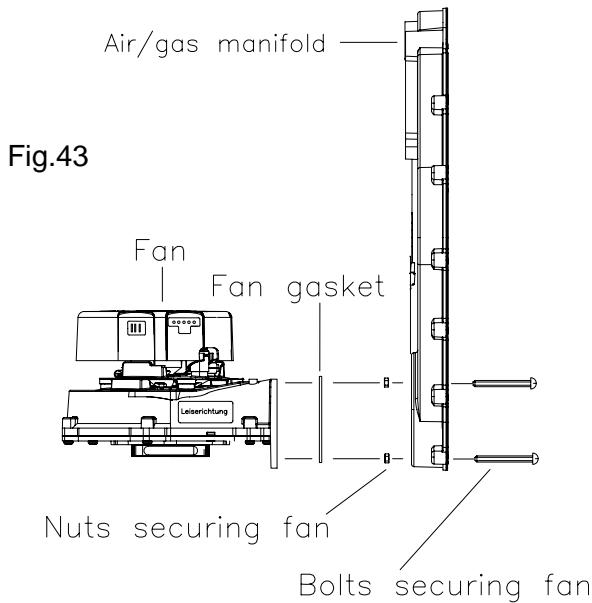

8.6 TO REMOVE/REPLACE THE HEAT EXCHANGER.

8.6.1 Remove front casing (sect 8.1.4) and the bottom, left and right side panels.

8.6.2 Drain the boiler CH circuit and drain the DHW circuit.

8.6.3 Follow instruction to remove fan (sect. 8.4 to 8.4.3).

8.6.4 Remove the clip securing the condense pipe out of the bottom of the heat exchanger and pull down to remove the pipe.

8.6.5 Disconnect the flow and return pipes at the heat exchanger.

8.6.6 Disconnect the pipes at the flow manifold and pump then move away from the heat exchanger.

8.6.7 Disconnect the pipes to the expansion vessel.

8.6.8 Remove the spark igniter box (sect. 8.2).

8.6.9 Loosen the four heat exchanger securing screws and clamps then carefully ease heat exchanger out.

CAUTION : There will be water in the heat exchanger.

8.6.10 Replace in reverse order, always use a new "O" rings seals.

8.5 TO REMOVE/REPLACE THE BURNER (FIG.45)


8.5.1 Remove front casing (sect. 8.1.4).

8.5.2 Follow instruction to remove fan (sect. 8.4 to 8.4.3).

8.5.3 Remove the burner from the main heat exchanger. Important: the burner gasket may require replacing.

8.5.4 Replace in reverse order.

Fig.45

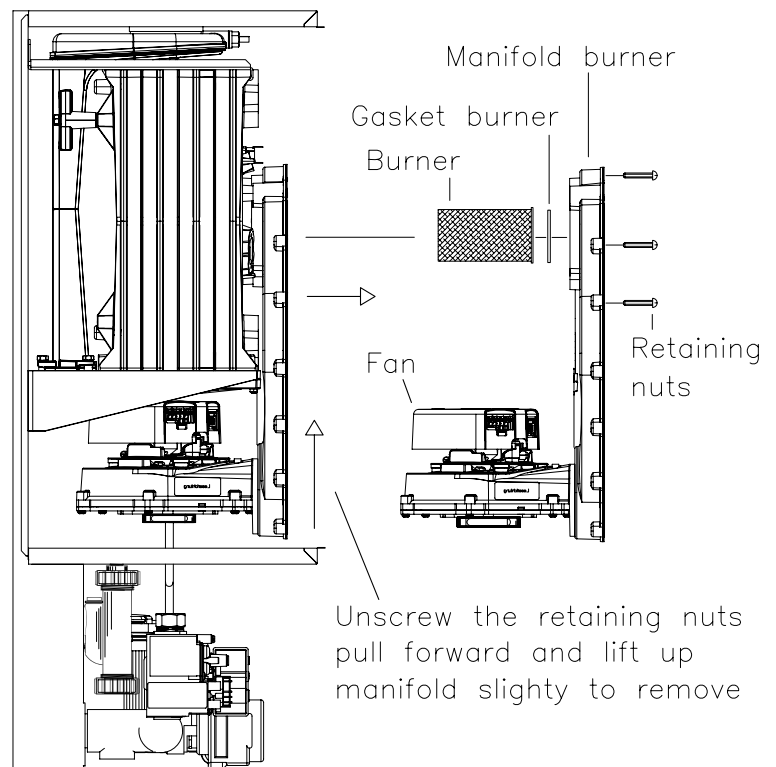

8.7 TO REMOVE/REPLACE GAS VALVE . (Fig.46).

8.7.1 Remove front casing (sect 8.1.4).
Remove the bottom panel and the left side panel.

8.7.2 Drop down the control panel into the service position (Fig. 55).

8.7.3 Unscrew and disconnect gas valve pipe (Fig. 46).

8.7.4 Remove the electrical plug from the gas valve and unscrew the four screws to the gas inlet pipe.

8.7.5 Remove the gas valve.

8.7.6 Reassemble in reverse order and replace the gasket.

8.7.7 **IMPORTANT** : When gas control valve will be re-fitting, **check combustion CO₂ and adjusted if necessary** see section 6.9.

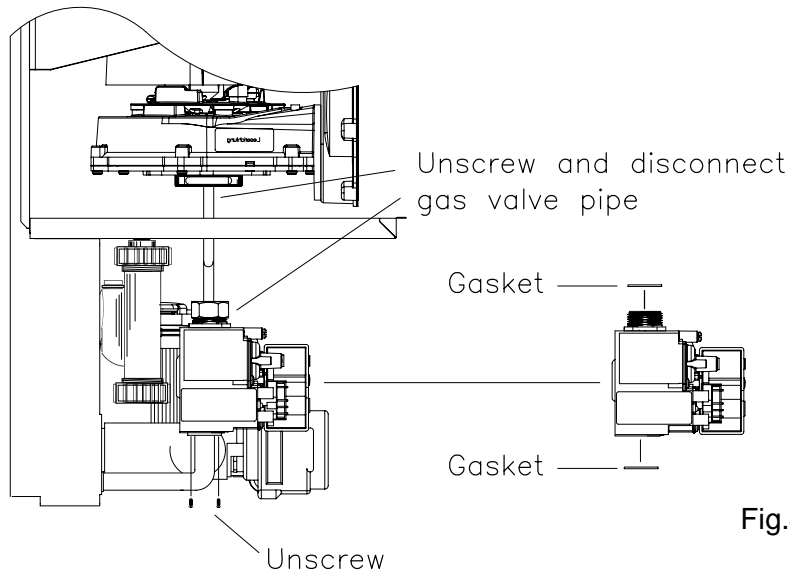


Fig.46

8.8 TO REMOVE/REPLACE EXPANSION VESSEL (Fig.47).

8.8.1 Remove front casing (sect 8.1.4) and the bottom panel.
Remove the bottom panel and the right side panel.

8.8.2 Drain the CH circuit.

8.8.3 Unscrew the fixing bracket.
Unscrew the nut connecting the expansion vessel, and lift up the vessel and remove.

8.8.4 Replace in reverse order.

NOTE: Always use new gasket.

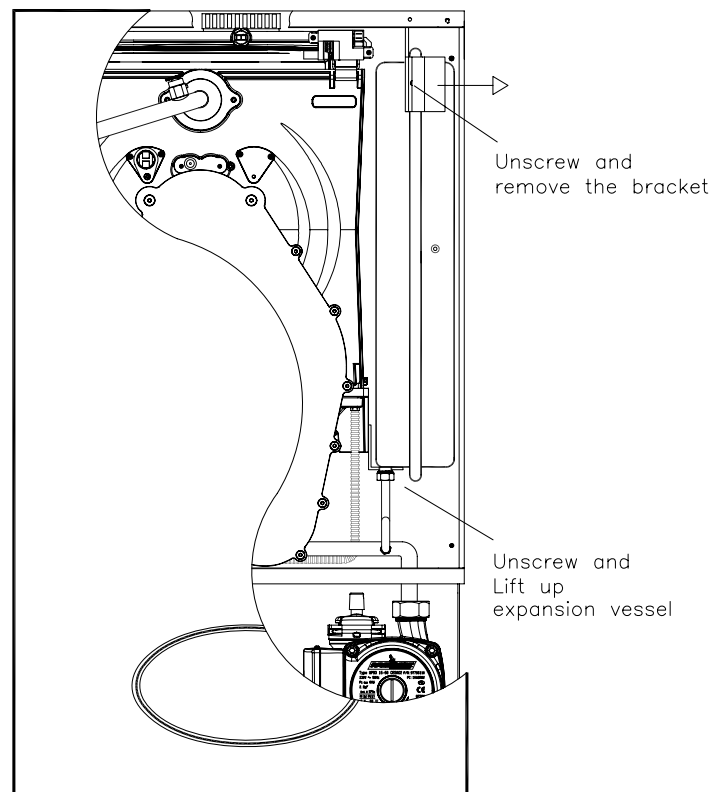


Fig.47

8.9 TO REMOVE/REPLACE PLATE HEAT EXCHANGER (Fig. 48-49).

- 8.9.1 Remove front casing (sect 8.1.4).
Remove the bottom panel.

Plate heat exchanger

"O" ring

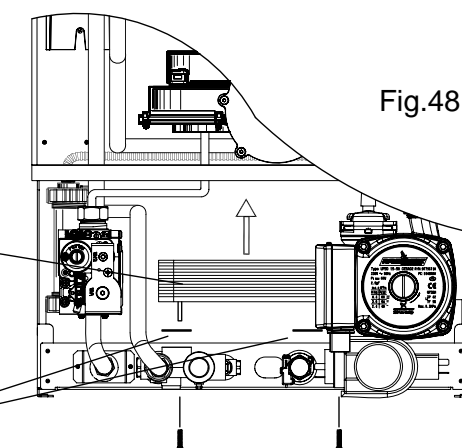


Fig.48

Unscrew the two allen screws
and lift up the plate heat exchanger

- 8.9.2 Follow instruction to drop down control box
sect. 8.20.

- 8.9.3 Close off on/off valves for CH circuit and
DHW circuit and drain the boiler and drain
hot water from the lowest hot water tap.

- 8.9.4 Unscrews the two allen screws that
connect the DHW heat exchanger and pull
it out from the boiler (Fig. 48).

- 8.9.5 If necessary the pipes from the flow
manifold may have to be remove for easier
access. Lift up the plate heat exchanger.

- 8.9.6 Replace in reverse order.
NOTE: Always use new "O" rings.

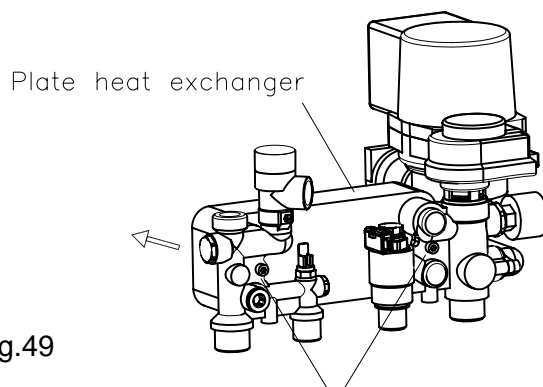


Fig.49

Unscrew the two allen screws

8.10 TO REMOVE/REPLACE DIVERTER VALVE MOTOR (Fig. 50).

- 8.10.1 Remove front casing (sect 8.1.4).

- 8.10.2 Detach the electrical plug and remove the
retaining clip.

- 8.10.3 Replace in reverse order.

Divterter valve switch

Retaining clip

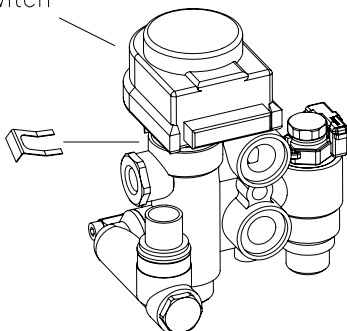


Fig.50

8.11 TO REMOVE/REPLACE PUMP (Fig.51).

- 8.11.1 Remove front casing (sect 8.1.4).
Remove the bottom panel and the right
side panel.

- 8.11.2 Drop down control box (sec. 8.20).

- 8.11.3 Detach the supply wire connector from
the pump.

- 8.11.4 Remove the securing clip at the pump
manifold (Fig. 51).

- 8.11.5 Remove the securing clip that fastens the
pressure gauge to the pump. (Fig. 51).

- 8.11.6 Unscrew the nut that fastens the pump to
the CH pipe and remove the pump.

- 8.11.7 Replace in reverse order.

NOTE : Alway use new seal and new
"O" ring when re-fitting new pump.

- 8.12 TO REMOVE/REPLACE C.H. DIVERTER VALVE.**
- 8.12.1** Remove front casing (sect 8.1.4).
Remove the bottom panel and the right side panel.
- 8.12.2** Drop down control box (sec. 8.20).
- 8.12.3** Close the on/off valves for the heating circuit and drain the water at drain point Fig.35.
- 8.12.4** Remove diverter valve motor, to allow access, (sect.8.10).
- 8.12.5** Unscrew the C.H.diverter valve as in Fig.52.
- 8.12.6** Replace in reverse order.
- NOTE: Always use new "O" ring.
- 8.13. TO REMOVE/REPLACE DHW DIVERTER VALVE MECHANISM (Fig. 52).**
- 8.13.1** Remove front casing (sect 8.1.4).
Remove the bottom panel and the right side panel.
- 8.13.2** Drop down control box (sec. 8.20).
- 8.13.3** Close the on/off valve for the DHW circuit and drain the hot water from the lowest hot water tap.
- 8.13.4** Remove the flow detector as fig.52.
- 8.13.5** Unscrew the DHW diverter valve as in fig.52.
- 8.13.6** Replace in reverse order.
- NOTE: Always use new "O"ring.

- 8.14 TO REMOVE/REPLACE AUTOMATIC AIR VENT (Fig. 51).**
- 8.14.1** Remove front casing (sect 8.1.4).
Remove the bottom panel and the right side panel.
- 8.14.2** Close the on/off valves for C.H. circuit and drain the water from at drain point Fig.35.
- 8.14.3** Remove the pump see sect.8.11.
- 8.14.4** Remove the retaining clip holding the automatic air vent.
- 8.14.5** Pull the automatic air vent from the pump.
- 8.14.6** Replace in reverse order and check for leak.
- NOTE: Fit a new "O" ring.
- 8.15 TO REMOVE/REPLACE THE CENTRAL HEATING AND/OR DOMESTIC HOT WATER THERMISTOR (Fig. items 27/8).**
- 8.15.1** Remove front casing (sect 8.1.4).
- 8.15.2** Remove the wires that connect the thermistors.
- 8.15.3** For C.H. thermistor remove the retaining clip from the pipe.
- 8.15.4** For D.H.W. thermistor close the on/off valve for the DHW circuit and drain the hot water from the lowest hot water tap.
Unscrew the thermistor.
- NOTE: When reconnecting the polarity of the wiring to thermistor is unimportant.
- 8.15.5** Replace in reverse order and replace the D.H.W. thermistor gasket.


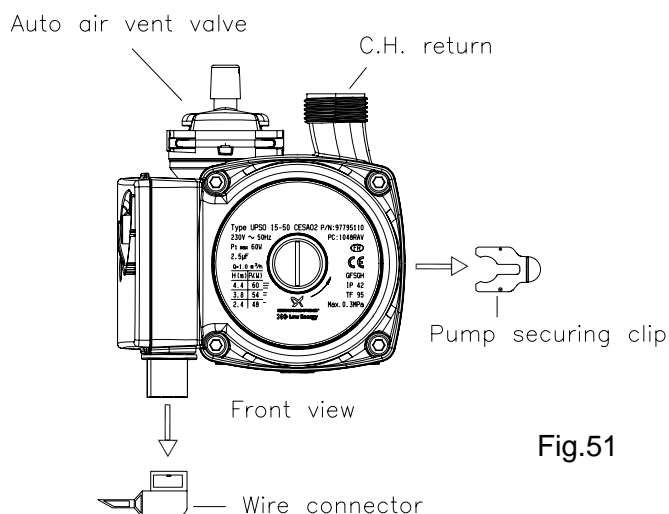


Fig.51

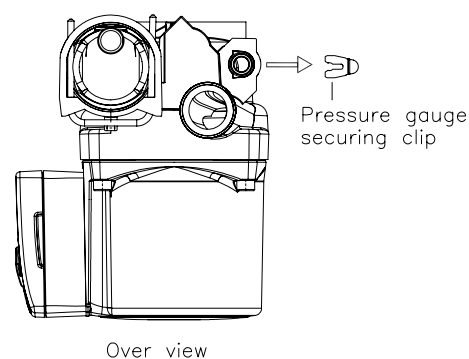

8.16 TO REMOVE/REPLACE OVERHEAT THERMOSTAT (Fig. 1 item 25).

8.16.1 Remove front casing (sect 8.1.4).

8.16.2 Remove the two wires that connect to the overheat thermostat.

Flow detector switch

DHW diverter valve mechanism

8.16.3 Unscrew the thermostat to the heat exchanger and remove.

8.16.4 Replace in reverse order.

8.17 TO REMOVE/REPLACE LOW WATER OR DIFFERENTIAL PRESSURE SWITCH (Fig. 53).

8.17.1 Remove front casing (sect 8.1.4).
Remove the bottom panel and the right side panel.

8.17.2 Close the on/off valves for central Heating circuit and drain the water from the boiler (Fig. 35).

8.17.3 Pull wires off and unscrew the low water pressure switch from pump manifold.

8.17.4 Remove the retaining clip that fix the electrical connection and unscrew the nut at the flow water pressure switch.

8.17.5 Replace in reverse order, fill the system as described in sect.6.4 and check for leaks.

8.18 TO REMOVE/REPLACE SAFETY DISCHARGE VALVE.

8.18.1 Remove front casing (sect 8.1).

8.18.2 Drop down control box (sec. 8.20).

8.18.3 Close the on/off valves for central Heating circuit and drain the water from the boiler (Fig. 35).

8.18.4 Unscrew the screw below the valve.

8.18.5 Remove the securing clip and remove the pipe. Detach the valve.

8.18.6 Replace in reverse order, fill the system as described in sect.6.4 and check for leaks.

8.19 TO REMOVE INSTRUMENT PANEL.

8.19.1 Remove front casing (see sect. 8.1.4).

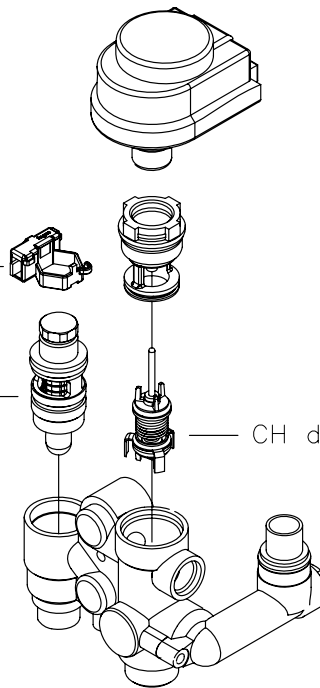


Fig.52

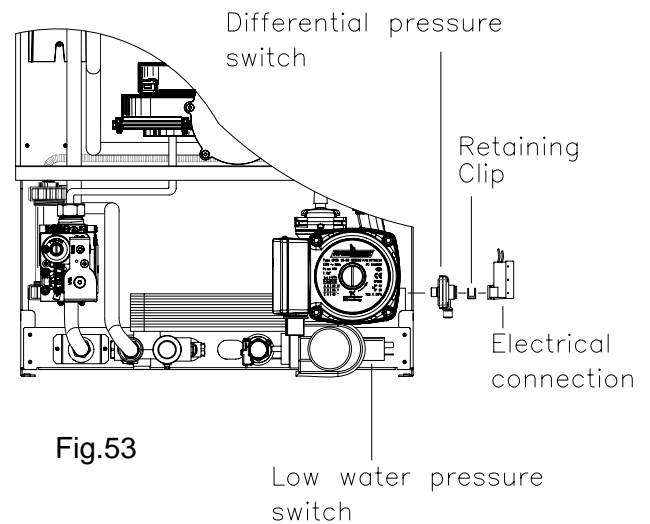


Fig.53

8.19.2 Push the four retaining latches and remove the front of the instrument panel (Fig. 55).

8.19.3 Rotate the instrument panel and put it in the service retaining clip instrument panel box bracket (Fig. 56).

8.20 TO REMOVE CONTROL PANEL BOX (Fig. 57).

8.20.1 Remove front casing (see sect. 8.1.4).


8.20.2 To move the control panel box into service position.

8.20.3 Draw forward the control panel box with both hands until it is slightly out of the boiler. As doing so move the box over to the left while still pulling it forward until the control box becomes free.

8.20.4 This will allow free access to lower part of the boiler.

8.21 TO REMOVE/REPLACE CONTROL BOARD (Fig.59).

- 8.21.1** Remove front casing (sect 8.1.4).
Remove instrument panel (sect. 8.19.2 to 8.19.3).
- 8.21.2** Detach the connectors from the board.
- 8.21.3** Detach the PCB board from its base by unscrewing the four securing screws. (Fig. 59).
- 8.21.4** Replace in reverse order.

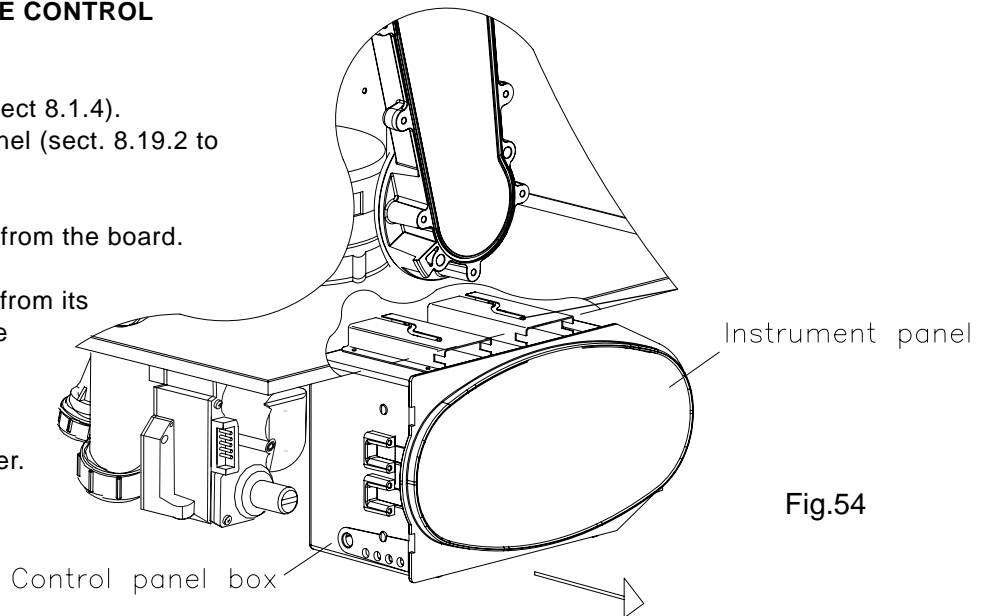


NOTE: When refitting the control panel ensure the leads are not trapped.

8.22 TO REMOVE/REPLACE TIMECLOCK.

- 8.22.1** Remove front casing (sect 8.1.4).
Remove instrument panel (sect. 8.19.2 to 8.19.3).
- 8.22.2** Pull the two securing clip that fasten the timeclock to the panel instrument, and pull it out.
- 8.22.3** Carefully remove the four wire connecting timer.
- 8.22.4** Replace in reverse order.


NOTE: Ensure all electrical connections are made correctly.

Fig.55

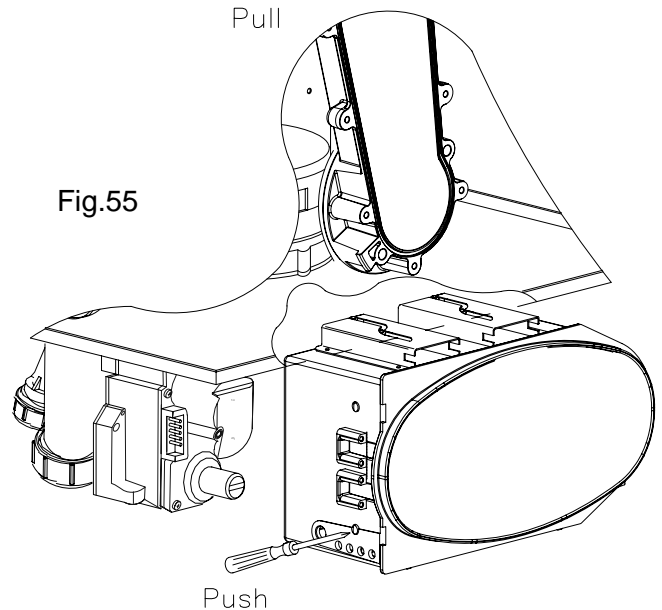

8.23 TO REMOVE/REPLACE DIGITAL DISPLAY BOARD.

- 8.23.1** Remove front casing (sect 8.1.4).
Remove instrument panel (sect. 8.19.2 to 8.19.3).
- 8.23.2** Detach the connectors from control board. Detach the connectors from the board.

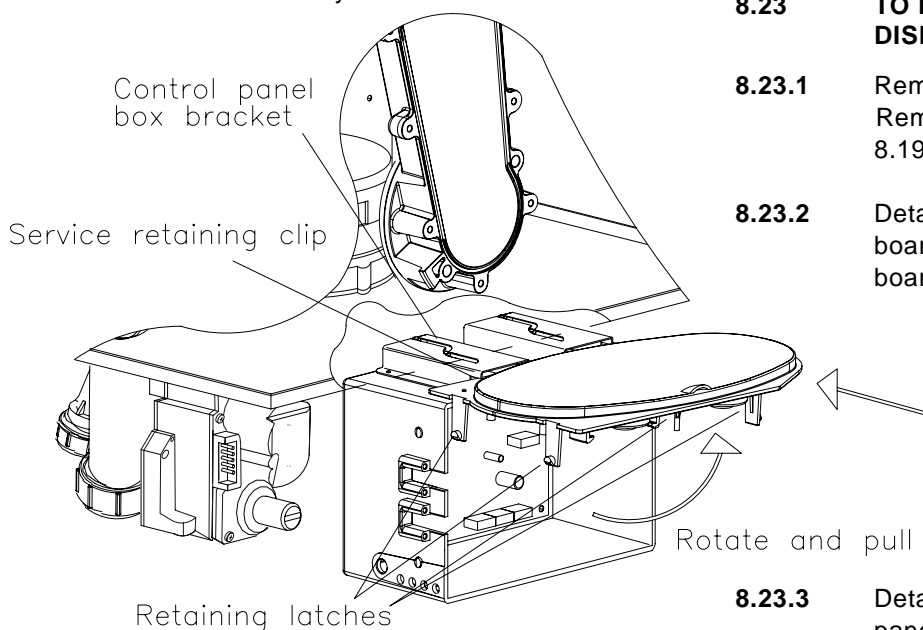


- 8.23.3** Detach the Digital Display board from panel instruments by unscrewing the four securing screws.
- 8.23.4** Replace in reverse order

8.24 TO REMOVE/REPLACE THE MAIN SWITCH (Fig. 33).

8.24.1 Remove front casing (sect 8.1.4) and push the retaining latches and remove the instrument panel.

Fig.57

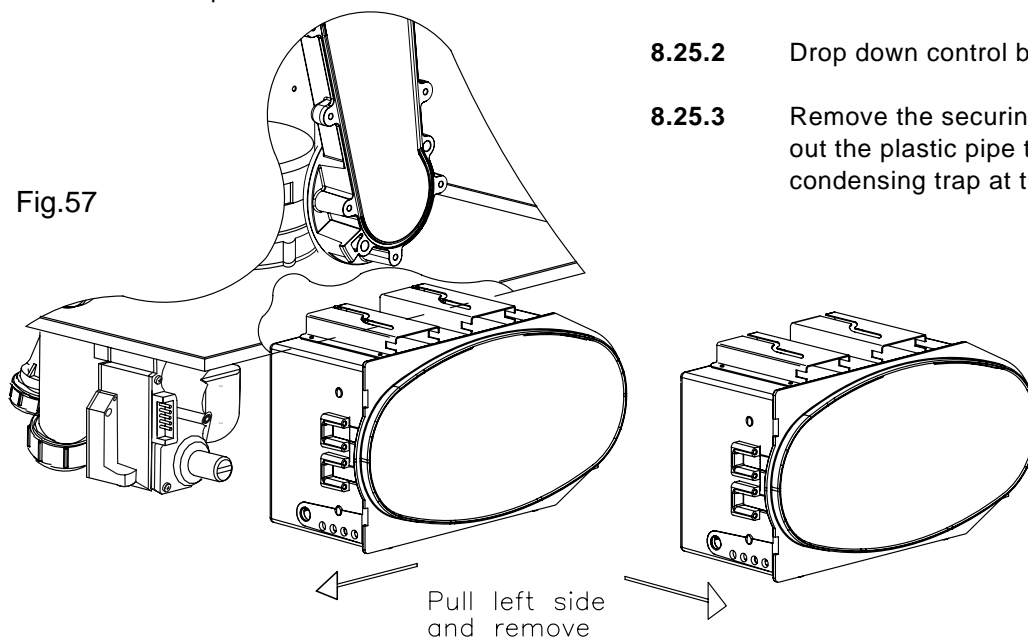

8.24.2 Pull off the switch knob. Remove the switch out from the instrument panel by pressing the clamp springs.

8.24.3 Detach the wires that connect to the switch, make sure that these wires are later reconnected to the same poles.

8.24.4 Replace in reverse order.

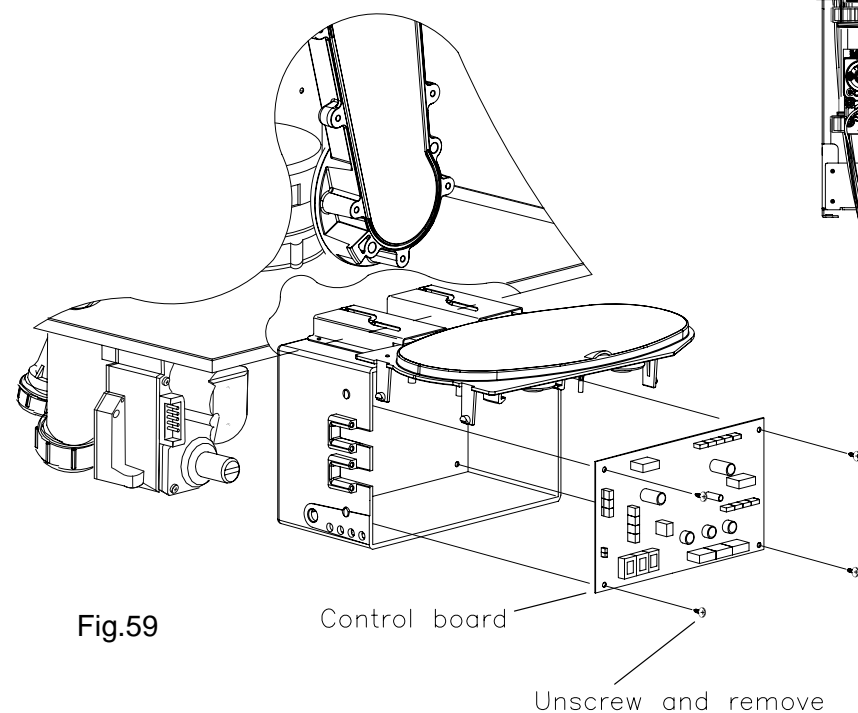


Fig.59

8.25 TO CLEAN AND REMOVE/REPLACE CONDENSING TRAP (Fig.60).

8.25.1 Remove front casing (sect 8.1.4). Remove the bottom panel and the left side panel.

8.25.2 Drop down control box (sec. 8.20).

8.25.3 Remove the securing clip and pull out the plastic pipe that connect the condensing trap at the heat exchanger.

8.25.4 Unscrew the nut that fasten the condensing trap to the depression chamber and remove it.

8.25.5 Replace in reverse order.

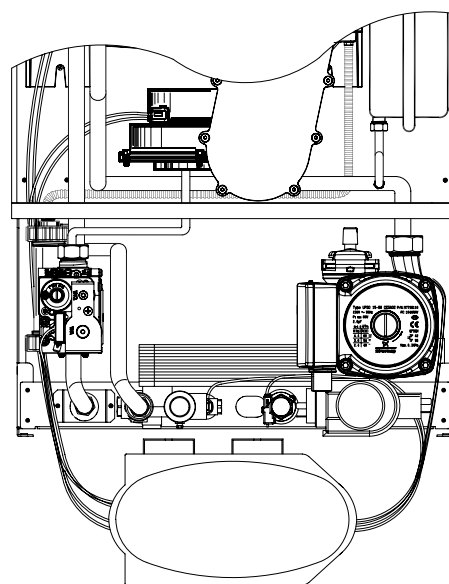


Fig.58

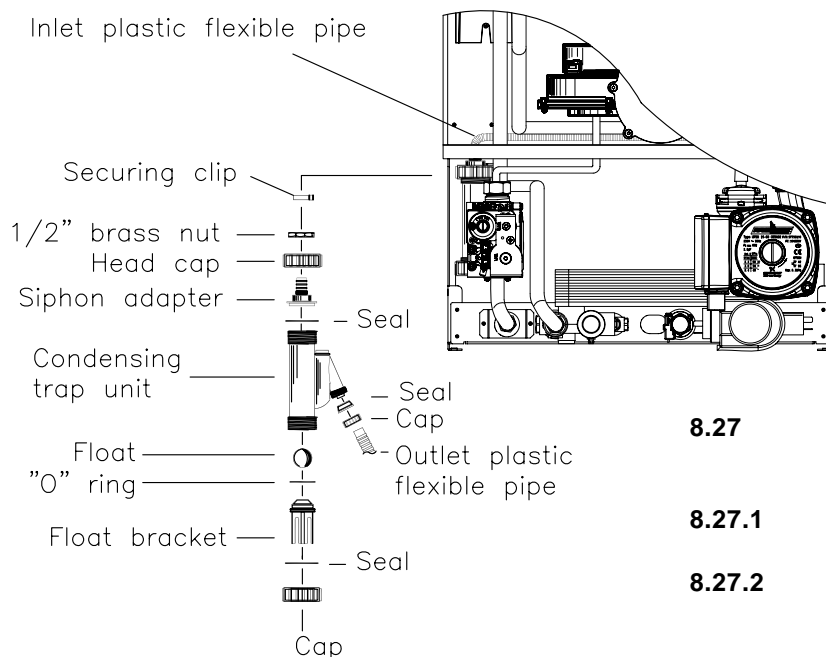


Fig.60

8.26 TO REMOVE/REPLACE THE WATER PRESSURE GAUGE (Fig. 51).

8.26.1 Remove front casing (sect 8.1.4).
Remove the bottom panel and the right side panel.

8.26.2 Drop down control box (sec. 8.20).

8.26.3 Close the on/off valves for the heating circuit and drain the water at the drain point Fig.35.
Remove the retaining clip on gauge pipe Fig. 51.

8.26.4 Remove the pressure gauge from the instrument panel by pressing its fastening springs.

8.26.5 Replace in reverse order.

8.27 TO REMOVE/REPLACE FLUE TEMPERATURE SENSOR (Fig. 61).

8.27.1 Remove front casing (sect 8.1.4).

8.27.2 Detach the electrical plug and unscrew the sensor.

8.27.3 Replace in reverse order.

Rotate and remove
Flue temperature sensor

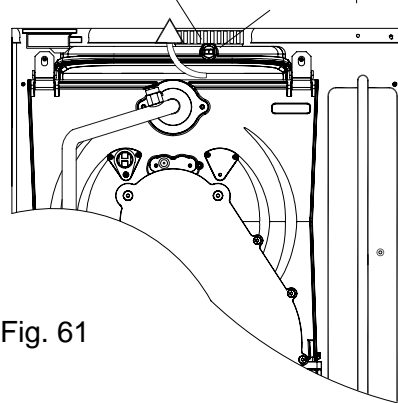


Fig. 61

8.28 EXTERNAL CONTROL CONNECTION (Fig. 62).

8.28.1 Remove front and bottom of the casing (sect 8.1.4).

8.28.2 Remove the external wire link on the PCB box.

8.28.3 Replace with external wire controls.

8.29 FAN FREQUENCY CONTROL (Fig. 62).

8.29.1 Remove front casing (sect 8.1.4).

8.29.2 Connect the instrument to the PCB box fig. 62.


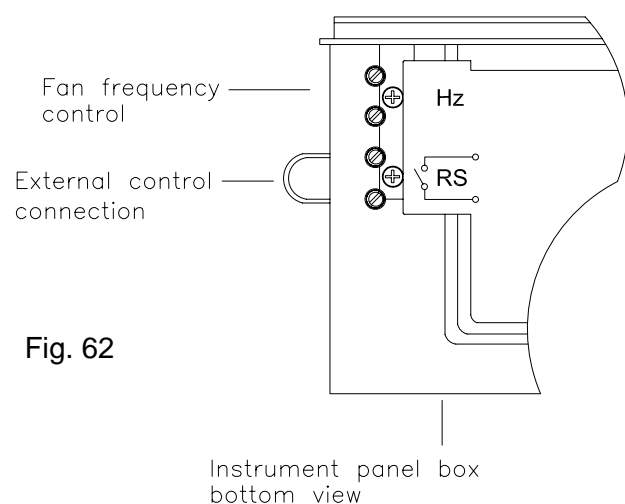


Fig. 62

SECTION 9 FAULT FINDING CENTRAL HEATING

Before trying to operate the boiler make sure that:


- All gas supply cocks are open and the gas supply has been purged of air.
- The heating system pressure is at least 1 bar min to 1.5 bar Max.
- Main Switch on.
- Select "Winter".
- Central Heating control knob to maximum.
- Ensure external controls calling for heat (Room stat/Timeclock/TRV).

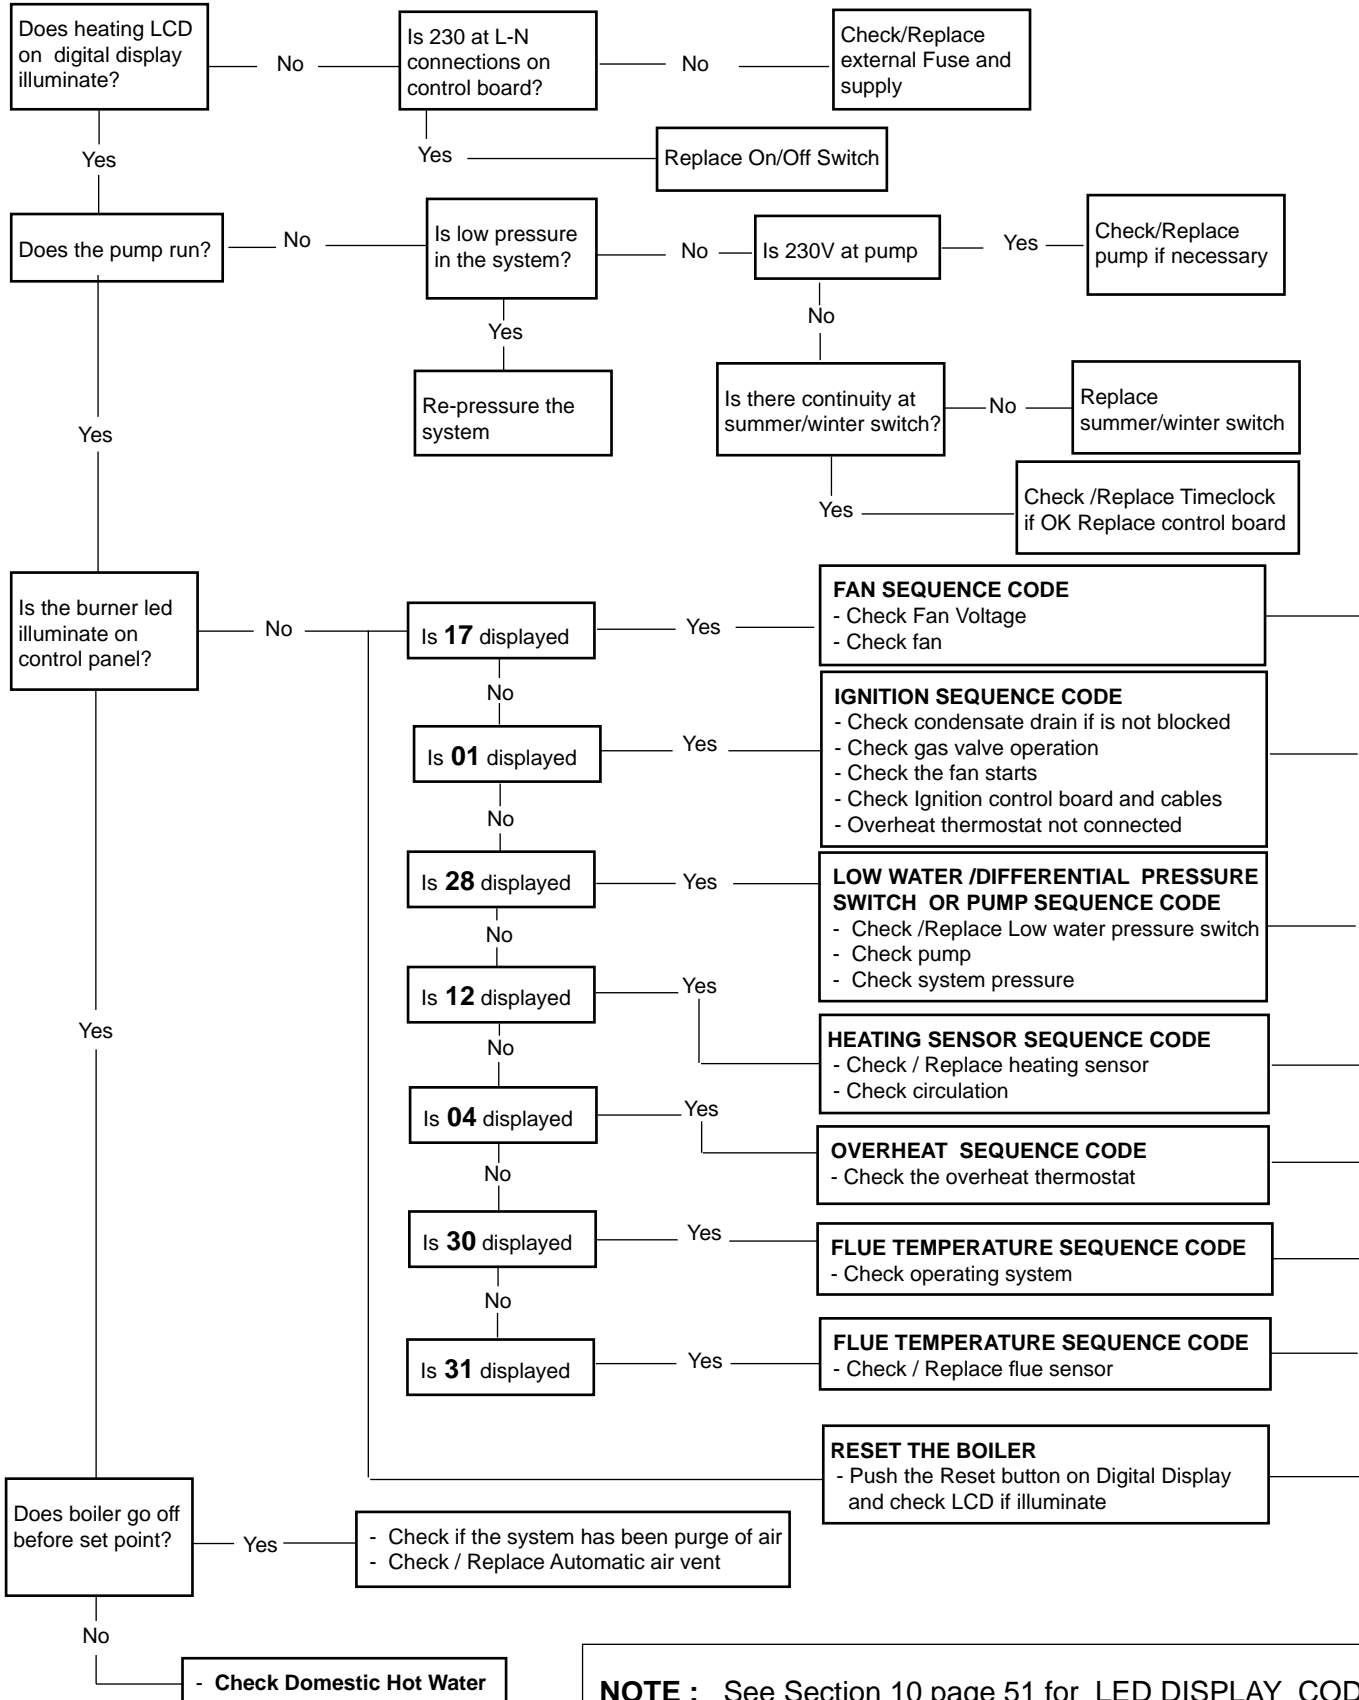

FAULT FINDING DOMESTIC HOT WATER


Before continuing it may be necessary to see Central Heating Fault Finding (Sect.9):

- All gas supply cocks are open and the gas supply has been purged of air.
- The heating system pressure is at least 1 bar min to 1.5 bar Max.
- Main Switch on.
- Select "Summer" (Fig.50 item 1A).
- Domestic Hot Water control knob to maximum.
- Open Domestic hot tap close to the appliance.

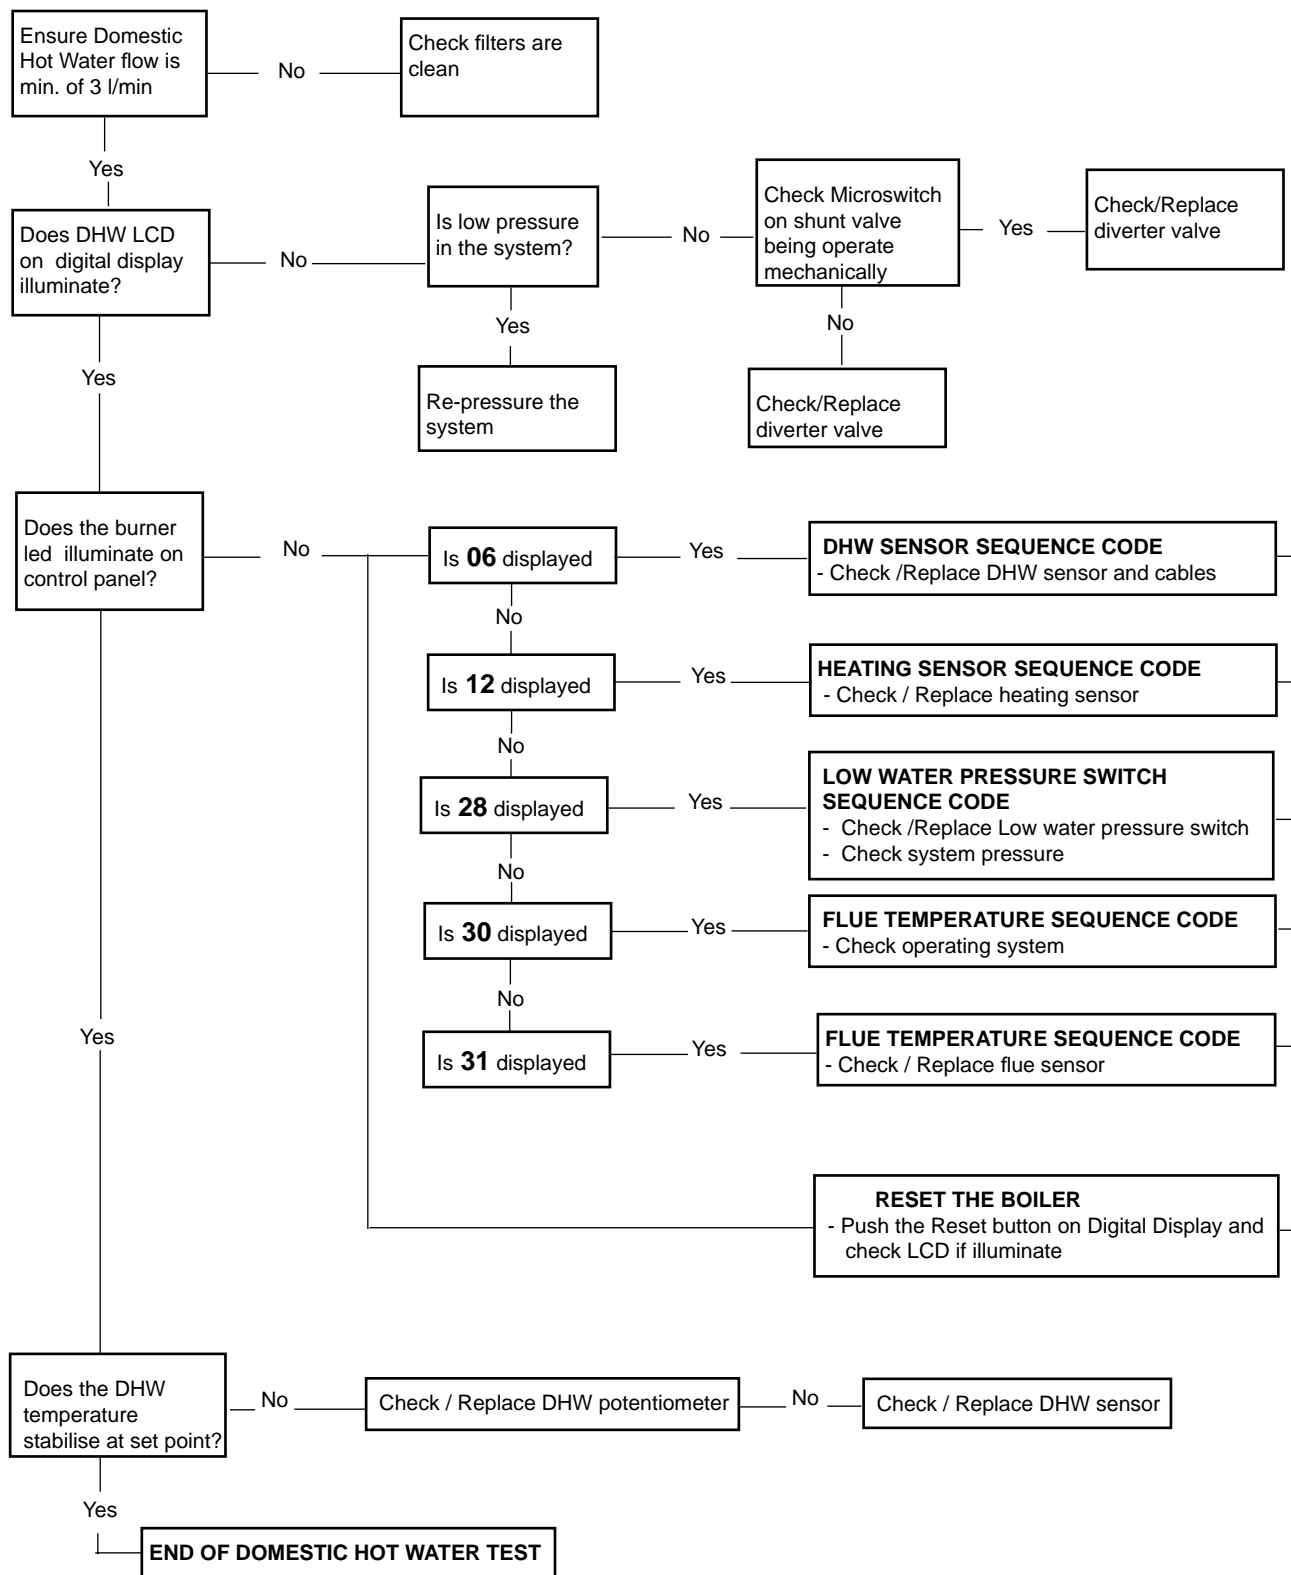

NOTE : See Section 10 page 51 for LED DISPLAY CODE

SECTION 10 ELECTRICAL SYSTEM DIAGRAM

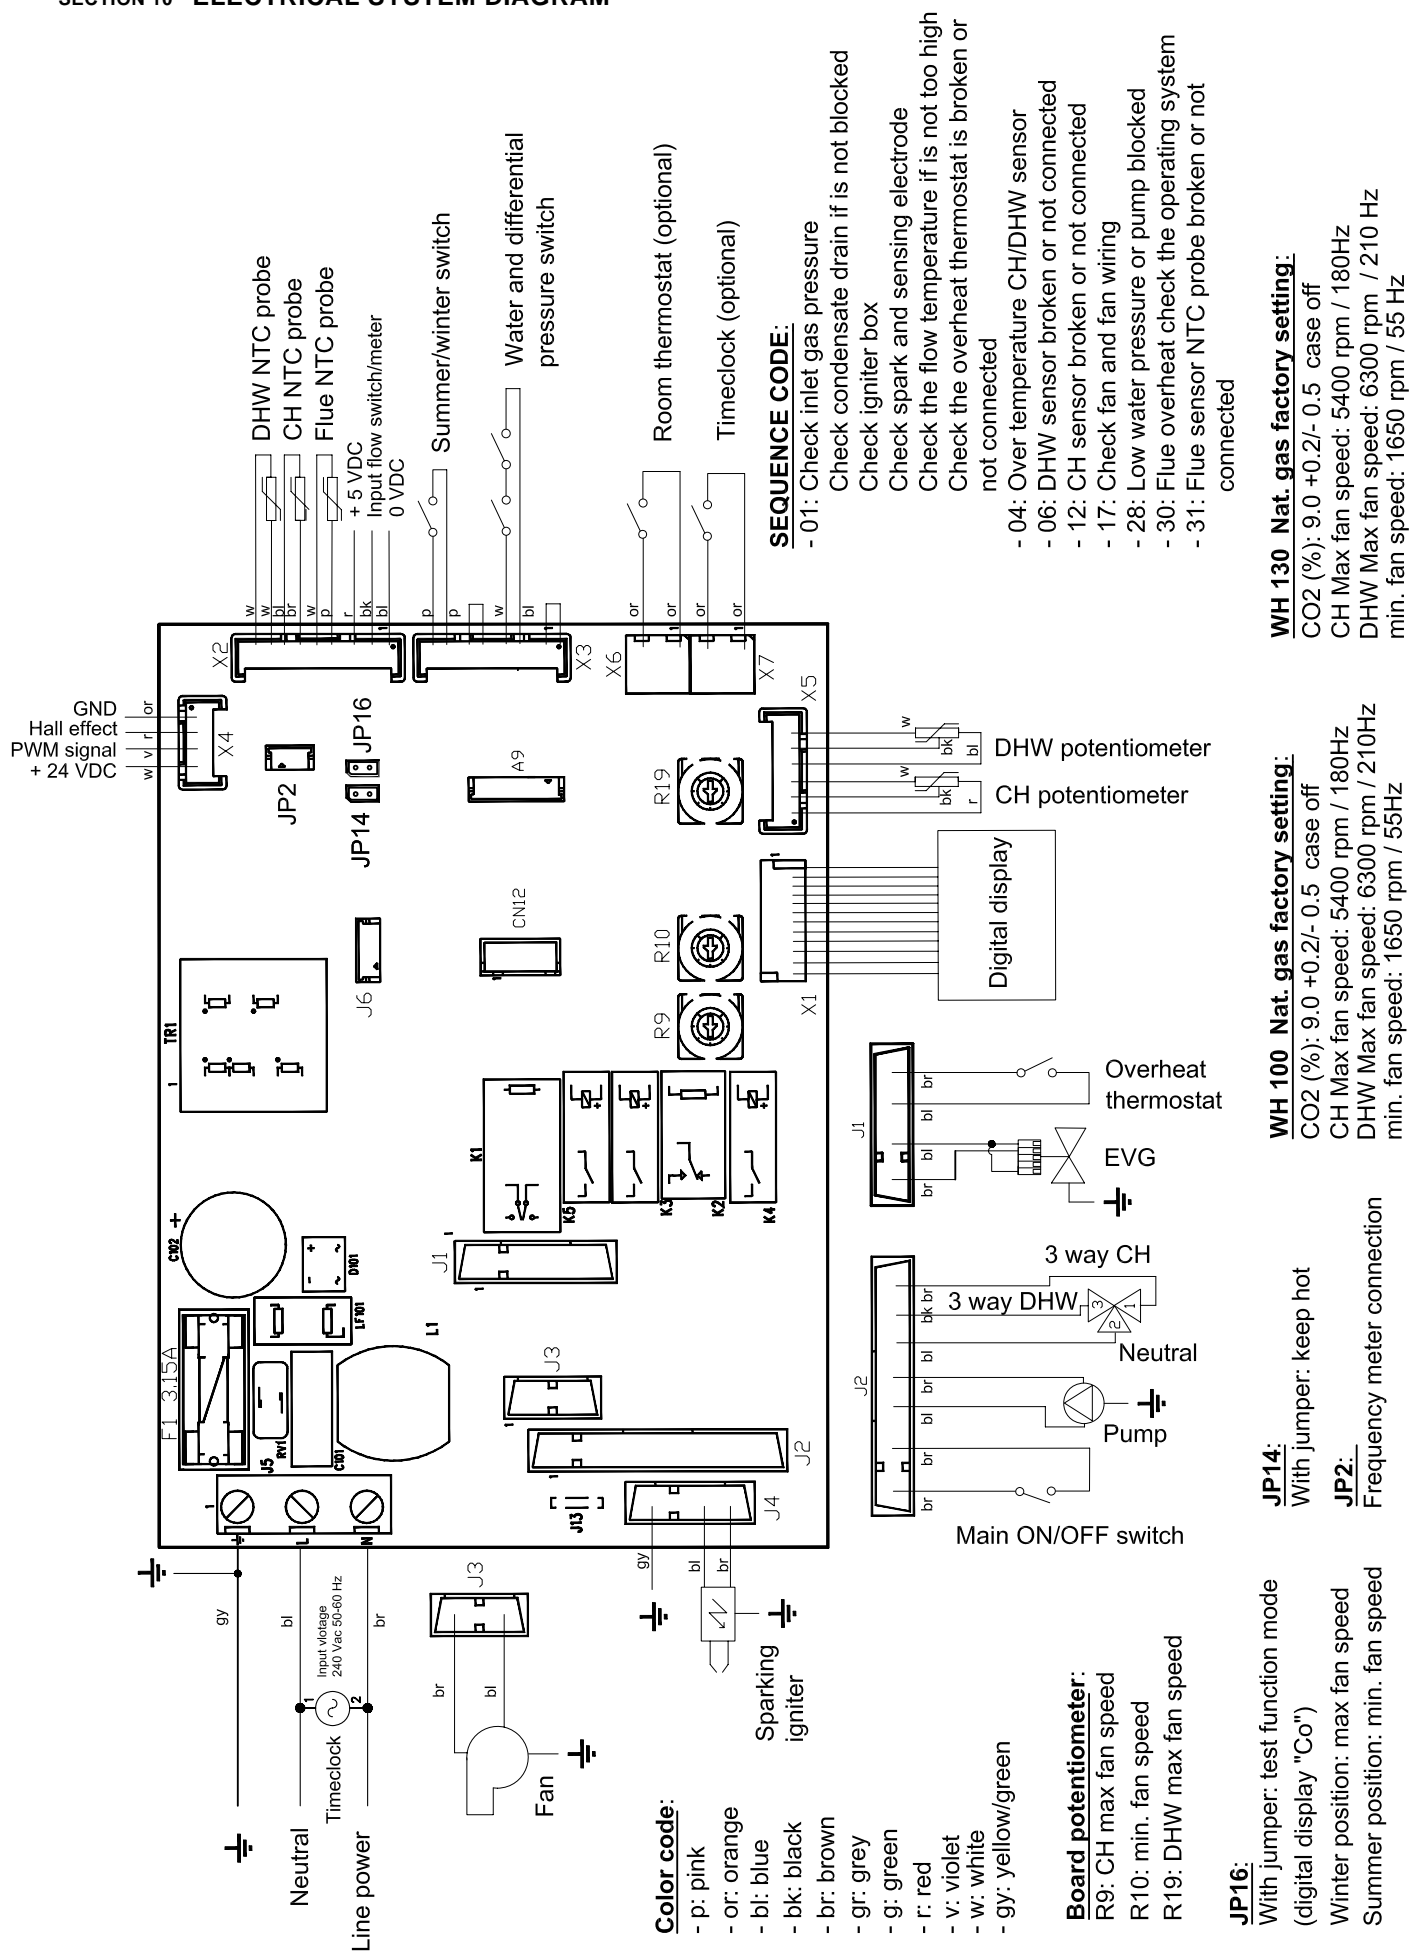

This technical diagram illustrates the exploded view of a gas boiler assembly. The components are numbered as follows:

- 1**: Main boiler body
- 2**: Gas control valve
- 3**: Pressure relief valve
- 4**: Pressure gauge
- 5**: Temperature gauge
- 6**: Gas pressure switch
- 7**: Gas pressure regulator
- 8**: Gas pressure sensor
- 9**: Gas pressure sensor cable
- 10**: Gas pressure sensor cable connector
- 11**: Gas pressure sensor cable connector
- 12**: Gas pressure sensor cable connector
- 13**: Gas pressure sensor cable connector
- 14**: Gas pressure sensor cable connector
- 15**: Gas pressure sensor cable connector
- 16**: Gas pressure sensor cable connector
- 17**: Gas pressure sensor cable connector
- 18**: Gas pressure sensor cable connector
- 19**: Gas pressure sensor cable connector
- 20**: Gas pressure sensor cable connector
- 21**: Gas pressure sensor cable connector
- 22**: Gas pressure sensor cable connector
- 23**: Gas pressure sensor cable connector
- 24**: Gas pressure sensor cable connector
- 25**: Gas pressure sensor cable connector
- 26**: Gas pressure sensor cable connector
- 27**: Gas pressure sensor cable connector
- 28**: Gas pressure sensor cable connector
- 29**: Gas pressure sensor cable connector
- 30**: Gas pressure sensor cable connector
- 31**: Gas pressure sensor cable connector
- 32**: Gas pressure sensor cable connector
- 33**: Gas pressure sensor cable connector
- 34**: Gas pressure sensor cable connector
- 35**: Gas pressure sensor cable connector
- 36**: Gas pressure sensor cable connector
- 37**: Gas pressure sensor cable connector
- 38**: Gas pressure sensor cable connector
- 39**: Gas pressure sensor cable connector

THE WHITE BOILER COMPANY WH 100/130 (T)
HIGH EFFICIENCY CONDENSING COMBINATION BOILER

SHORT LIST OF SPARE PARTS AND FLUE ACCESSORIES

Pos.	Part. No.	G.C. Part. No.	Description
1	PAN110200		Instrument panel
2	INT110051		Main - Summer/Winter switch
3	POT110050		DHW / CH Potentiometer assembly
4	IDR110050		Water pressure gauge
5	ORO010100		Digital timer
6	CIR110300		Digital display
7	ADE110070		Instrument panel label
8	FUS010150		Internal fuse 3.15 A
9	CIR110250		Control board
10	CIR130050		Circulation pump
11	ORI110350		Pump / Manifold "O"ring
12	ORI110150		Pump / Pressure gauge "O"ring
13	VAS130050		Expansion vassel
14	SCA130150		Heat exchanger WH 130
14.1	SCA130100		Heat exchanger WH 100
15	TRA130050		Spark igniter
16	CAV130050		Spark cable
17	TER110350		Temperature flue sensor
18	CAN130120		Spark electrode
19	VAL110200		Manual air vent
20	TER130050		Overheat thermostat
21	BRU130150		Burner WH 130
21.1	BRU130100		Burner WH 100
22	COL130050		Air/gas manifold
23	CAN130100		Sensing electrode
24	TER050060		C.H. sensor
25	VEN130050		Fan
25.1	VEN130100		Fan/mixer WH 100 assembly
25.2	VEN130150		Fan/mixer WH 130 assembly
26	GUA110050		Fan gasket
27	RAC110050		Condensing trap
28	VAL130050		Gas valve
29	ORI110300		Plate heat exchanger "O"ring
30	SCA110350		Plate heat exchanger
31	GRU110050		Flow manifold
32	VAL010181		Safety relief valve
33	MOT110050		Diverter valve motor switch
34	OTT110050		C.H. diverter valve

Pos.	Part. No.	G.C. Part. No.	Description
35	RIV110050		Flow detector switch
36	TER050050		D.H.W. sensor
37	PRE050101		Low water pressure switch
38	PRE110150		Differential pressure switch
39	GRU110101		Return manifold

Plume Management Kit (page 20)

Part. No.	Description
TER110101	1 metre high plume kit
CUR110050	45° flue exhaust deflection bend
CUR11010	90° flue exhaust deflection bend

Accessories concentric flue 60/100 (page 25 - Table 4)

Part. No.	Description
PR5094110A	Straight flue header / sample point 60/100
PRFE	Flue Extension 60/100 L1000
PR45FBI	45° bend 60/100
PR90FBI	90° elbow bend 60/100
PR5023016	Horizontal terminal 60/100
PR5023016	Horizontal flue kit
TER110200	Vertical flue Terminal

Accessories concentric flue 80/125 (page 28)

Part. No.	Description
PR5094110A	Straight flue header / sample point 60/10
PRO110300	Flue Extension 80/125 L1000
RID110050	125/80 to 100/60 Flue reducer
CUR110250	45° bend 80/125
CUR110300	90° elbow bend 80/125
TER010050	Horizontal Flue Terminal 80/125
TER110200	Vertical Flue Terminal 80/125
TEG060050	Flashing sleeve/slate

Accessories eccentric flue 80/80 (page 26)

Part. No.	Description
SDO110050	Twin flue header F80/80
PRO110200	Straight pipe L1000 80
CUR110150	90° elbow bend 80
CUR110250	45° bend 80
GRI110050	Air inlet terminal 80
GRI110100	Exhaust terminal 80
TER060110	Vertical eccentric flue terminal

THE WHITE BOILER COMPANY

a Ravenheat Group Company

Chartists Way, Morley, Leeds, LS27 9ET

Telephone : 0044(0)113 252 7007

Tfax : 0044(0)113 238 0229

Website : www.ravenheat.co.uk

E-mail : sales@ravenheat.co.uk

Ravenheat reserves the right to make changes and improvements in our products which may affect the accuracy of the information contained in this leaflet.

SECTION 12 BENCHMARK COMMISSIONING CHECKLIST DETAILS

Boiler	Page	Page
Make and model	8/11	Burner operating pressure.....n/a
Appliance serial no. on data badge.....	Left side panel	Central operating flow temp..... measure and record
Controls		Central operating return temp.....measure and record
Time and temperature control to heating.....	15/45	For combination boilers only
Time and temperature control to hot water.....	15	Scale reducer.....18
Heating zone valves.....	n/a	Hot water mode
TRV' s.....	15	Max. operating burner pressure....measure and record
Auto by-pass.....	15	Max. operating water pressure.....measure and record
Boiler interlock.....	15	Cold water inlet temp..... measure and record
For all boilers		Hot water temp..... measure and record
Flushing to BS7593.....	17	Water flow rate at max. setting.....measure and record
Inhibitor.....	17	For condensing boiler only
Central heating mode		Condensate drain.....29/30
Heat input.....to be calculated		For all boilers: complete, sign & hand over customer.

**NOTE TO THE INSTALLER: COMPLETE
THE BENCHMARK COMMISSIONING
CHECKLIST AND LEAVE THESE
INSTRUCTIONS WITH APPLIANCE**



For assistance see The White Boiler Company technical helpline:
telephone: (0113) 252 7007
fax: (0113) 238 0229
e-mail: sales@ravenheat.co.uk

Code Of Practice

For the installation, commissioning and servicing
of domestic heating and hot water products

Benchmark places responsibilities on both manufacturers and installers.* The purpose is to ensure that customers** are provided with the correct equipment for their needs, that it is installed, commissioned and serviced in accordance with the manufacturer's instructions by competent persons and that it meets the requirements of the appropriate Building Regulations. Installers are required to carry out work in accordance with the following:

Standards of Work

- Be competent and qualified to undertake the work required.
- Install, commission, service and use products in accordance with the manufacturer's instructions provided.
- Ensure that where there is responsibility for design work, the installation is correctly sized and fit for purpose.
- Meet the requirements of the appropriate Building Regulations. Where this involves notifiable work be a member of a Competent Persons Scheme or confirm that the customer has notified Local Authority Building Control (LABC), prior to work commencing.
- Complete all relevant sections of the Benchmark Checklist/Service Record when carrying out commissioning or servicing of a product or system.
- Ensure that the product or system is left in a safe condition and, whenever possible, in good working order.
- Highlight to the customer any remedial or improvement work identified during the course of commissioning or servicing work.
- Refer to the manufacturer's helpline where assistance is needed.
- Report product faults and concerns to the manufacturer in a timely manner.

Customer Service

- Show the customer any identity card that is relevant to the work being carried out prior to commencement or on request.
- Give a full and clear explanation/demonstration of the product or system and its operation to the customer.
- Hand over the manufacturer's instructions, including the Benchmark Checklist, to the customer on completion of an installation.
- Obtain the customer's signature, on the Benchmark Checklist, to confirm satisfactory demonstration and receipt of manufacturer's instructions.
- Advise the customer that regular product servicing is needed, in line with manufacturers' recommendations, to ensure that safety and efficiency is maintained.
- Respond promptly to calls from a customer following completion of work, providing advice and assistance by phone and, if necessary, visiting the customer.
- Rectify any installation problems at no cost to the customer during the installer's guarantee period.




*The use of the word "installer" is not limited to installation itself and covers those carrying out installation, commissioning and/or servicing of heating and hot water products, or the use of supporting products (such as water treatment or test equipment).

**Customer includes householders, landlords and tenants.

INSTALLER NOTIFICATION GUIDELINES

A change to Building Regulations (England and Wales) requires the installer to notify when installing a heating appliance, as from 1st April 2005.

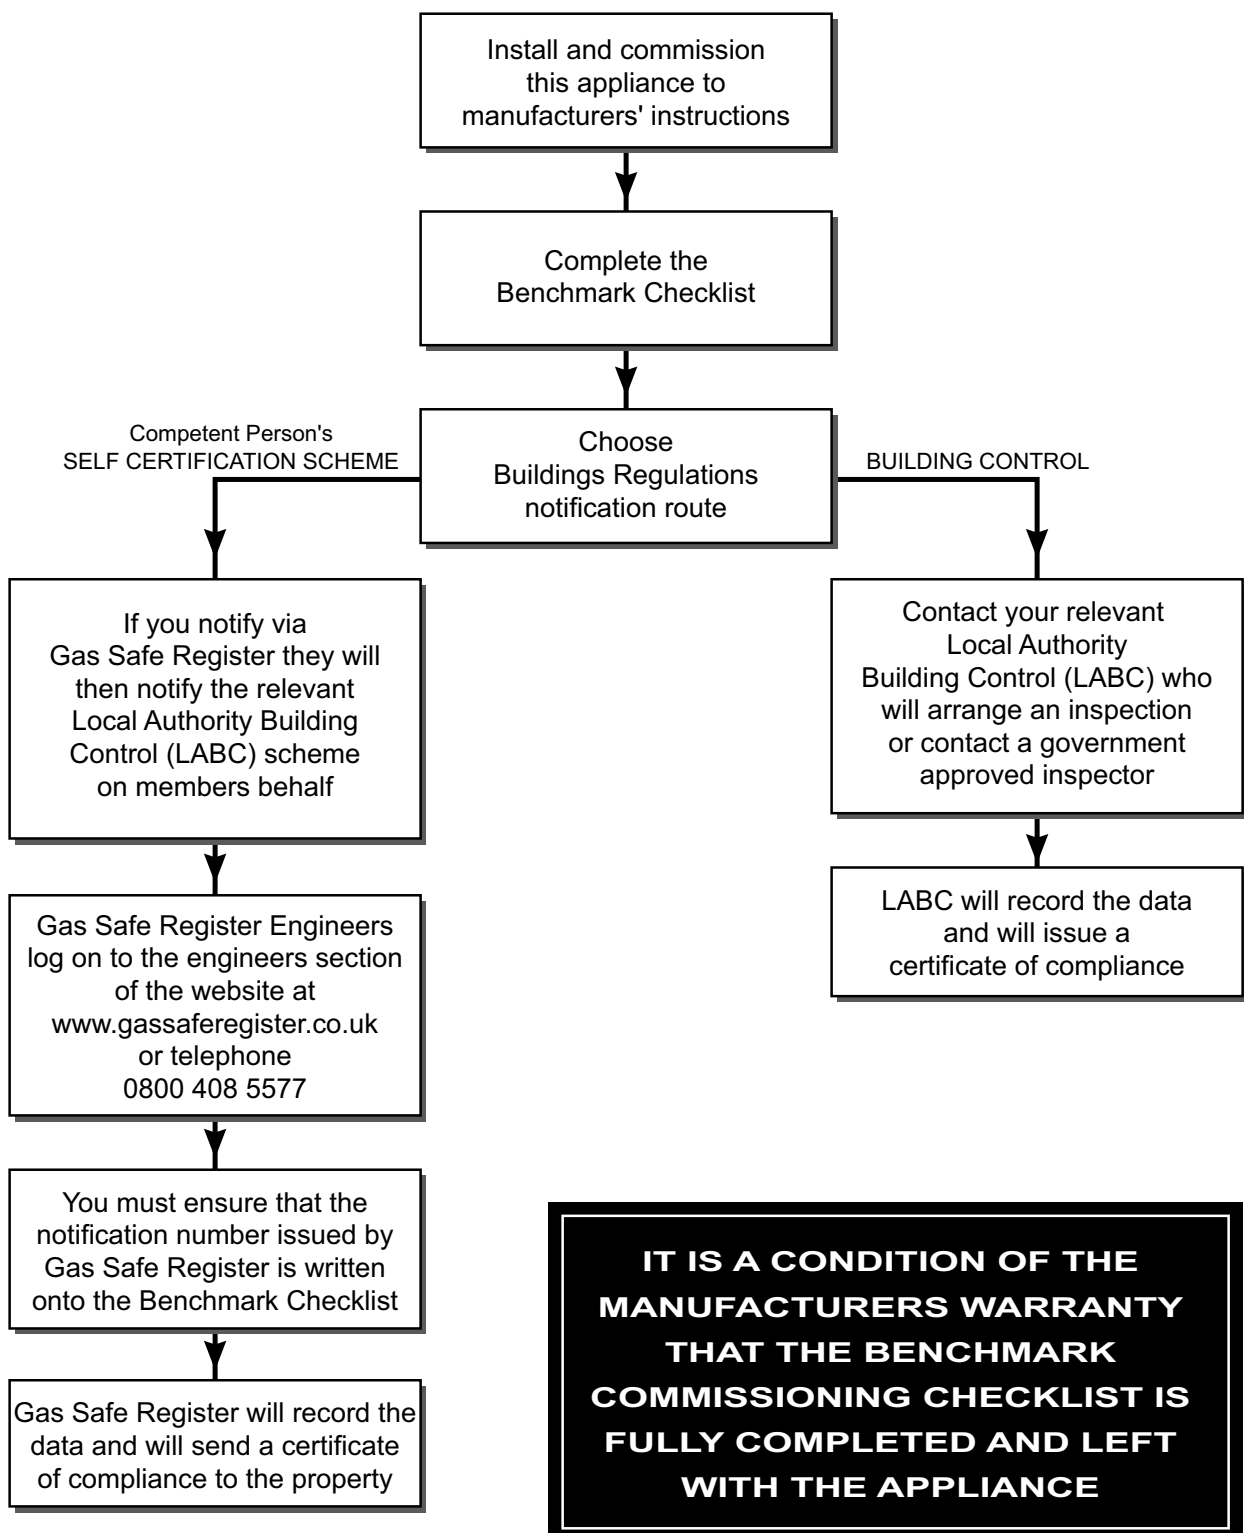

GAS BOILER SYSTEM COMMISSIONING CHECKLIST

This Commissioning Checklist is to be completed in full by the competent person who commissioned the boiler as a means of demonstrating compliance with the appropriate Building Regulations and then handed to the customer to keep for future reference.

Failure to install and commission according to the manufacturer's instructions and complete this Benchmark Commissioning Checklist will invalidate the warranty. This does not affect the customer's statutory rights.

Customer Name _____ Telephone Number _____

Address _____

Boiler Make and Model _____

Boiler Serial Number _____

Commissioned by (print name) _____ Gas Safe Register Number _____

Company Name _____ Telephone Number _____

Company Address _____

Commissioning Date _____

To be completed by the customer on receipt of a Building Regulations Compliance Certificate*:

Building Regulations Notification Number (if applicable) _____

CONTROLS Tick the appropriate boxes

Time and Temperature Control to Heating	Room Thermostat and Programmer/Timer <input type="checkbox"/>	Programmable Room Thermostat <input type="checkbox"/>	Load/Weather Compensation <input type="checkbox"/>	Optimum Start Control <input type="checkbox"/>
Time and Temperature Control to Hot Water	Cylinder Thermostat and Programmer/Timer <input type="checkbox"/>		Combination Boiler <input type="checkbox"/>	
Heating Zone Valves	Fitted <input type="checkbox"/>		Not Required <input type="checkbox"/>	
Hot Water Zone Valves	Fitted <input type="checkbox"/>		Not Required <input type="checkbox"/>	
Thermostatic Radiator Valves	Fitted <input type="checkbox"/>		Not Required <input type="checkbox"/>	
Automatic Bypass to System	Fitted <input type="checkbox"/>		Not Required <input type="checkbox"/>	
Boiler Interlock			Provided <input type="checkbox"/>	

ALL SYSTEMS

The system has been flushed and cleaned in accordance with BS7593 and boiler manufacturer's instructions Yes ☐

What system cleaner was used? _____

What inhibitor was used? _____ Quantity litres

CENTRAL HEATING MODE Measure and Record:

Gas Rate	<input type="text"/> m ³ /hr	OR	<input type="text"/> ft ³ /hr
Burner Operating Pressure (if applicable)	<input type="text"/> mbar	OR	Gas Inlet Pressure <input type="text"/> mbar
Central Heating Flow Temperature	<input type="text"/> °C		
Central Heating Return Temperature	<input type="text"/> °C		

COMBINATION BOILERS ONLY

Is the installation in a hard water area (above 200ppm)? Yes ☐ No ☐

If yes, and if required by the manufacturer, has a water scale reducer been fitted? Yes ☐ No ☐

What type of scale reducer has been fitted? _____

DOMESTIC HOT WATER MODE Measure and Record:

Gas Rate	<input type="text"/> m ³ /hr	OR	<input type="text"/> ft ³ /hr
Burner Operating Pressure (at maximum rate)	<input type="text"/> mbar	OR	Gas Inlet Pressure (at maximum rate) <input type="text"/> mbar
Cold Water Inlet Temperature	<input type="text"/> °C		
Hot water has been checked at all outlets	Yes <input type="checkbox"/>		Temperature <input type="text"/> °C
Water Flow Rate	<input type="text"/> l/min		

CONDENSING BOILERS ONLY

The condensate drain has been installed in accordance with the manufacturer's instructions and/or BS5546/BS6798 Yes ☐

If the condensate pipe terminates externally has the pipe diameter been increased and weatherproof insulation fitted? Yes ☐

ALL INSTALLATIONS

If required by the manufacturer, record the following CO₂ % OR CO ppm OR CO/CO₂ Ratio

The heating and hot water system complies with the appropriate Building Regulations Yes ☐

The boiler and associated products have been installed and commissioned in accordance with the manufacturer's instructions Yes ☐

The operation of the boiler and system controls have been demonstrated to and understood by the customer Yes ☐

The manufacturer's literature, including Benchmark Checklist and Service Record, has been explained and left with the customer Yes ☐

Commissioning Engineer's Signature _____

Customer's Signature _____

(To confirm satisfactory demonstration and receipt of manufacturer's literature)

*All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.



Service Record

It is recommended that your heating system is serviced regularly and that the appropriate Service Interval Record is completed.

Service Provider

Before completing the appropriate Service Record below, please ensure you have carried out the service as described in the manufacturer's instructions.

Always use the manufacturer's specified spare part when replacing controls.

Service 1 Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 2 Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 3 Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 4 Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 5 Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 6 Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Operative ID No. _____

Comments: _____

Signature: _____

Service 7 Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 8 Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 9 Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____

Service 10 Date: _____

Engineer Name: _____

Company Name: _____

Telephone No. _____

Gas Safe Register No. _____

Comments: _____

Signature: _____