

MURELLE HR 35 R (M)

INSTALLATION AND SERVICING INSTRUCTIONS



ENSURE THAT THESE
INSTRUCTIONS ARE LEFT
FOR THE USER AFTER
COMPLETION OF THE
BENCHMARK SECTION

PLEASE READ THE
IMPORTANT NOTICE
WITHIN THIS GUIDE
REGARDING YOUR BOILER
WARRANTY



IMPORTANT NOTICE

For the first year all of our appliances are protected by our manufacturer's guarantee which covers both parts and labour.

As you would expect from Sime Ltd, it is our aim to provide our valued customers with the best in after sales and service.

To take advantage of any extended warranty offered, all you have to do is to adhere to these 3 simple conditions:

- The installation must be carried out to Manufacturers Standards by a Gas Safe Registered Engineer, and recorded in the installation manual.
- The appliance must be registered with both Sime Ltd and Gas Safe within 30 days of installation.
- The appliance must be serviced annually, by either Sime Ltd or a Gas Safe registered engineer- ensuring that the service record in the installation manual is completed.

Failure to comply with the above will result in only the 12 month warranty being offered.

In the absence of any proof of purchase, the 12 month warranty period will commence from the date of manufacture of the boiler as shown on the appliance data plate.

SAFE HANDLING

This boiler may require 2 or more operatives to move it into its installation site, remove it from its packaging and during movement into its installation location. Manoeuvring the boiler may include the use of a sack truck and involve lifting pushing and pulling.

Caution should be exercised during these operations.

Operatives should be knowledgeable in handling techniques when performing these tasks and the following precautions should be considered:

- Grip the boiler at the base
- Be physically capable
- Use personal protective equipment as appropriate e.g. gloves, safety footwear.

During all manoeuvres and handling actions, every attempt should be made to ensure the following unless unavoidable and/or the weight is light.

- Keep back straight
- Avoid twisting at the waist
- Always grip with the palm of the hand
- Keep load as close to the body as possible
- Always use assistance

WARNING

Caution should be exercised when performing any work on this appliance.

Protective gloves and safety glasses are recommended.

- Avoid direct contact with sharp edges.
- Avoid contact with any hot surfaces.

NOTICE

Please be aware that due to the wet testing of the appliance, there may be some residual water in the hydraulic circuit.

- Protect any surfaces, carpets or floorings.
- Use a suitable container to catch any water that escapes when removing the protective caps from the connections.

Code Of Practice

For the installation, commissioning and servicing
of domestic heating and hot water products

Benchmark places responsibilities on both manufacturers and installers.* The purpose is to ensure that customers** are provided with the correct equipment for their needs, that it is installed, commissioned and serviced in accordance with the manufacturer's instructions by competent persons and that it meets the requirements of the appropriate Building Regulations. Installers are required to carry out work in accordance with the following:

Standards of Work

- Be competent and qualified to undertake the work required.
- Install, commission, service and use products in accordance with the manufacturer's instructions provided.
- Ensure that where there is responsibility for design work, the installation is correctly sized and fit for purpose.
- Meet the requirements of the appropriate Building Regulations. Where this involves notifiable work be a member of a Competent Persons Scheme or confirm that the customer has notified Local Authority Building Control (LABC), prior to work commencing.
- Complete all relevant sections of the Benchmark Checklist/Service Record when carrying out commissioning or servicing of a product or system.
- Ensure that the product or system is left in a safe condition and, whenever possible, in good working order.
- Highlight to the customer any remedial or improvement work identified during the course of commissioning or servicing work.
- Refer to the manufacturer's helpline where assistance is needed.
- Report product faults and concerns to the manufacturer in a timely manner.

Customer Service

- Show the customer any identity card that is relevant to the work being carried out prior to commencement or on request.
- Give a full and clear explanation/demonstration of the product or system and its operation to the customer.
- Hand over the manufacturer's instructions, including the Benchmark Checklist, to the customer on completion of an installation.
- Obtain the customer's signature, on the Benchmark Checklist, to confirm satisfactory demonstration and receipt of manufacturer's instructions.
- Advise the customer that regular product servicing is needed, in line with manufacturers' recommendations, to ensure that safety and efficiency is maintained.
- Respond promptly to calls from a customer following completion of work, providing advice and assistance by phone and, if necessary, visiting the customer.
- Rectify any installation problems at no cost to the customer during the installer's guarantee period.



*The use of the word "installer" is not limited to installation itself and covers those carrying out installation, commissioning and/or servicing of heating and hot water products, or the use of supporting products (such as water treatment or test equipment).

**Customer includes householders, landlords and tenants.

The Benchmark Scheme

Sime Ltd is a licensed member of the Benchmark Scheme which aims to improve the standards of installation and commissioning of domestic heating and hot water systems in the UK and to encourage regular servicing to optimise safety, efficiency and performance.

Benchmark is managed and promoted by the Heating and Hotwater Industry Council.
For more information visit www.centralheating.co.uk



Murelle HE 35 R Gas Council number 41-283-29
Murelle HE 35 R M: Gas Council number 41-283-30

CONTENTS

1	DESCRIPTION OF THE BOILER.....	pag. 6
2	INSTALLATION.....	pag. 10
3	CHARACTERISTICS.....	pag. 28
4	USE AND MAINTENANCE, BENCHMARK AND COMMISSIONING.....	pag. 35
5	FAULT FINDING.....	pag. 47
6	REPLACEMENT OF PARTS.....	pag. 48
7	EXPLODED VIEWS.....	pag. 49
	APPENDIX 1.....	pag. 52

IMPORTANT INFORMATION

IT IS A STATUTORY REQUIREMENT THAT ALL GAS APPLIANCES ARE INSTALLED BY COMPETENT PERSONS, IN ACCORDANCE WITH THE GAS SAFETY (INSTALLATION AND USE) REGULATIONS (CURRENT EDITION). THE MANUFACTURER'S INSTRUCTIONS MUST NOT BE TAKEN AS OVERRIDING ANY STATUTORY REQUIREMENTS, AND FAILURE TO COMPLY WITH THESE REGULATIONS MAY LEAD TO PROSECUTION.

NO MODIFICATIONS TO THE APPLIANCE SHOULD BE MADE UNLESS THEY ARE FULLY APPROVED BY THE MANUFACTURER.

GAS LEAKS: DO NOT OPERATE ANY ELECTRICAL SWITCH, OR USE A NAKED FLAME. TURN OFF THE GAS SUPPLY AND VENTILATE THE AREA BY OPENING DOORS AND WINDOWS CONTACT THE GAS EMERGENCY SERVICE ON 0800111999.

Please refer to commissioning instructions for filling in the checklist at the back of this installation guide.

Note: All Gas Safe registered installers carry a ID Card.

You can check your installer is Gas Safe Registered by calling 0800 408 5577

IMPORTANT

When carrying out commissioning of the boiler, you are highly recommended to perform the following checks:

- Make sure that there are no liquids or inflammable materials in the immediate vicinity of the boiler.
- Make sure that the electrical connections have been made correctly and that the earth wire is connected to a good earthing system.
- Open the gas valve and check the soundness of the connections, including that of the burner.
- Make sure that the boiler is set for operation for the type of gas supplied.
- Check that the flue pipe for the outlet of the products of the combustion is unobstructed and has been properly installed.
- Make sure that any shutoff valves are open.
- Make sure that the system is charged with water and is thoroughly vented.
- Check that the circulating pump is not jammed.
- Purge the system, bleeding off the air present in the gas pipe by operating the pressure relief valve on the gas valve inlet.
- Complete the checklist included in this manual.

1 DESCRIPTION OF THE BOILER

1.1 INTRODUCTION

MURELLE HM 35 R (M) are premixed gas condensing boilers for heating only with wide range of power modulation (from 20% to 100% of power) designed for sin-

gle installation and in modular systems with multiple generators connected in sequence/cascade and independent from each other.

MURELLE HM 35 R (M) are compliant

with European Directives 2009/142/CE, 2004/108/CE, 2006/95/CE and 92/42/CE.

For optimum installation and operation, always follow the instructions provided in this manual.

1.2 DIMENSIONS (fig. 1)

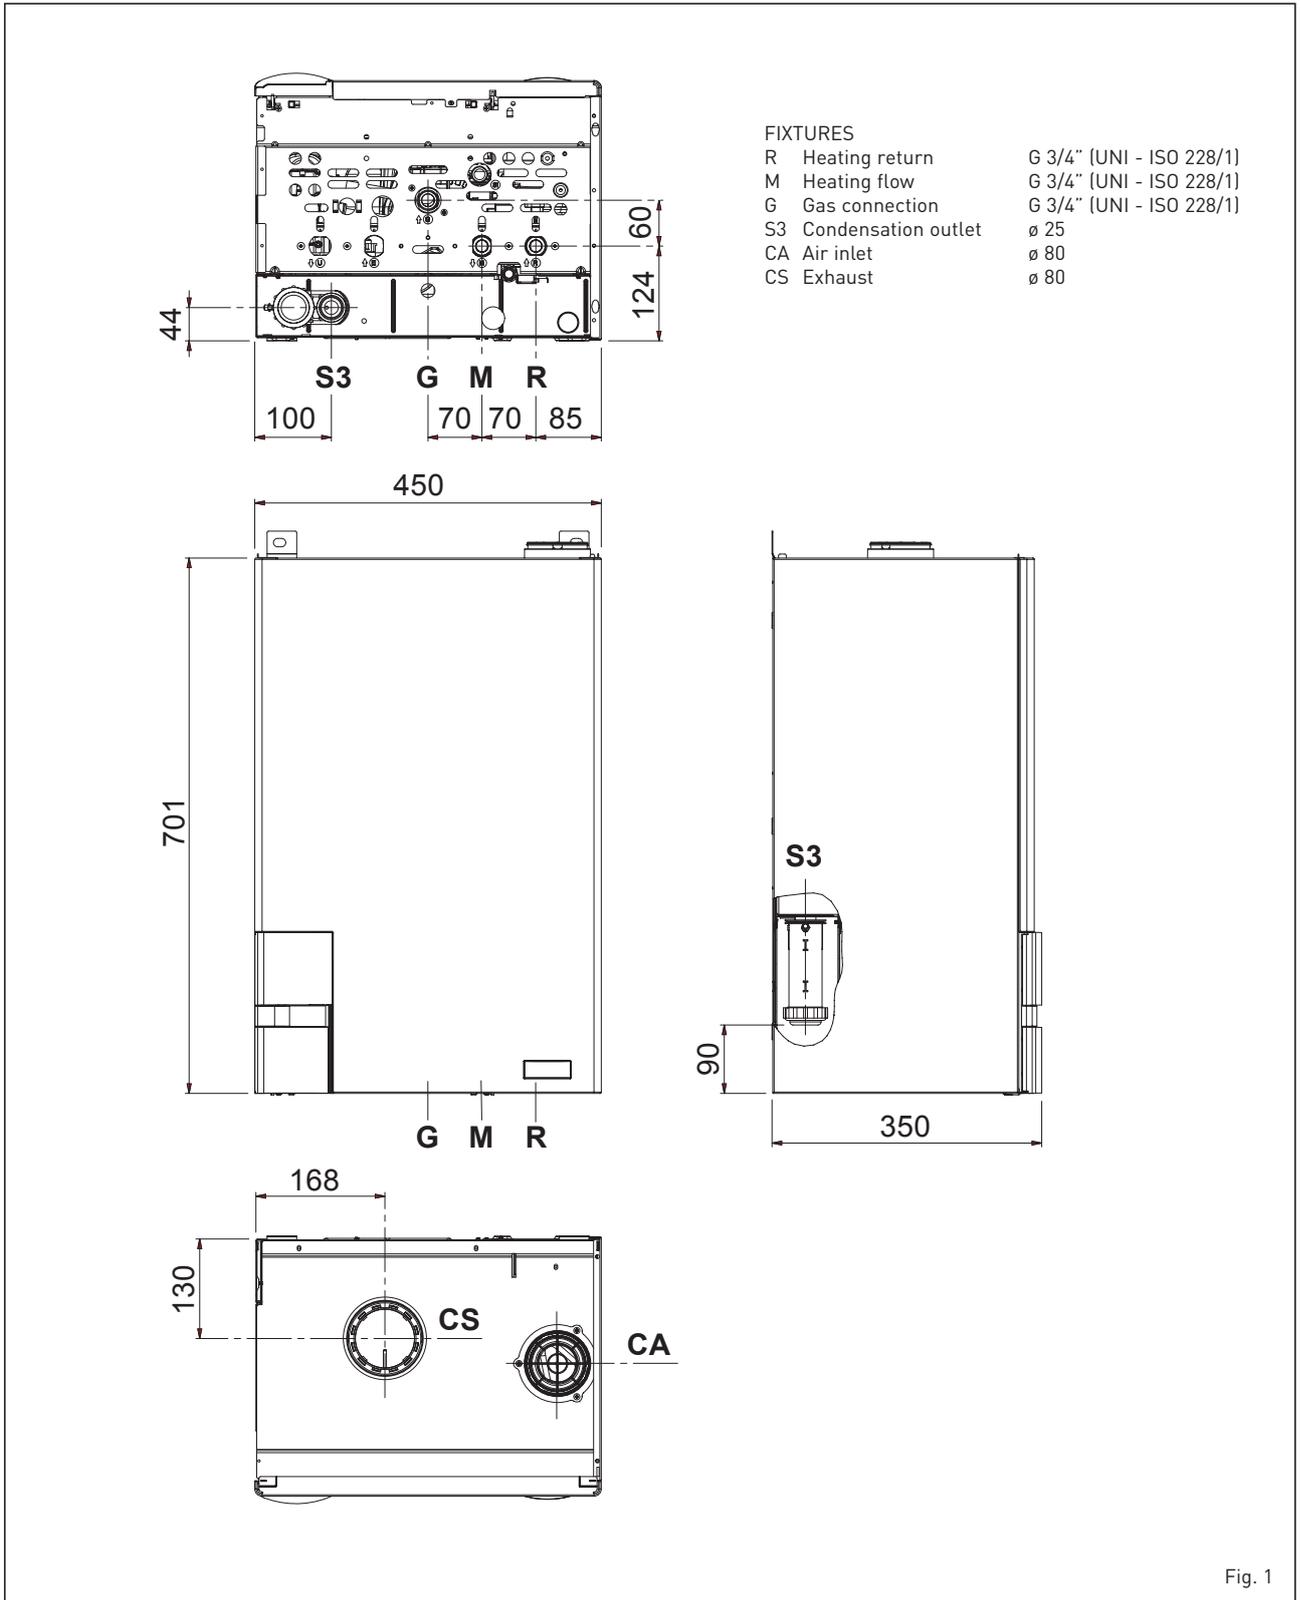


Fig. 1

1.3 TECHNICAL FEATURES

		MURELLE HE 35 R (M)
Heat output		
Nominal (80-60°C)	kW	33.8
Nominal (50-30°C)	kW	37.2
Reduced G20 (80-60°C)	kW	3.2
Reduced G20 (50-30°C)	kW	3.7
Reduced G31 (80-60°C)	kW	5.5
Reduced G31 (50-30°C)	kW	6.4
Heat input nominal	kW	34.8
Heat input reduced G20/G31	kW	3.48/6.0
Max/min useful yield (80-60°C)	%	92.0/97.2
Max/min useful yield (50-30°C)	%	106.3/106.8
Thermal efficiency (CEE 92/42 directive)		★★★★
Losses after shutdown to 50°C (EN 483)	W	108
Supply voltage	V-Hz	230-50
Adsorbed power consumption with fixed/modulating pump (M)	W	140/105
Electrical protection grade	IP	X4D
C.H. setting range	°C	20/80
Water content boiler	l	2.65
Maximum water head	bar	3.5
Maximum temperature	°C	85
Capacity of the heating expansion vessel	l	--
Pressure of the heating expansion vessel	bar	--
D.H.W. setting range	°C	--
D.H.W. flow rate (EN 625)	l/min	--
Continuous D.H.W. flow rate Δt 30°C	l/min	--
Minimum D.H.W. flow rate	l/min	--
D.H.W. pressure min/max	bar	--
D.H.W. pressure min. nom. power	bar	--
Exhaust fumes temperature at max flow rate (80-60°C)	°C	70
Exhaust fumes temperature at min. flow rate (80-60°C)	°C	60
Exhaust fumes temperature at max flow rate (50-30°C)	°C	40
Exhaust fumes temperature at min. flow rate (50-30°C)	°C	33
Smokes flow min/max	kg/h	6/59
CO₂ at max/min flow rate G20	%	8.4/9.3
CO₂ at max/min flow rate G31	%	10.0/10.2
CE certification	n°	1312CM5630
Category		II2H3P
Type		B23P-53P/C13-33-43-53-83
NOx emission class		5 (< 30 mg/kWh)
Weight when empty	kg	32
Main burner nozzle		
Quantity nozzles	n°	2
G20 nozzle diameter diversified	∅	3.5/4.0
G31 nozzle diameter diversified	∅	2.8/3.0
Consumption at maximum/minimum flow rate		
Maximum G20	m ³ /h	3.68
Minimum G20	m ³ /h	0.39
Maximum G31	kg/h	2.70
Minimum G31	kg/h	0.46
Gas supply pressure		
G20/G31	mbar	20/37

1.4 FUNCTIONAL DIAGRAM (fig. 2)


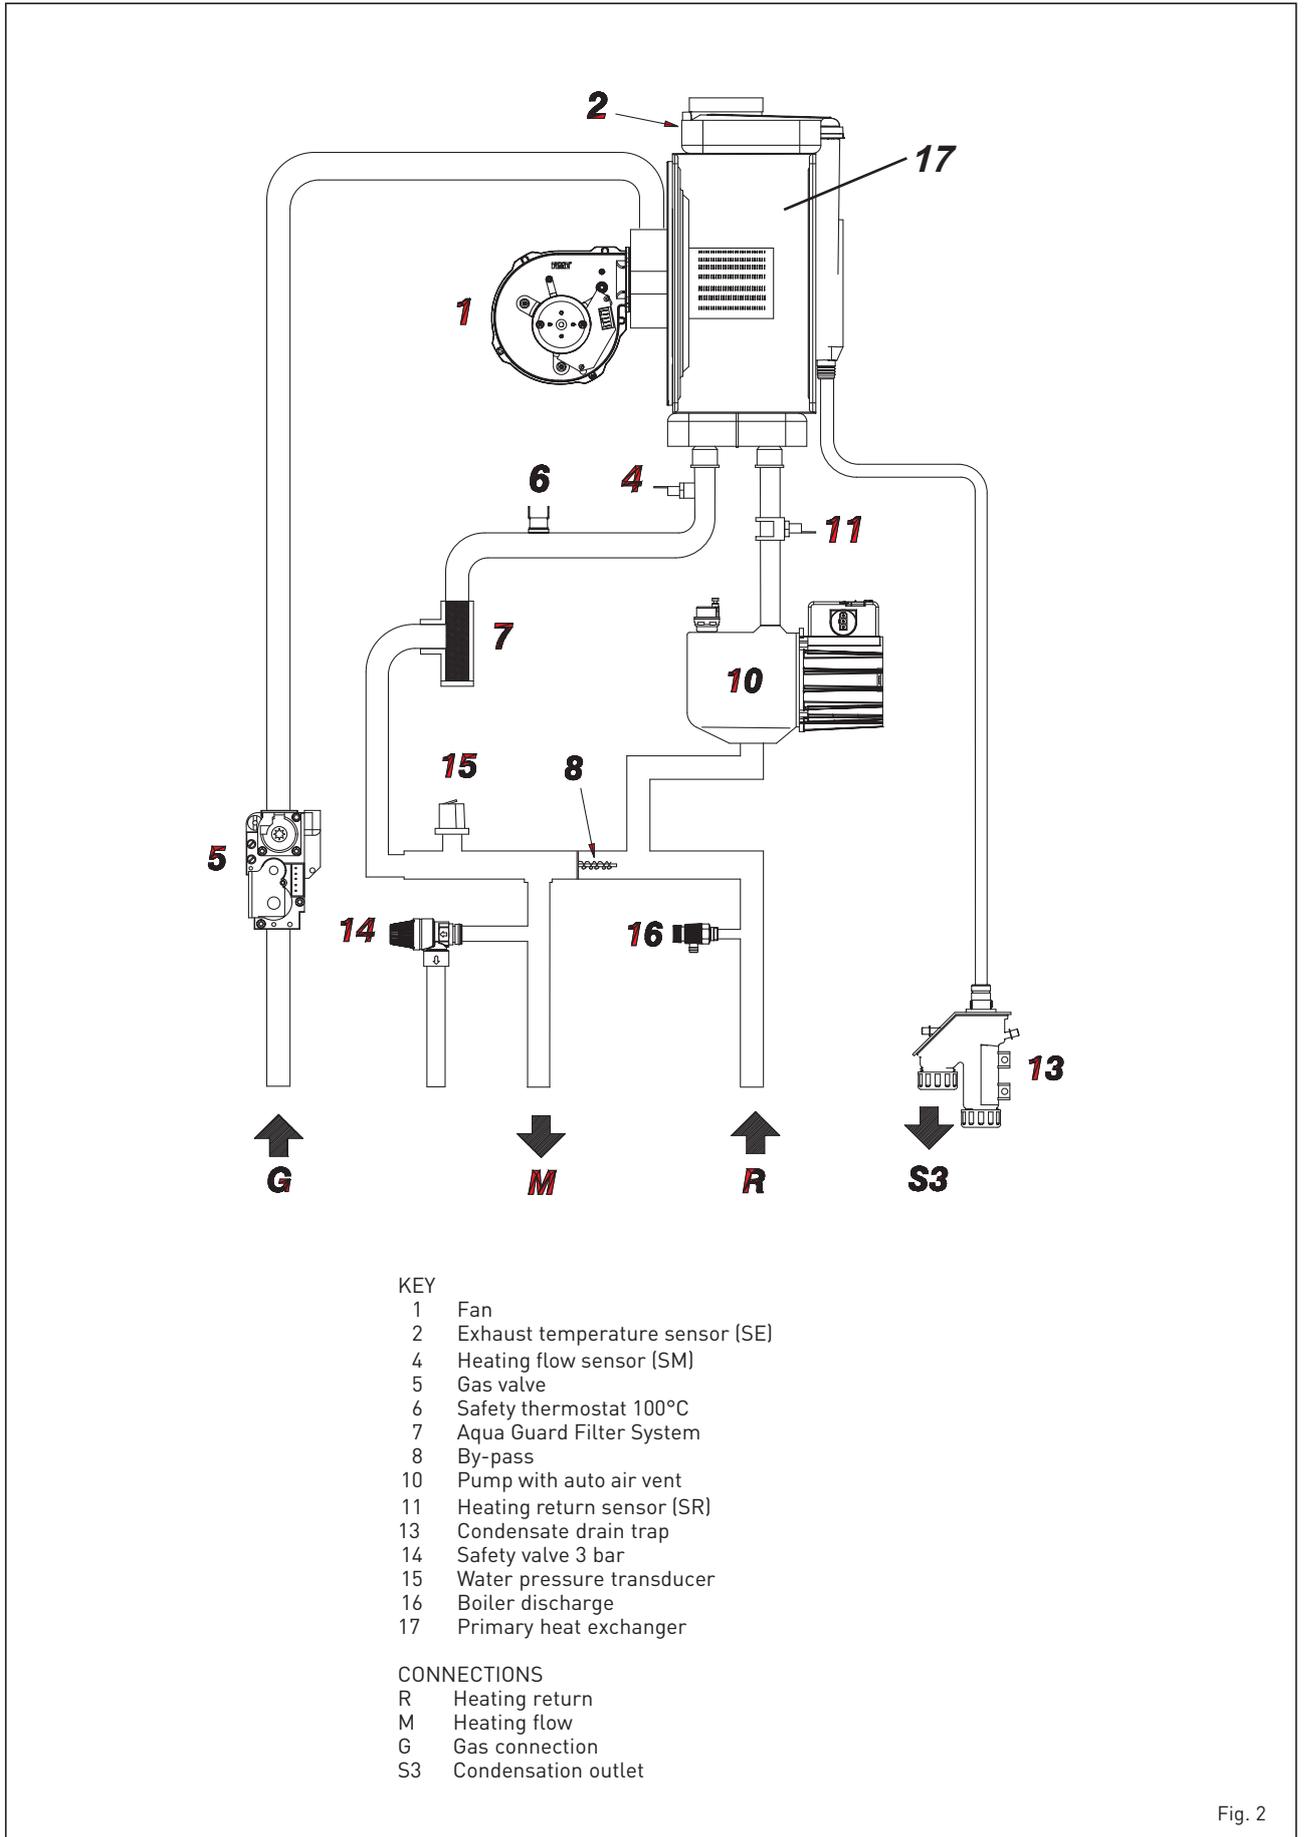


Fig. 2

1.5 MAIN COMPONENTS (fig. 3)

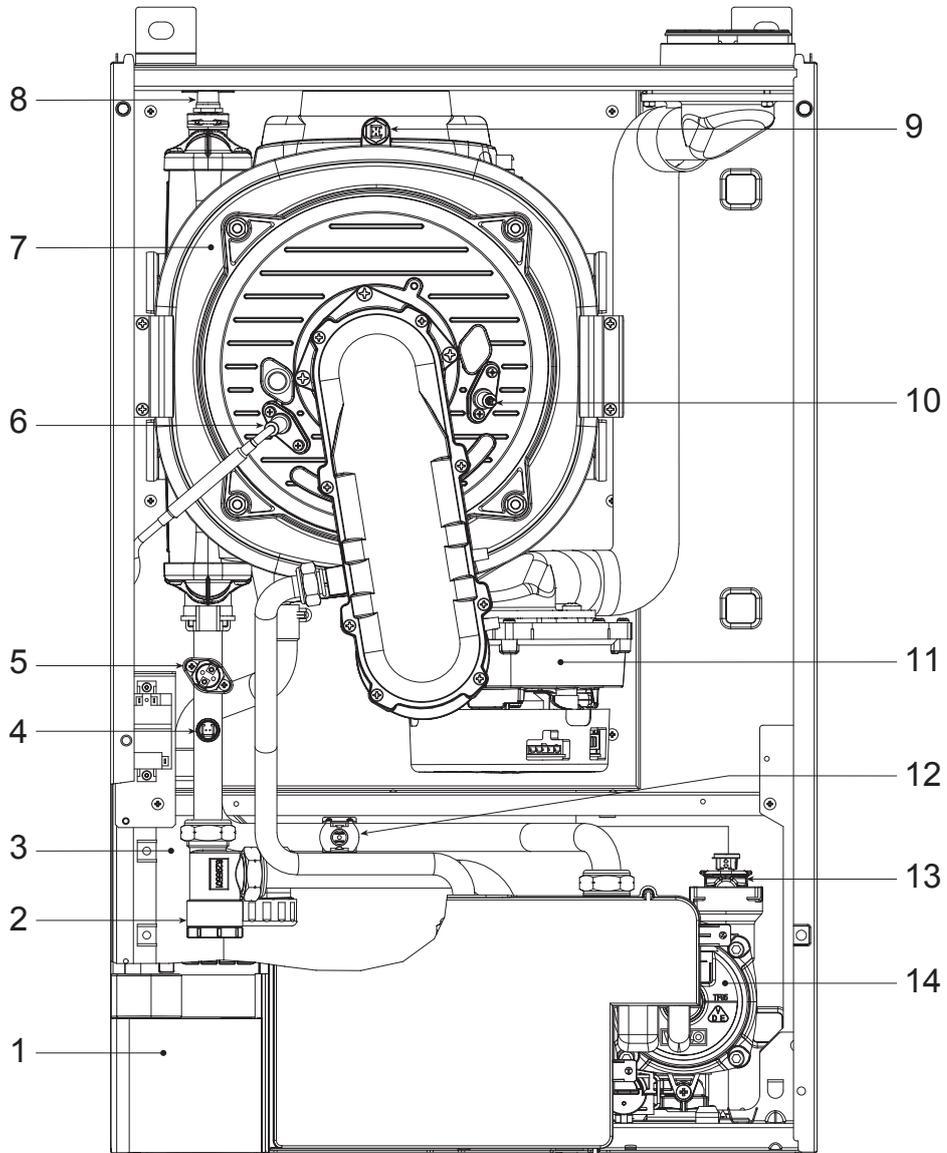

KEY

- 1 Control panel
- 2 Aqua Guard Filter System
- 3 Condensate drain trap
- 4 Heating flow sensor (SM)
- 5 Safety thermostat
- 6 Ignition electrode
- 7 Primary heat exchanger
- 8 Limit thermostat
- 9 Exhaust probe (SF)
- 10 Detection electrode
- 11 Fan
- 12 Return heating probe (SR)
- 13 Automatic air vent
- 14a Pump fixed
- 14b Modulating pump

Fig. 3

2 INSTALLATION

The boiler must be installed in a fixed location and only by qualified engineers in compliance with all instructions contained in this manual.

Furthermore, the installation must be in accordance with current standards and regulations.

2.1 VENTILATION

MURELLE HE 35 R (M) can be installed in boiler rooms whose size and requirements meet current regulations.

VENTILATION

The following is provide for your guidan-

ce only, and assumes the ventilation air is taken directly from outside. The sizes of the vents may need to be increased in respect of other appliances installed in the same area, and seasonal use. Take care that the position of low level vents would not subject to adverse weather conditions, ie flooding.

Ventilation requirements for Murelle HE 35 R boilers and cascade systems.

BS6644 has a requirement that the temperatures in a room or compartment do not exceed certain levels:

- 25°C at floor level(0-100mm)
- 32°C at mid level (1.5M above the floor level)
- 40° C at ceiling level (0-100mm from

ceiling)

When installed as a class B appliance (open flued, not roomed sealed).

Installed in a room

High level (within 15% of the room height from ceiling) - 2cm²/KW of net heat input

Low level (low as possible within 1 metre from floor natural gas, 250mm LPG)- 4cm²/KW of net heat input

A single Murelle HE 35 R (34.8 KW net input) boiler would require 70 cm² at high level and 140 cm² at low level.

Installed in a compartment or enclosure
High level (within 15% of the room height from ceiling) - 5 cm²/KW of net heat input

Low level (low as possible within 1 metre from floor natural gas, 250 mm LPG) - 10

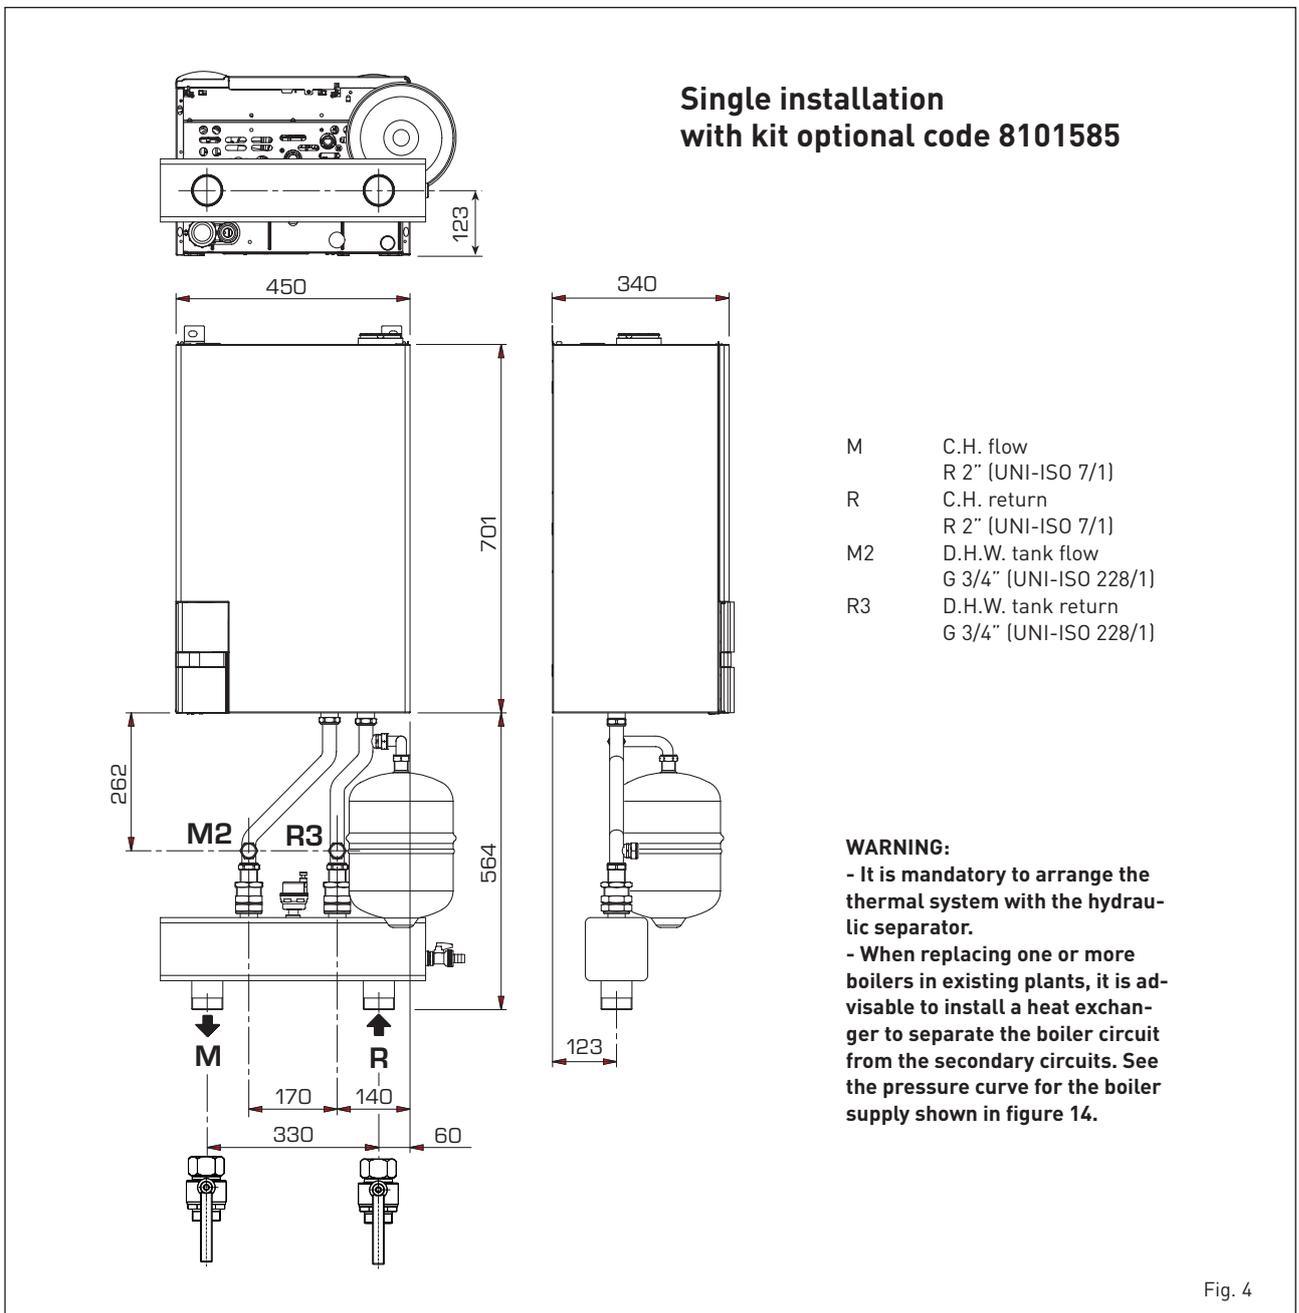


Fig. 4

cm²/KW of net heat input.

A single Murelle HE 35 R (34,8 KW net input) boiler would require 174 cm² at high level and 348 cm² at low level.

When installed as a class C appliance(room sealed)

Installed in a room

High level (within 15% of the room height from ceiling) - 2cm²/KW of net heat input

Low level (low as possible within 1 metre from floor natural gas, 250mm LPG)- 2cm²/KW of net heat input

A single Murelle HE 35 R (34,8 KW net input) boiler would require 70 cm² at high level and 70 cm² at low level.

Installed in a compartment or enclosure

High level (within 15% of the room height from ceiling) - 5cm²/KW of net heat input

Low level (low as possible within 1 metre from floor natural gas, 250mm LPG)- 5cm²/KW of net heat input.

A single Murelle HE 35 R (34,8 KW net input) boiler would require 174 cm² at high level and 174 cm² at low level.

2.2 INSTALLATION

2.2.1 Single boiler (fig. 4)

For single boiler installations a kit is available upon request: cod. 8101585.

The boiler is supplied as a Class b device(open flued), it can be converted to a Class C device (room sealed), see section 2.5.

The system head available is shown in section 3.8.

If the connected system incorporates additional pumps, then a hydraulic separator must be installed. if the boiler is to be installed in an existing system then consideration must be made for the use of a plate heat exchanger..

2.2.2 Sequence/cascade boilers (fig. 4 - fig. 4/a)

Attention

In sequence or cascade installations the use of a hydraulic separator is mandatory.

When boilers are connected to a common cascade flue(incorporating a clapet valve) , each boiler connected to the common flue must have PAR 1 reset as follows:

- **PAR 1 = 6** (for G20 NATURAL GAS boilers)
- **PAR 1 = 14** (for G31 PROPANE boilers)

Refer to section 3.3 to access the INSTALLER PARAMETERS section.

The boiler is supplied with **RS-485** that board that allows management of up to

8 boilers in cascade and communication in MODBUS.

The board is placed on the back of the control panel.

Access the board and select the desired operating mode (CASCADE or MODBUS) by selecting the DIP SWITCH of the board as indicated in figure 4/a.

CASCADE mode (fig. 4/b)

Electrically connect all the boilers in CASCADE mode and set PAR 15 accordingly(master or slave), as shown in fig 4/b.


CASCADE WITH MORE THAN TWO BOILERS

When more than two boilers are connected in cascade, it is essential that the OEM parameter on the "Master" boiler is reset to coincide with the number of boilers in the cascade.

This must be done after setting PAR 15 on the designated Master boiler to "0"

On the "Master" boiler press any key to wake up the display.

Then press simultaneously the and the buttons for 5 seconds until the display is as shown.

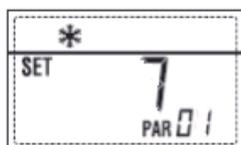


Then press again, simultaneously, the and the buttons for 2 seconds until the display shows.



Next press, in the order shown

The display will be as shown.

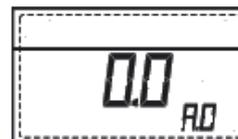

Press the button, and the display will show.



Use the and buttons to set the number of boilers in the cascade.

Then press to confirm the settings.

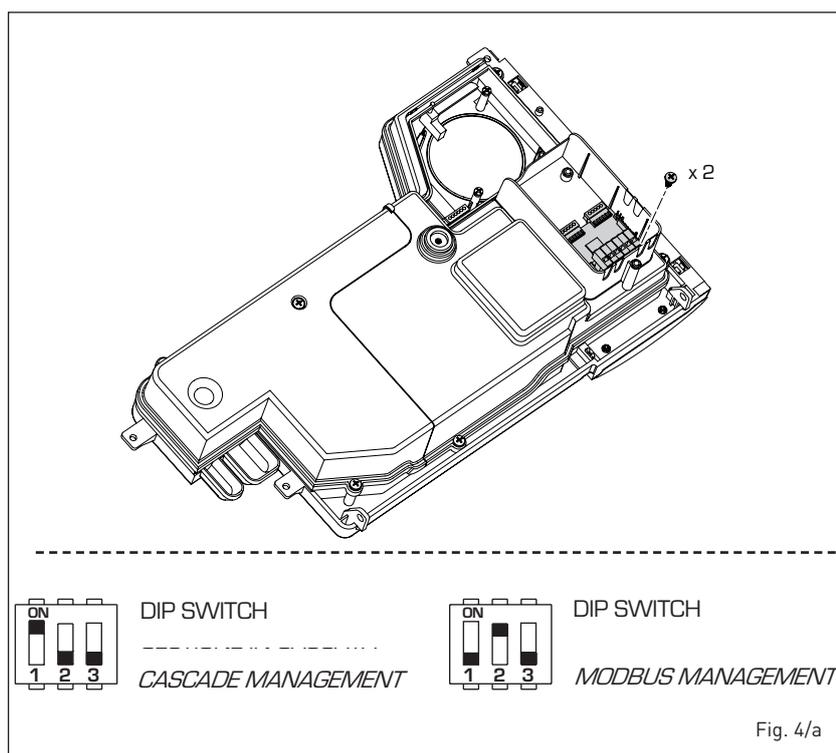


Fig. 4/a

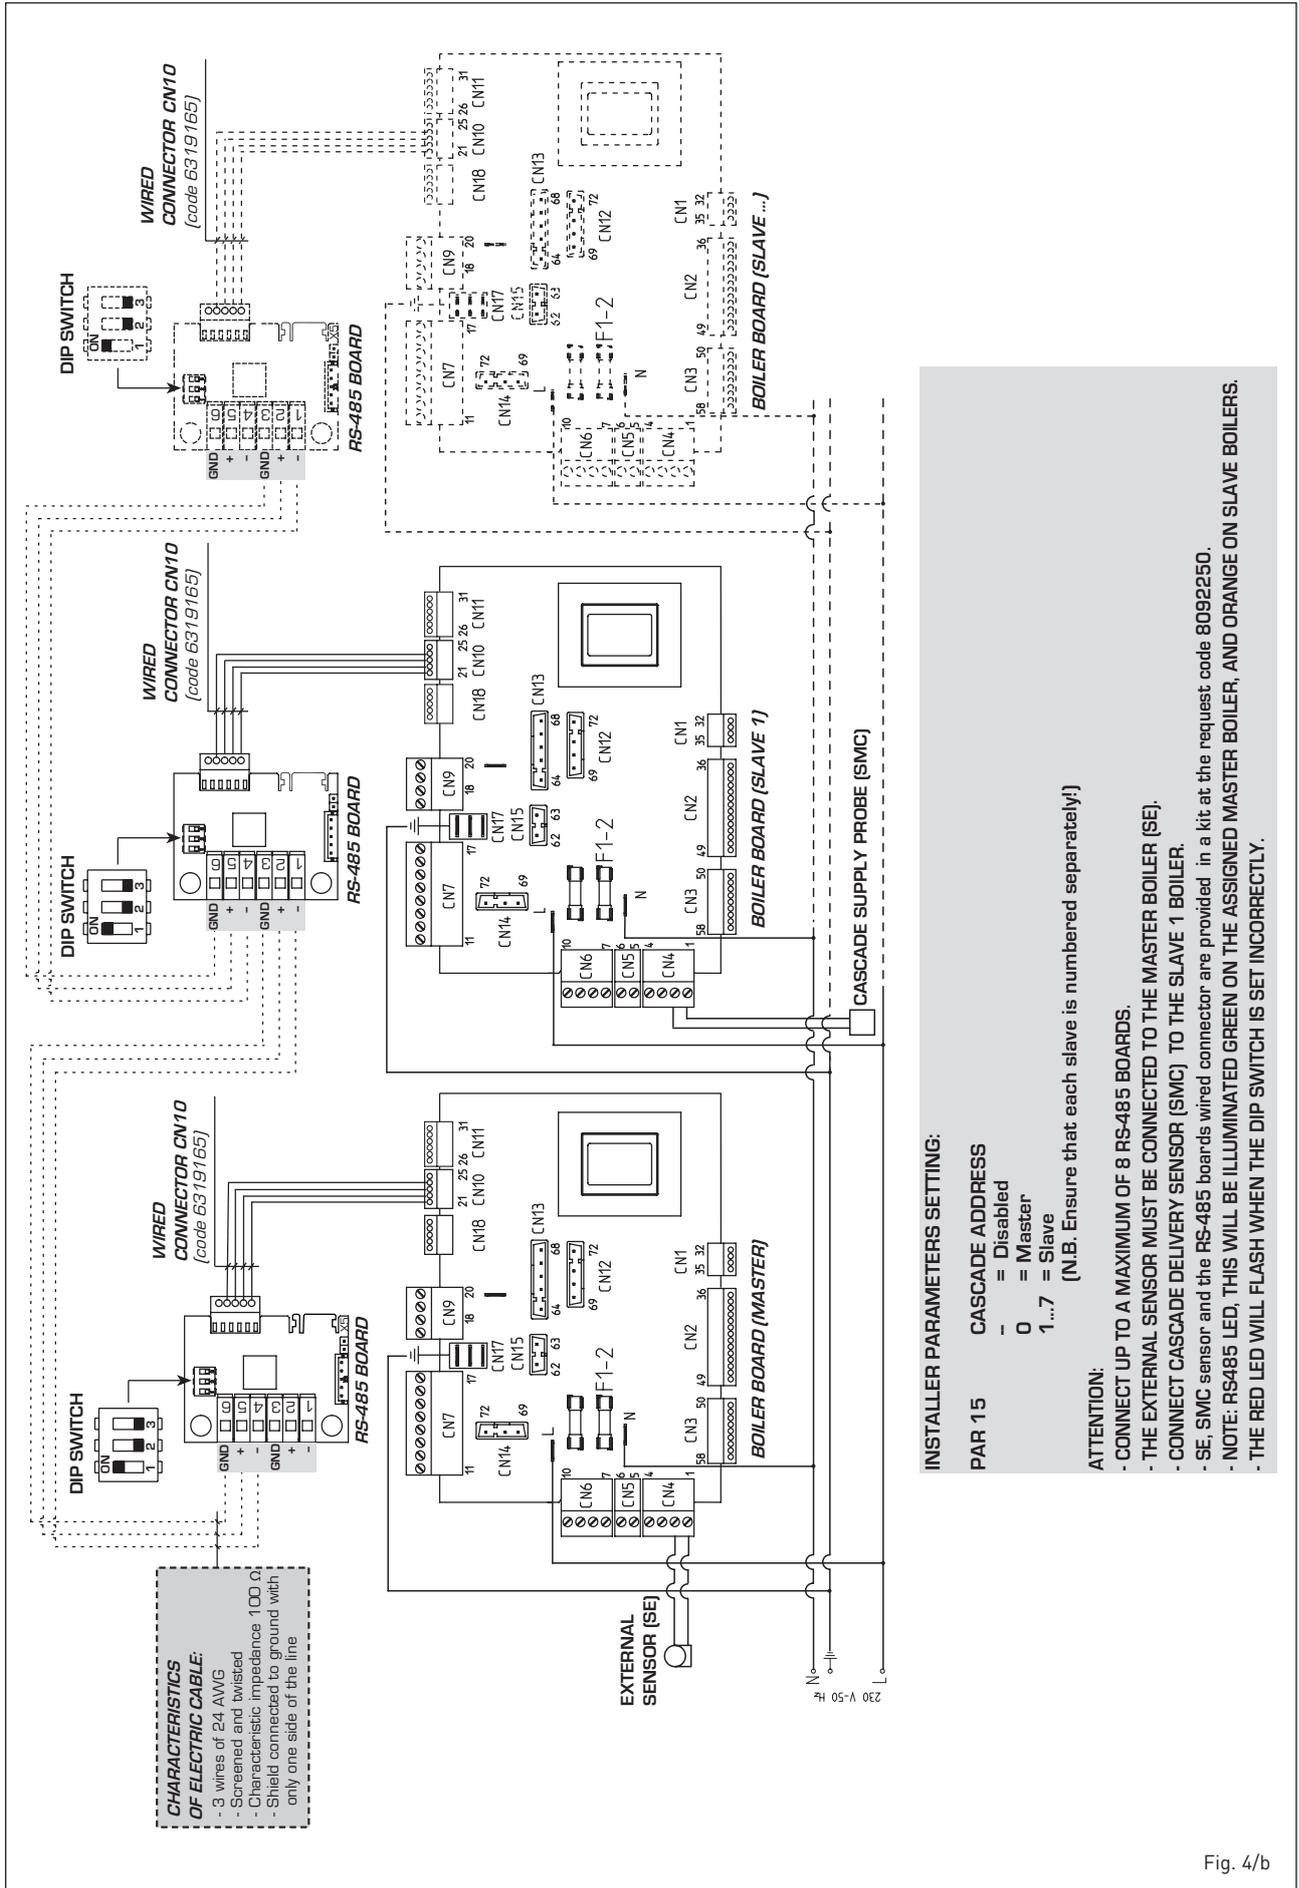


Fig. 4/b

MODBUS mode (fig. 4/c)

The RS-485 board can be used for MODBUS communication of every MURELLE HE 35 R (M) boiler.

In this case, proceed as follows:

- Set the DIP SWITCH of the RS-485 board and the PAR 16 as indicated in the figure.

- Choose the communication configuration suited to the MODBUS network (PAR 17 INST) according to **Table PAR 17 INST**.

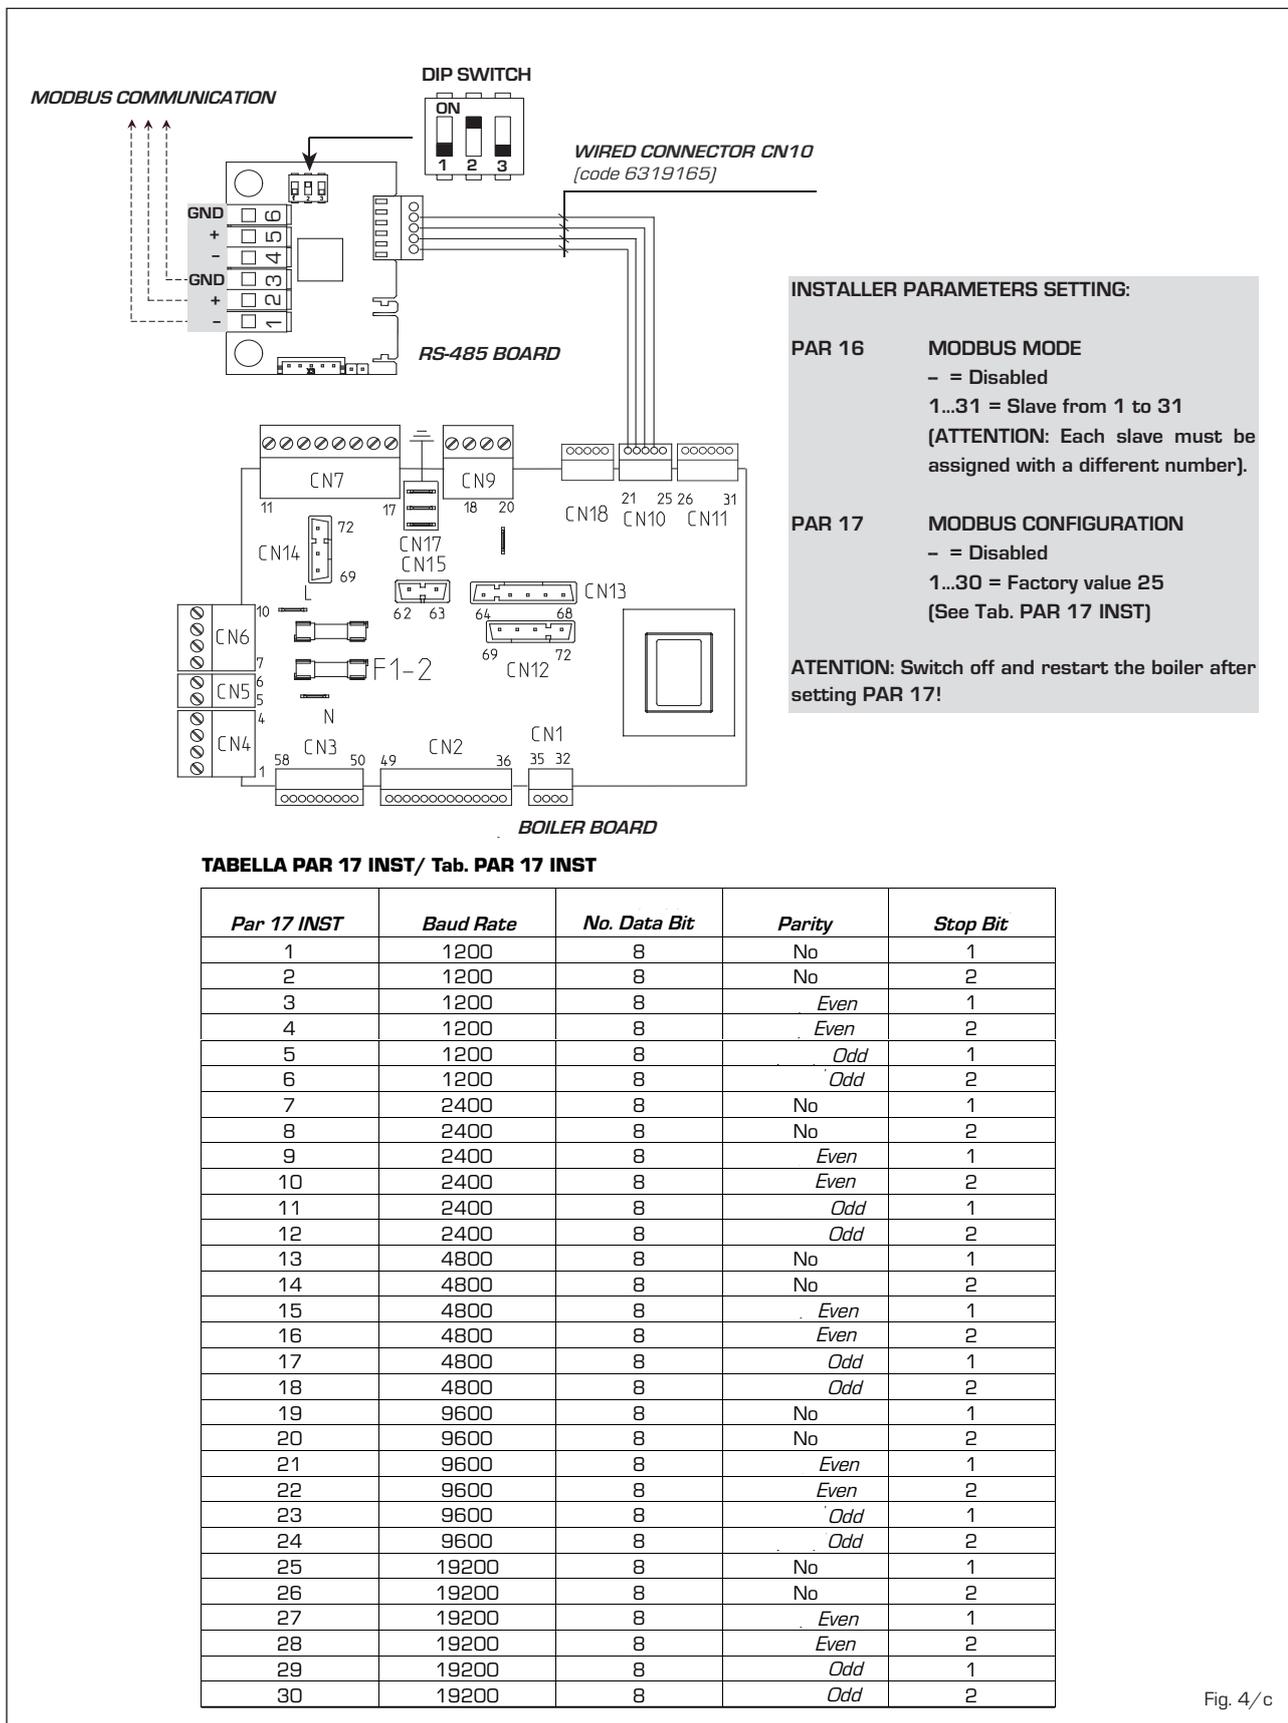


TABELLA PAR 17 INST/ Tab. PAR 17 INST

Par 17 INST	Baud Rate	No. Data Bit	Parity	Stop Bit
1	1200	8	No	1
2	1200	8	No	2
3	1200	8	Even	1
4	1200	8	Even	2
5	1200	8	Odd	1
6	1200	8	Odd	2
7	2400	8	No	1
8	2400	8	No	2
9	2400	8	Even	1
10	2400	8	Even	2
11	2400	8	Odd	1
12	2400	8	Odd	2
13	4800	8	No	1
14	4800	8	No	2
15	4800	8	Even	1
16	4800	8	Even	2
17	4800	8	Odd	1
18	4800	8	Odd	2
19	9600	8	No	1
20	9600	8	No	2
21	9600	8	Even	1
22	9600	8	Even	2
23	9600	8	Odd	1
24	9600	8	Odd	2
25	19200	8	No	1
26	19200	8	No	2
27	19200	8	Even	1
28	19200	8	Even	2
29	19200	8	Odd	1
30	19200	8	Odd	2

Fig. 4/c

MODBUS BOILER VARIABLES LIST							
Modbus address	Variable description	Type	Read /Write	U.M.	Min value	Max value	Function
Digital variables							
1	Boiler CH Enable/Request	D	R/W	-	0	1	Request CH zone 1
2	Boiler DHW Enable	D	R/W	-	0	1	Enable DHW preparation
3	Boiler Water Filling Function	D	R/W	-	0	1	Not used
32	Boiler CH Mode	D	R	-	0	1	State CH zone 1
33	Boiler DHW Mode	D	R	-	0	1	State preparation DHW
34	Boiler Flame Status	D	R	-	0	1	State presence flame
35	Boiler Alarm Status	D	R	-	0	1	State presence alarm
Analog variables							
1	Boiler CH Primary Setpoint	A	R/W	0,1°C	20,0	80,0	Setpoint CH zone 1. If you receive a value out of range so the value isn't received and the boiler temperature control is maintained of fixed point or a temperature curve.
2	Boiler DHW Primary Setpoint	A	R/W	0,1°C	20,0	80,0	Setpoint CH during ACS preparation (for PAR 66 installer parameters) If you receive a value out of range the value isn't received and it is used the boiler value regulation .
3	Boiler DHW Setpoint	A	R/W	0,1°C	10,0	80,0	Setpoint ACS. If you receive a value out of range the value isn't received and it is used the boiler value regulation.
4	Outside Temperature MB	A	R/W	0,1°C	-55,0	95,0	External value of temperature by MobBus. If you receive a value out of range the value isn't received. In case of conflict the boiler will give priority to the value of the probe connected to it.
5	Boiler CH Curve Slope	A	R/W	0,1	3,0	40,0	Slope of heating curve of zone 1 (it is used instead of the curve set in the boiler). If you receive a value out of range the value isn't received and it is used the boiler heating curve.
6	Boiler CH Curve Displacement	A	R/W	0,1	-5,0	5,0	Shift value of room zone 1 set (it is used instead of the shift set in the boiler). If you receive a value out of range the value isn't received and it is used the boiler heating curve.
64	Boiler DHW Water Temperature	A	R	0,1°C	0,0	100,0	DHW temperature sensor
65	Boiler Primary Water Temperature	A	R	0,1°C	0,0	100,0	CH temperature sensor (Delivery)
66	Boiler Return Water Temperature	A	R	0,1°C	0,0	100,0	CH temperature sensor (Return)
67	Boiler Flue Gas Temperature	A	R	0,1°C	0,0	200,0	Smoke temperature sensor
68	Boiler Relative Modulation Level	A	R	0,1%	0,0	100,0	Modulation level: (0%= minimum boiler power 100%= maximum boiler power)
69	Boiler Primary Water Pressure	A	R	0,1 bar	0,0	6,0	Pressure value water CH
70	Boiler Outside Temperature	A	R	0,1°C	-100,0	100,0	Outside temperature read from the boiler through the probe connected to it
Integer variables							
129	Boiler Current Minute	I	R/W	-	0	59	Not used
130	Boiler Current Hour	I	R/W	-	0	23	Not used
131	Boiler Current Day of the Week	I	R/W	-	1 = Lun	7 = Dom	Not used
132	Boiler Current Day of the Month	I	R/W	-	1	31	Not used
133	Boiler Current Month	I	R/W	-	1	12	Not used
134	Boiler Current Year	I	R/W	-	2000	2200	Not used
192	Boiler Alarm Code	I	R	-	0	100	Numeric code shown during boiler error (If Master is in cascade)
193	Boiler Slave 1 Alarm Code	I	R	-	0	100	Numeric code shown during slave 01 error
194	Boiler Slave 2 Alarm Code	I	R	-	0	100	Numeric code shown during slave 02 error
195	Boiler Slave 3 Alarm Code	I	R	-	0	100	Numeric code shown during slave 03 error
196	Boiler Slave 4 Alarm Code	I	R	-	0	100	Numeric code shown during slave 04 error
197	Boiler Slave 5 Alarm Code	I	R	-	0	100	Numeric code shown during slave 05 error
198	Boiler Slave 6 Alarm Code	I	R	-	0	100	Numeric code shown during slave 06 error
199	Boiler Slave 7 Alarm Code	I	R	-	0	100	Numeric code shown during slave 07 error
200	Boiler Combustion Parameter (Par1)	I	R	-	0	199	PAR 1 value
201	Boiler Hydraulic Parameter (Par2)	I	R	-	0	199	PAR 2 value

CASCADE+MODBUS mode (fig. 4/d)

This mode allows for MODBUS communication of at least two boilers in cascade and is performed by requesting another RS-485 board provided in the kit code 8092244.

ATTENTION: Communication will occur only with the MASTER boiler, (boiler with PAR 15 = 0), interpreting the cascade as a single heat capacity generator: P CASCADE = P BOILER x No. BOILERS.


To install the second board, proceed as follows:

- Remove the cover and electrically connect the second RS-485 board equipped with lid to the RS-485 board already installed in the MASTER boiler (boiler with PAR 15 = 0) with the wired connector provided in the kit.
- CAUTION: Insert the wired connector with caution.**
- Set the DIP SWITCH of the new board in MODBUS mode.
- Close the lid of the second board.
- Choose the communication configuration suited to the MODBUS network (PAR 17 INST) according to **Table PAR 17 INST**.

RS-485 connection to the INSOL/MIXED ZONE (fig. 4/e)

The RS-485 board can be connected to optional INSOL kit code 8092254 or MIXED ZONE code 8092252. Both require the board housing kite code 8092236. Carry out the electrical connections as indicated in the figure.

CAUTION: For electrically connecting the INSOL/MIXED ZONE board to the boiler board, refer to the instruction leaflet provided in the kit.

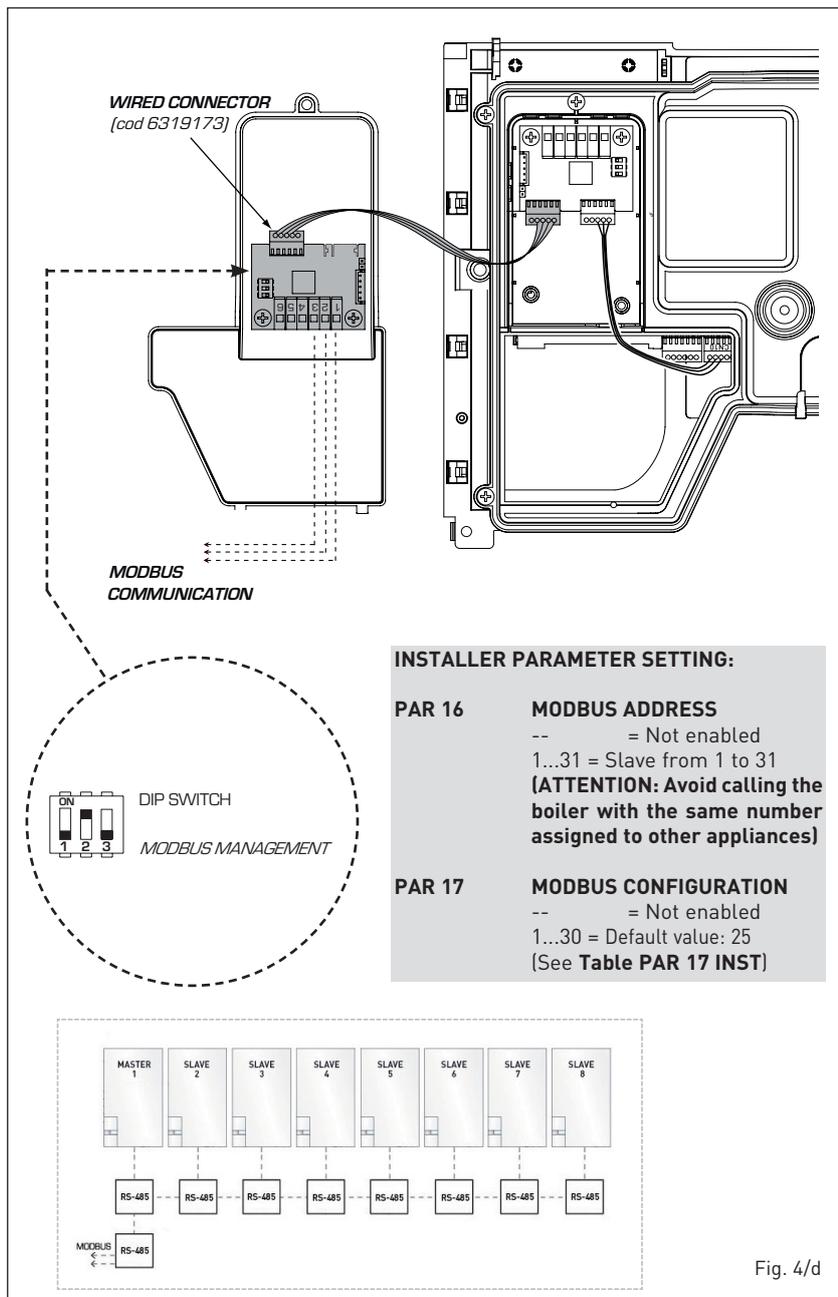

INSTALLER PARAMETER SETTING:

PAR 16	MODBUS ADDRESS
--	= Not enabled
1...31	= Slave from 1 to 31
(ATTENTION: Avoid calling the boiler with the same number assigned to other appliances)	
PAR 17	MODBUS CONFIGURATION
--	= Not enabled
1...30	= Default value: 25
(See Table PAR 17 INST)	

Fig. 4/d

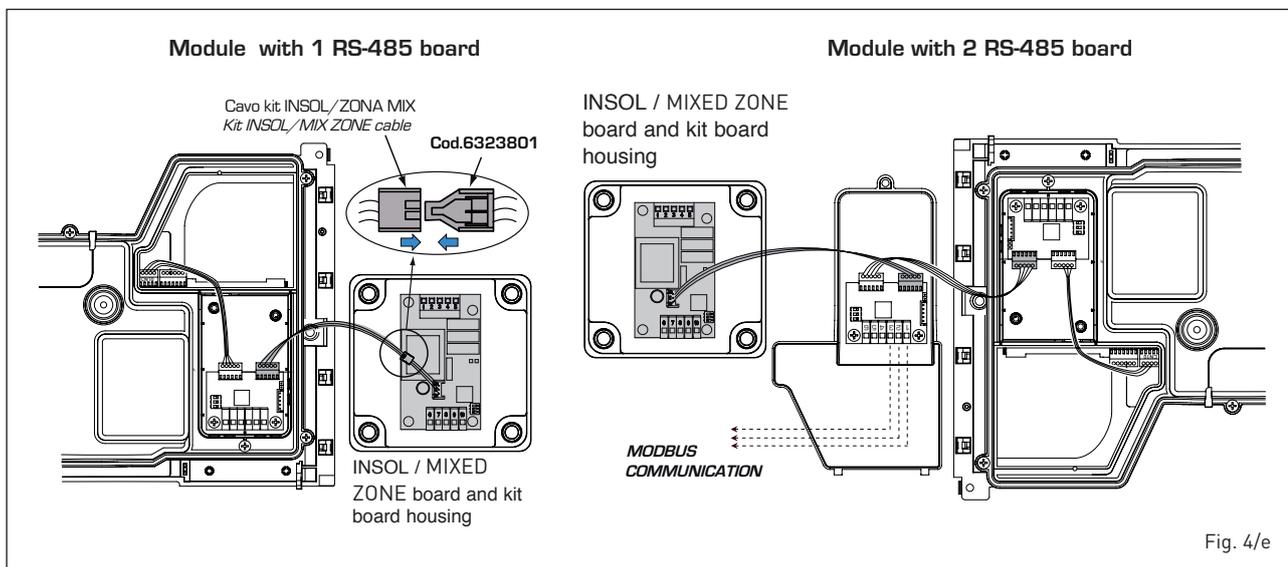


Fig. 4/e

2.3 CONNECTING UP SYSTEM

To protect the heat exchanger becoming damaged by corrosion, incrustation or deposits, after installation it is extremely important to clean the system using suitable products. Sime recommend the use of FERNOX products for the flushing and final treatment of the system water. this is particularly important in hard water areas.

Artificially softened water must not be used to fill the heating system.

It is important to check the concentration of the inhibitor after each system modification and during maintenance, following the product manufacturers instructions (specific test kits are available).

A suitable connection must be made to the safety valve, extending it to a safe termination, incorporating a tun dish if required.

Isolation valves must be incorporated in the heating flow and return, to enable boiler maintenance or repair without the need to drain the entire heating system.

WARNING:

Failure to clean , or adequately treat the heating system could invalidate the boiler warranty.

Gas connections must be made in accordance with current standards and regulations. When dimensioning gas pipes from the meter to the module, both capacity volume (consumption) in m³/h and gas density must be taken into account.

The sections of the piping making up

the system must be such as to guarantee a supply of gas sufficient to cover the maximum demand, limiting pressure loss between the gas meter and any apparatus being used to not greater than:

- 1.0 mbar for family II gases (natural gas);
- 2.0 mbar for family III gases (butane or propane).

An adhesive data plate is positioned inside the front panel; it contains all the technical data identifying the boiler and the type of gas for which the boiler is arranged.

2.3.1 Connection of condensation water trap

To ensure safe disposal of the condensate produced by the flue gases, reference should be made to BS6798:2009. The boiler incorporates a condensate trap which has a seal of 75mm, therefore no additional trap is required. The condensate should ideally be discharged internally into an internal waste pipe (washing machine/ sink waste) or a soil pipe to avoid the risk of freezing. External pipe runs should be avoided, but if it is necessary, the pipework should be at least 32 mm and protected from the risk of freezing with a waterproof insulation and the length kept to a minimum and not exceeding 3 m. termination should be into an external gully or purpose made soakaway. We recommend that the condensate drain at the boiler is in 20 mm

solvent weld pipe with a socket covering the connection to the trap. Alternatively a suitable hose can be secured to the trap and terminated as required (see Appendix 1- Dealing with condensate).

NOTE: All pipework must have a continuous fall from the boiler and must be resistant to corrosion by condensate, copper or steel is NOT suitable. It should be noted that the connection of a condensate pipe to a drain may be subject to local building control requirements.

2.3.2 Filter on the gas pipe

The gas valve is supplied ex factory with an inlet filter, which, however, is not adequate to entrap all the impurities in the gas or in gas main pipes.

To prevent malfunctioning of the valve, or in certain cases even to cut out the safety device with which the valve is equipped, install an adequate filter on the gas pipe.

2.4 INITIAL PHASE SYSTEM FILLING (fig. 5)

Cold system filling pressure must be between **1** and **1.5 bar**. The system must be filled slowly so that air is released through the specific escapes.

2.4.1 System draining (fig. 5)

To drain the system, turn off the boiler ,

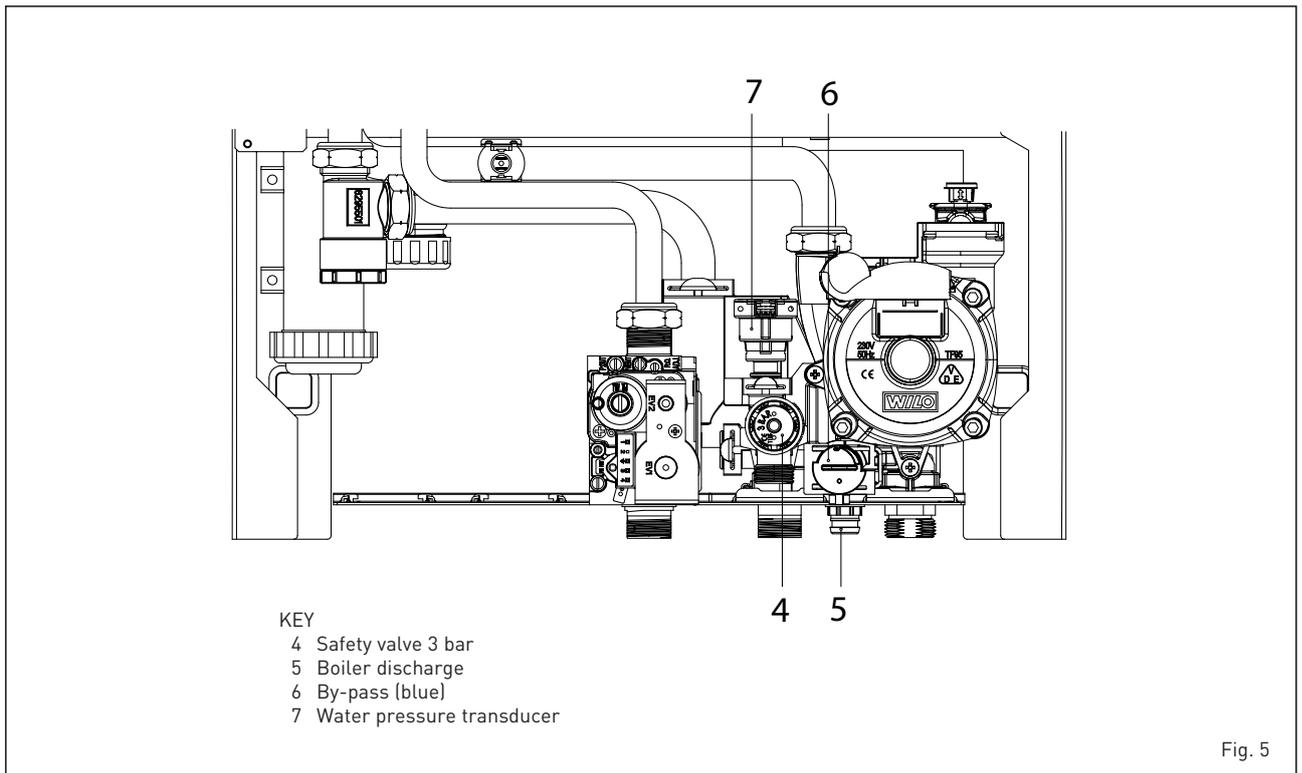


Fig. 5

isolate the flow and return, and use the boiler drain vent (5 fig. 5).

2.4.2 Dealing with condensate

See Appendix 1 "Dealing with condensate"

2.4.3 Requirements for sealed water systems MURELLE HE 35 R (fig. 5/b)

The heating system design should be based on the following information:

- a) The available pump head is given in fig. 14.
- b) A filling device as shown in fig 5/b must be incorporated.

2.5 EXHAUST

The boiler is supplied with a 80 mm gasket, which must be fitted over the exhaust terminal prior to the flue being installed (11 fig. 6 - fig. 7 - fig. 8).

See fig 8a for examples of suitable flue termination positions.

2.5.1 Type B (fig. 6)

To set this exhaust configuration, refer to fig. 6. The boiler is provided also of a rubber gasket $\varnothing 80$ to be used as shown in the figure.

The maximum total length of the exhaust pipe $\varnothing 80$ is determined by the load losses of the individual accessories inserted and must not be more than 15 mm H₂O.

(ATTENTION: the total length of each pipe should not exceed 50 m, even if the total loss is below the maximum applicable loss.)

For the accessories load loss refer to Table 1.

2.5.2 Installation of separate ducts type C ($\varnothing 80$)

This type of exhaust is made with $\varnothing 80$

polypropylene accessories and without the use of gasket or sealant in type C installation.

The maximum overall length, resulting from the sum of all the suction and discharge pipes, is determined by the load losses of the single connected accessories and should not exceed 15 mm H₂O (ATTENTION: the total length of each pipe should not exceed 50 m, even if the total loss is below the maximum applicable loss.)

See Table 2 for information on the load losses of single accessories and the example of fig. 6/a for information on how to calculate load losses.

2.5.3 Separate ducts kit (fig. 6/b)

The diagrams of figure 6/b shows a few examples of the permitted flue configurations.


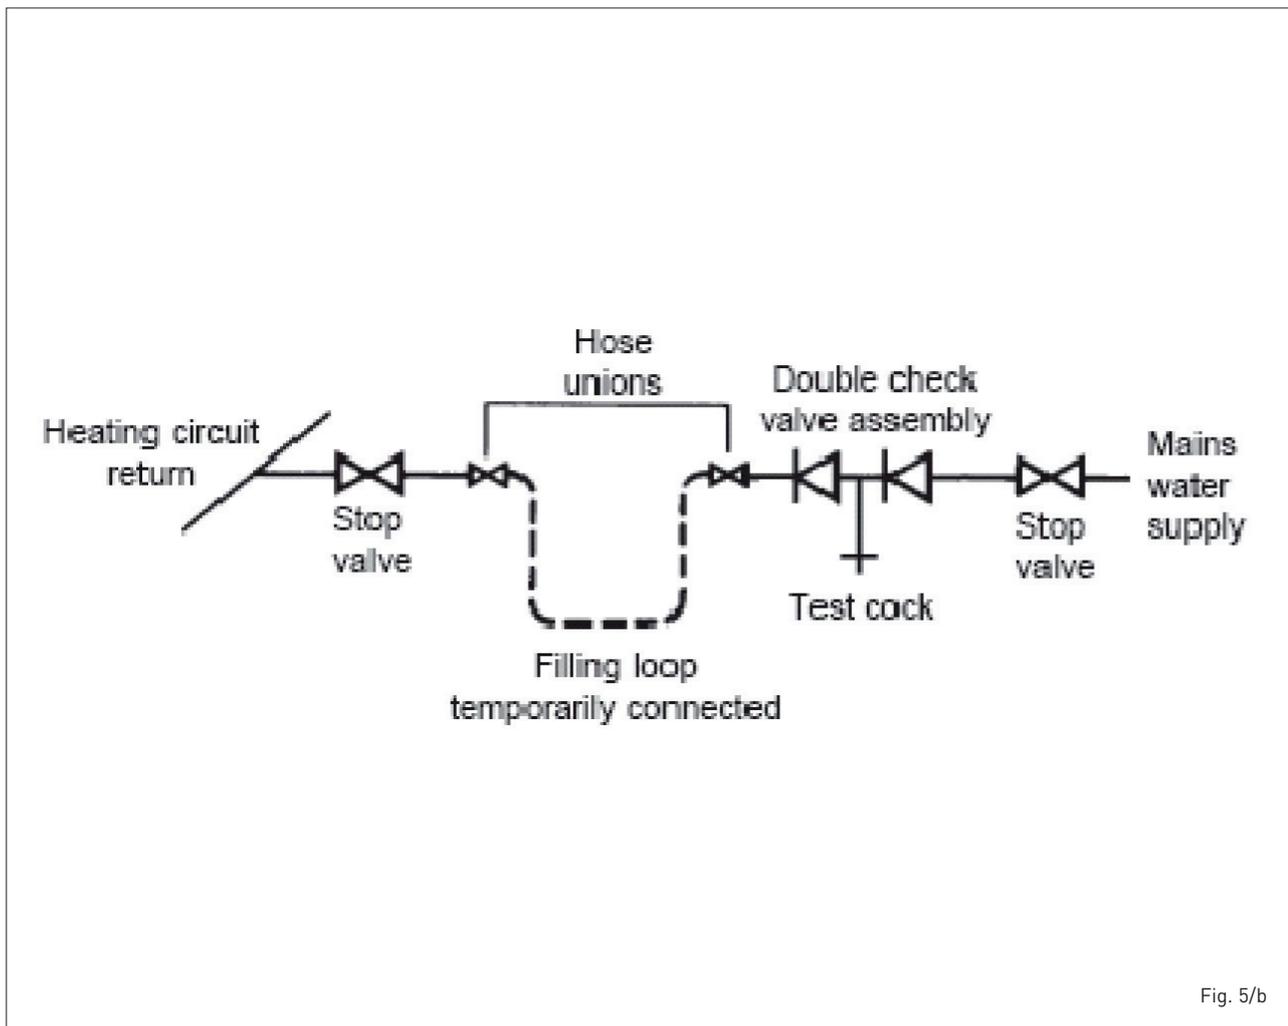


Fig. 5/b

Type B

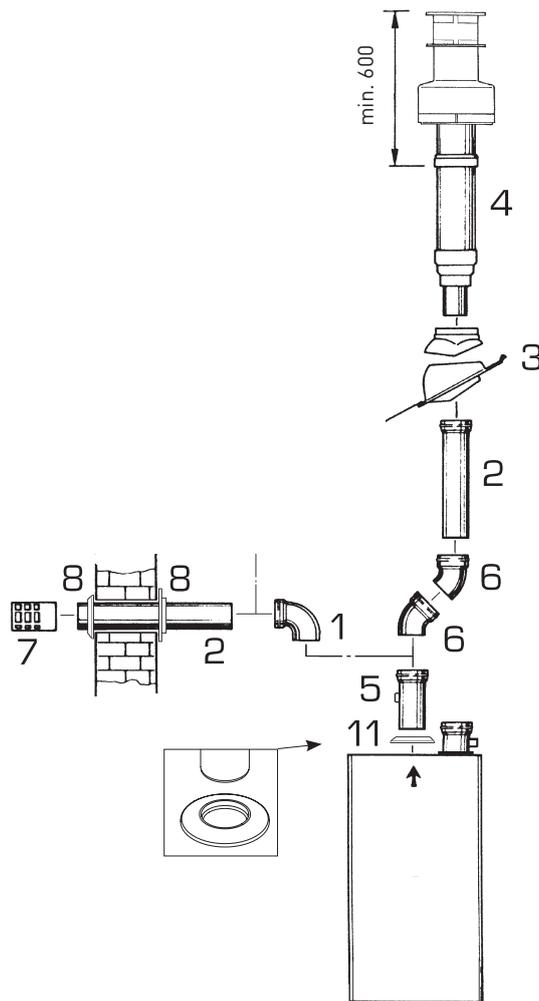

80 mm accessories


Key	Code	Description	Load loss mm H ₂ O
1	8077450A (single) 8077450 (6 pieces)	90° bend	0,4
2a	8077351A (single) 8077351 (6 pieces)	1000mm Extension	0,25
2b	8077350A (single) 8077350 (6 pieces)	500mm Extension	0,25
3	8091300	Articulated Tile	
4	8091212B	Roof terminal [1381mm]	0,2
5	6296513	Extension with test point (250mm)	-
6	8077451A (single) 8077451 (6 pieces)	45° bend	-
7	8089501	Exhaust terminal	0,5
8	8091500	Inner/outer wall seal (2 of each)	-

WARNING:


Before installing accessories, lubricate the internal part of gaskets with silicon-based products. Avoid using oils and greases.

Fig. 6

Type C (separate \varnothing 80 flues)

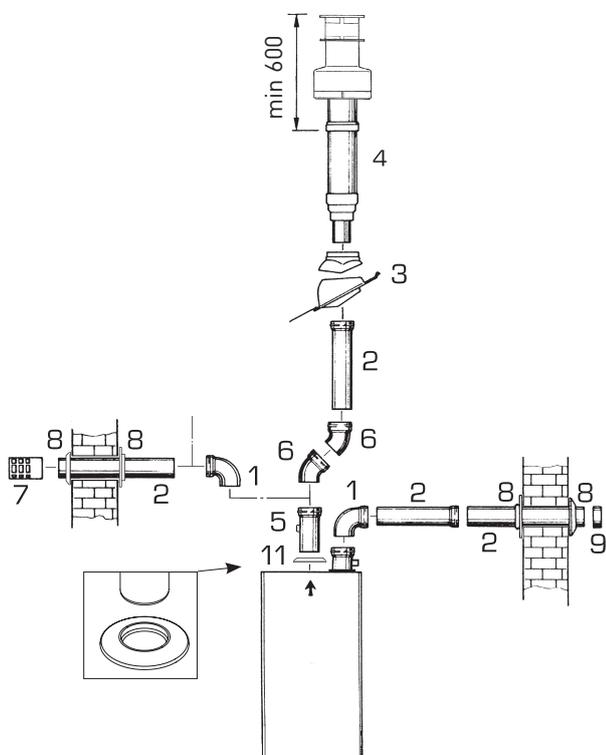

Type C (separate \varnothing 80 flues and coaxial exhaust terminal)

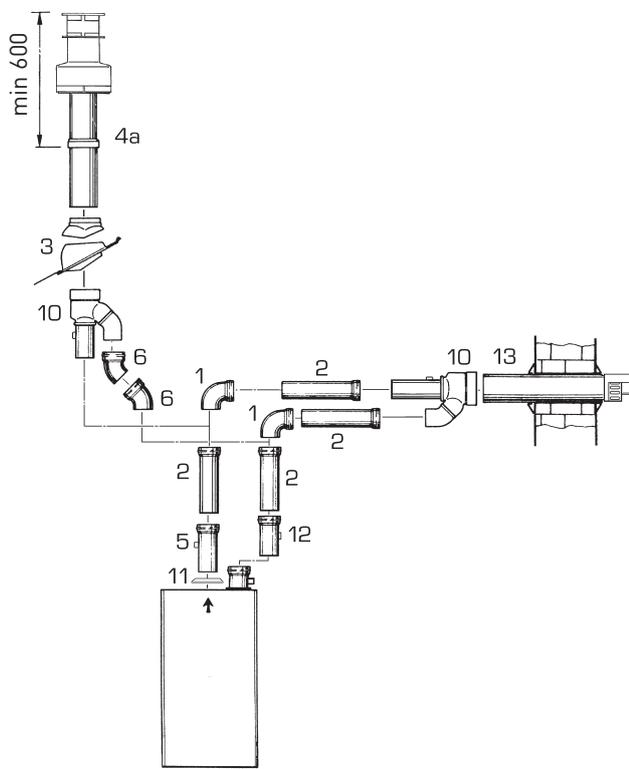

80 mm accessories

Key	Code	Description	Load loss mm	
			Inlet	H ₂ O Exhaust
1	8077450A (single) 8077450 (6 pieces)	90° bend - 80 mm	0,3	0,4
2a	8077351A (single) 8077351 (6 pieces)	1000mm Extension - 80mm	0,25	0,25
2b	8077350A (single) 8077350 (6 pieces)	500mm Extension - 80mm	0,25	0,25
3	8091300	Articulated Tile	-	-
4	8091212	Roof terminal (L 1381mm)*	1,5	0,2
4a	8091212B	Coaxial roof exit terminal*	-	4,0
5	6296513	Extension with test point(L 250mm)	-	0,1
6	8077451A (single) 8077451 (6 pieces)	45° bend - 80mm	0,25	0,25
7	8089501	Exhaust terminal - 80mm	-	0,5
8	8091500	Inner/outer wall seal (2 of each)	-	-
9	8089500	Inlet terminalm - 80mm	0,15	-
10	8091401	Inlet/ exhaust fitting	-	-
11		Gasket (supplied with boiler)	-	-
13	8091210	Coaxial exhaust \varnothing 80/125 L.885*	-	5,0

* This loss includes the losses of item 10

WARNING:

- Installations with roof exit terminal (4a) and coaxial exhaust (13) require the use of a condensation recovery (12) that has to be connected to the water drain siphon (waste water).

- Before installing accessories, lubricate the internal part of gaskets with silicon-based products. Avoid using oils and greases.

Fig. 6/b

2.6 POSITIONING THE OUTLET TERMINALS (fig. 7)

The outlet terminals for forced-draught

appliances may be located in the external perimeter walls of the building. To provide some indications of possible solutions, **Table 3** gives the minimum

distances to be observed, with reference to the type of building shown in fig. 7.

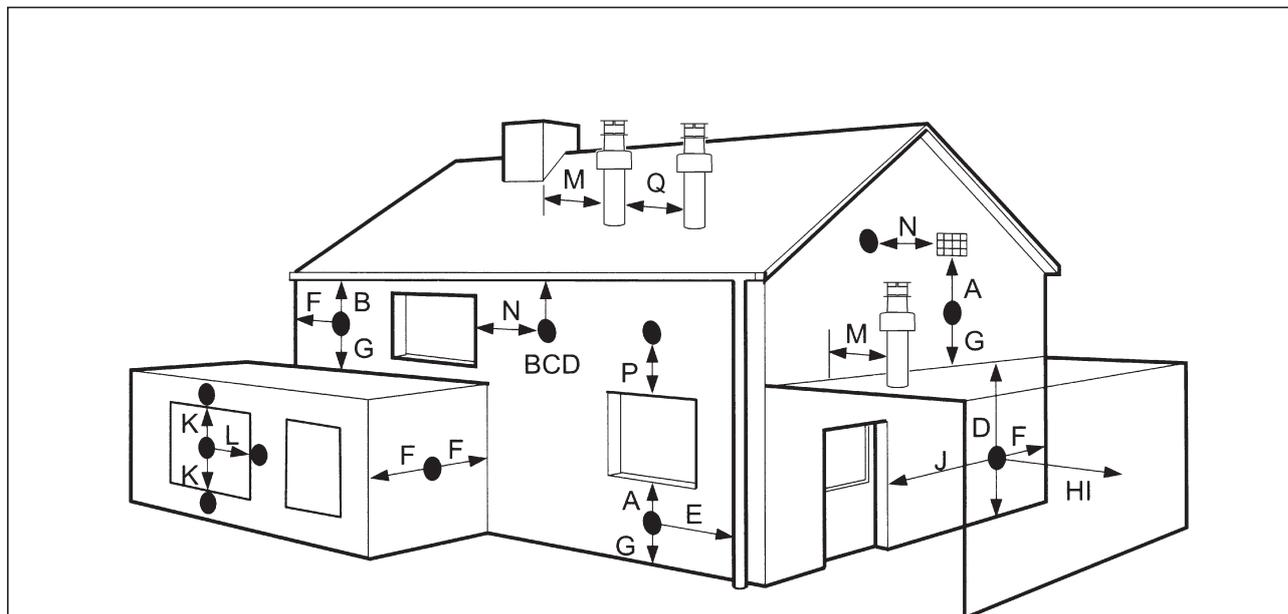


TABLE 2

Terminal position	Minimum spacing
A Directly below an openable window, air vent or any other ventilation opening	300 mm 12 in
B Below guttering, drain pipes or soil pipes	75 mm 3 in
C/D Below eaves, balconies or carport roof (*)	200 mm 8 in
E From vertical drain pipes or soil pipes	75 mm 3 in
F From internal or external corners	300 mm 12 in
G Above adjacent ground, roof or balcony level	300 mm 12 in
H From a boundary or surface facing the boiler	600 mm 24 in
I From a terminal facing the terminal	1,200 mm 48 in
J From an opening in the carport (eg door, window into dwelling)	1,200 mm 48 in
K Vertically from a terminal on the same wall	1,500 mm 60 in
L Horizont. from a terminal on the same wall	300 mm 12 in
M Horizont. from a vertical terminal to a wall	300 mm 12 in
N Horizont. from an openable window or other opening	300 mm 12 in
P Above an openable window or other opening	300 mm 12 in
Q From an adjacent vertical terminal	600 mm 24 in

(*) Note: this can be reduced to 25 mm, but it would be necessary to protect the surfaces from the effects of condensate.

- If the terminal discharges into a pathway or passageway check that combustion products will not cause nuisance and that the terminal will not obstruct the passageway.
- Where the lowest part of the terminal is fitted less than 2 m (78 in) above ground, above a balcony or above a flat roof to which people have access, the terminal MUST be protected by a purpose designed guard.
- Where the terminal is fitted within 850 mm (34 in) of a plastic or painted gutter, or 450 mm (18 in) of painted eaves, an aluminium shield at least 1,500 mm (59 in) long must be fitted to the underside of the painted surface.
- The air inlet/outlet flue duct MUST NOT be closer than 25 mm (1 in) to combustible material.
- In certain weather conditions the terminal may emit a plume of steam. This is normal but positions where this would cause a nuisance should be avoided.

Fig. 7

2.7 ELECTRICAL CONNECTION

The boiler is supplied with an electric cable. Should this require replacement, it must be replaced with a cable of similar type and dimensions.

The electric power supply to the boiler must be 230V - 50Hz single-phase through a fused main switch, with at least 3 mm spacing between contacts.

Respect the L and N polarities and the earth connection.

NOTE: SIME declines all responsibility for injury or damage to persons, animals or property, resulting from the failure to provide for proper earthing of the appliance.

2.7.1 Room thermostat and or/ Timer (clean contact)

The heating can be controlled by a room thermostat and / or timer (TA), connected to CN6 terminals 7-8 (see fig 11) after removal of the existing bridge.

The control to be used must be of a class conforming to the standard EN 607301 (clean electrical contact).

2.7.2 Climatic regulator CR 53 connection (optional)

The boiler is designed for connection to a climatic regulator, supplied on request (code 8092227), for the management of a heating circuit. The electronic card will continue to manage information visualisation, the setting of the sanitary set and the heating of the second circuit, and the boiler parameters by means of the keys on the control panel. For installation and use of the climatic regulator, follow the instructions included in the packaging.


NOTE: Reset parameter 10 to 2 (PAR 10 = 2).

2.7.3 Remote control CR 73 connection (optional)

The boiler is designed for connection to a remote control unit, supplied on request (code 8092226).

The remote control unit CR 73 allows for complete remote control of the boiler, except lockout reset.

The boiler display will show the following message:

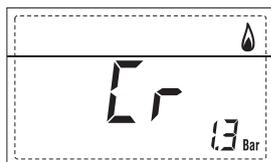

For installation and use of the remote control, follow the instructions in the package.

NOTE: Ensure PAR 10 set to 1 (PAR 10 = 1).

2.7.4 External sensor connection

The boiler is designed for connection to an external temperature sensor, supplied on request (code 8094101), which can automatically regulate the temperature value of the boiler output according to the external temperature.

For installation, follow the instruction in the package. It is possible to make corrections to the values read by the drill acting on the **PAR 11**.

2.7.5 Heat Demand by 230v

The heating demand can be controlled by 230v applied to terminal 14 on CN7, and removal of the bridge on CN6 terminals

7 & 8.

2.7.6 BMS (Building Management Systems)

Single or cascade boilers can be integrated into a building management system. The BMS signal should be connected to the single, or master boiler as shown in fig 11.


Set PAR 14 according to the maximum (10v) flow temperature required.

2.7.7 Use with different electronic systems

Some examples are given below of boiler systems combined with different electronic systems. Where necessary, the parameters to be set in the boiler are given. The electrical connections to the boiler refer to the wording on the diagrams (fig. 11). The zone valve control starts at every demand for heating of the zone 1 (it is from part of the TA1 or the CR).


Description of the letters indicating the components shown on the system diagrams from 1 to 14:

M	Flow
R	Return
CR	Remote control CR 73
SE	External temperature sensor
TA 1-2-3-4	Zone room thermostat
CT 1-2	Zone chronothermostat
VZ 1-2	Zone valve
RL 1-2-3-4	Zone relay
SI	Hydraulic separator
P 1-2-3-4	Zone pump
SB	D.H.W. sensor
PB	D.H.W. pump
IP	Under floor heating
EXP	Expansion card MIXED ZONE (code 8092234)/INSOL (code 8092235)
VM	Three-way mixer valve

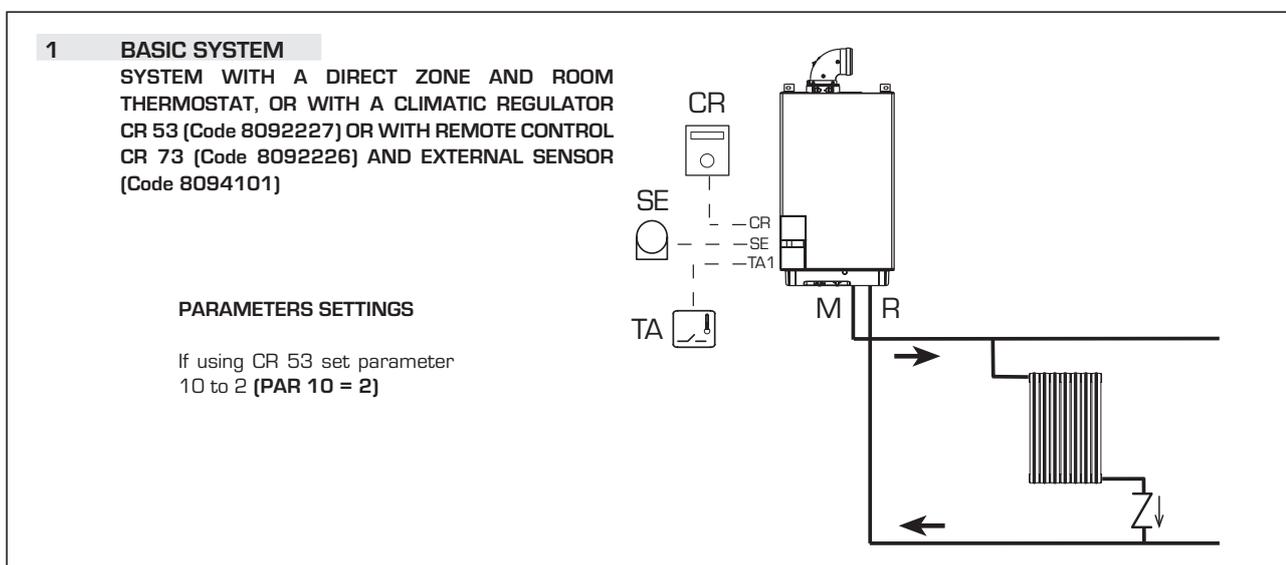


2 BASIC SYSTEM

MULTI-ZONE SYSTEM WITH PUMP, ROOM THERMOSTAT AND EXTERNAL SENSOR (Code 8094101)

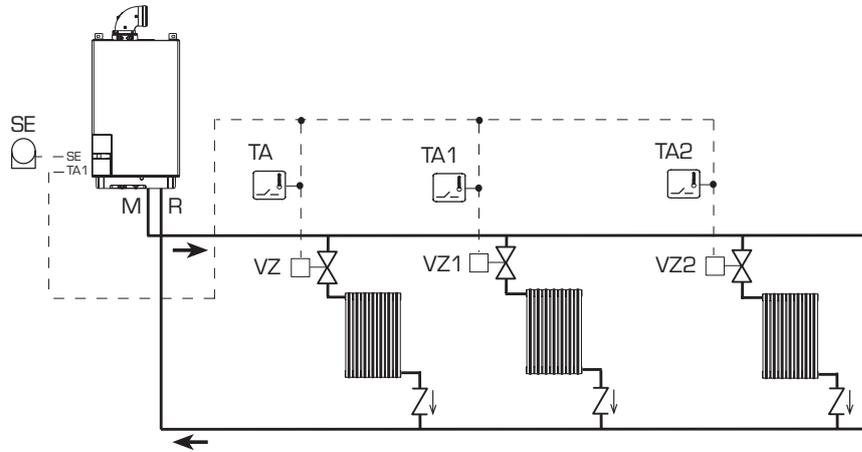


3 BASIC SYSTEM

MULTI-ZONE SYSTEM WITH PUMP, ROOM THERMOSTAT AND EXTERNAL SENSOR (Code 8094101)

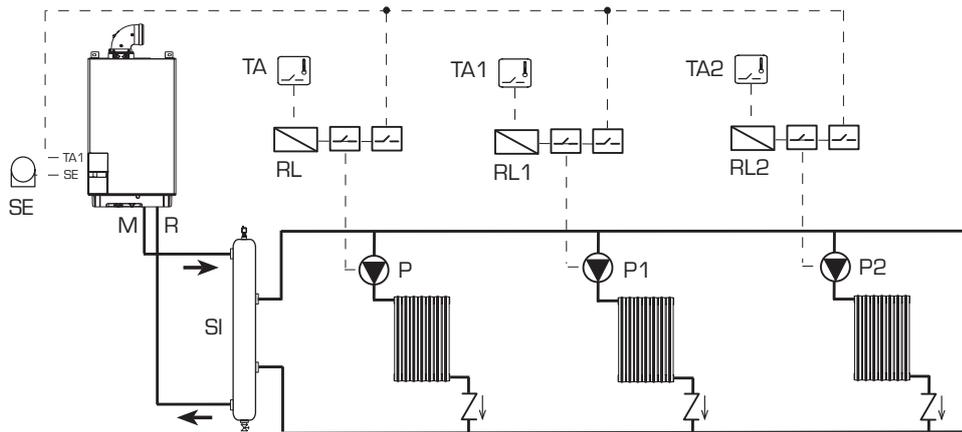

4 BASIC SYSTEM

MULTI-ZONE SYSTEM WITH VALVE, ROOM THERMOSTAT, REMOTE CONTROL CR 73 (Code 8092226) AND EXTERNAL SENSOR (Code 8094101)

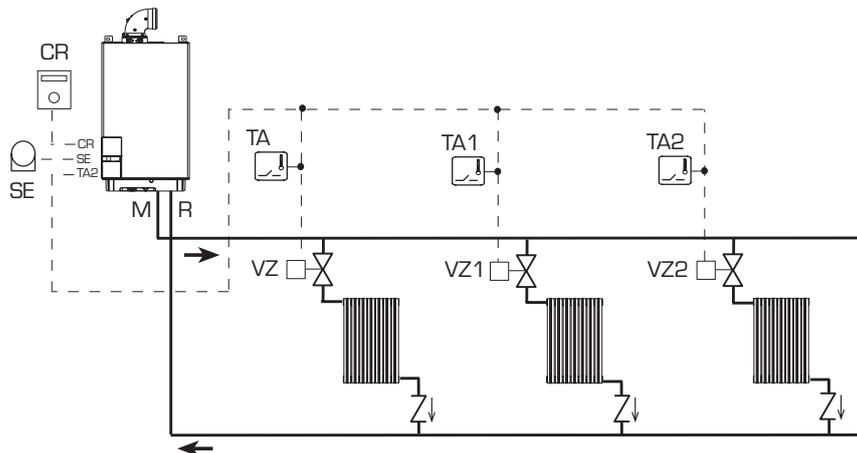


PARAMETERS SETTINGS

To use the remote control (CR) as remote control panel for the boiler rather than as room reference, set:
PAR 7 = 0

5 BASIC SYSTEM

MULTI-ZONE SYSTEM WITH VALVE, ROOM THERMOSTAT, REMOTE CONTROL CR 73 (Code 8092226) AND EXTERNAL SENSOR (Code 8094101)

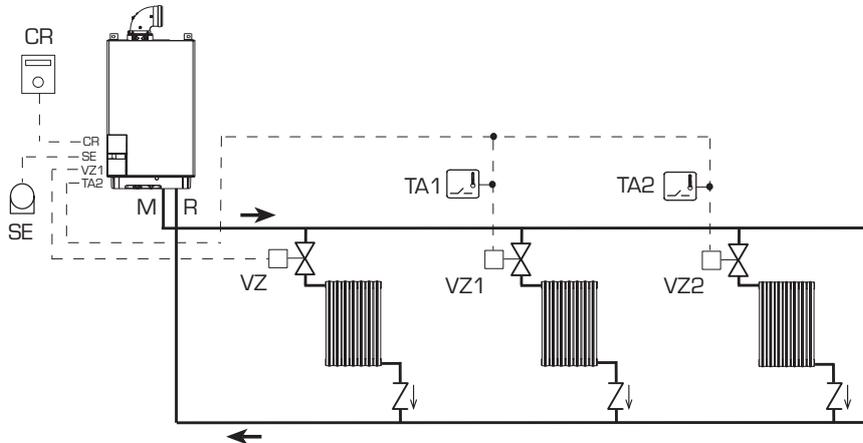

PARAMETER SETTING


To use the remote control (CR) as room reference for a zone, set: **PAR 7 = 1**

Set the opening time of the zone valve VZ:

PAR 33 = "OPENING TIME"

6 BASIC SYSTEM

MULTI-ZONE SYSTEM WITH PUMP, ROOM THERMOSTAT, REMOTE CONTROL CR 73 (Code 8092226) AND EXTERNAL SENSOR (Code 8094101)

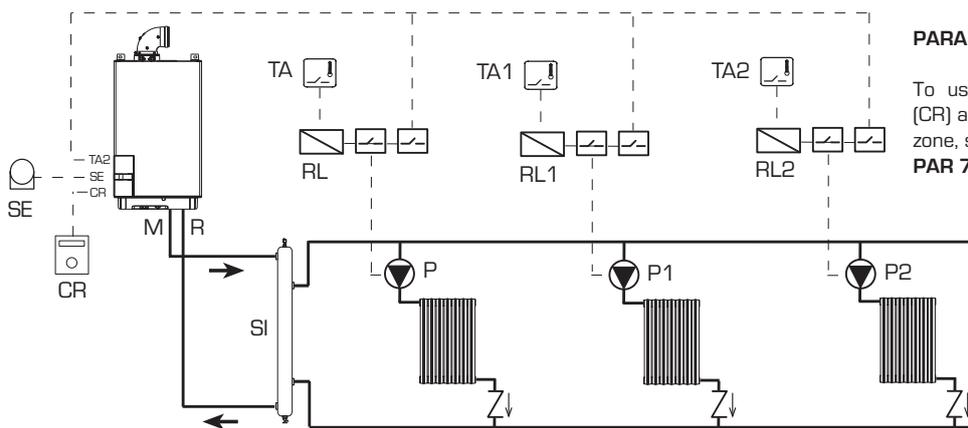


PARAMETER SETTING

To use the remote control (CR) as room reference for a zone, set:

PAR 7 = 1

7 SYSTEM WITH DOUBLE TEMPERATURE OUTPUT

MULTI-ZONE SYSTEM WITH VALVE, CHRONOTHERMOSTAT AND EXTERNAL SENSOR (Code 8094101)

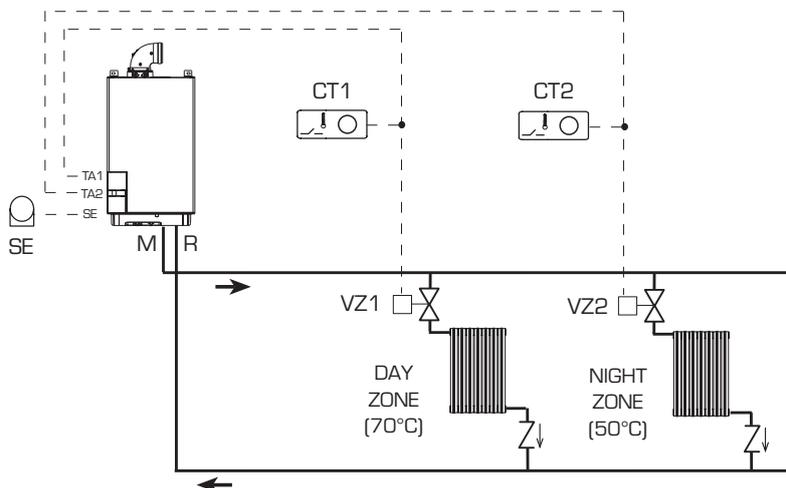


DURING NIGHT TIME THE BOILER USES A LOWER OUTPUT TEMPERATURE IF DIFFERENT TIMES HAVE BEEN SET FOR DAY AND NIGHT AREAS:


- **with external sensor**, set the climatic curve of the day zone 1 with PAR 25 and the night zone at PAR 26.

- **without external sensor**, gain access to setting the day zone 1 by pressing the key and change the value with the keys and . Gain access to setting the night zone by pressing the key twice and changing the value with the keys and .

8 SYSTEM WITH DOUBLE TEMPERATURE OUTPUT
MULTI-ZONE SYSTEM WITH PUMP, CHRONOTHERMOSTAT AND EXTERNAL SENSOR (Code 8094101)

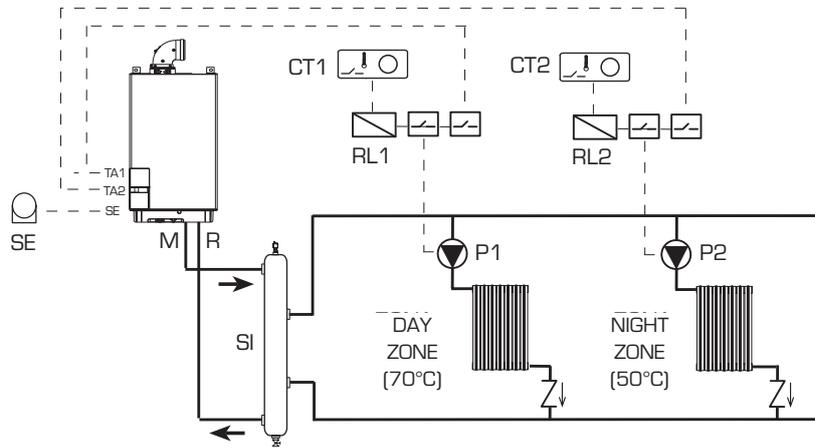


10 SYSTEM WITH REMOTE CYLINDER UNIT AFTER THE HYDRAULIC SEPARATOR

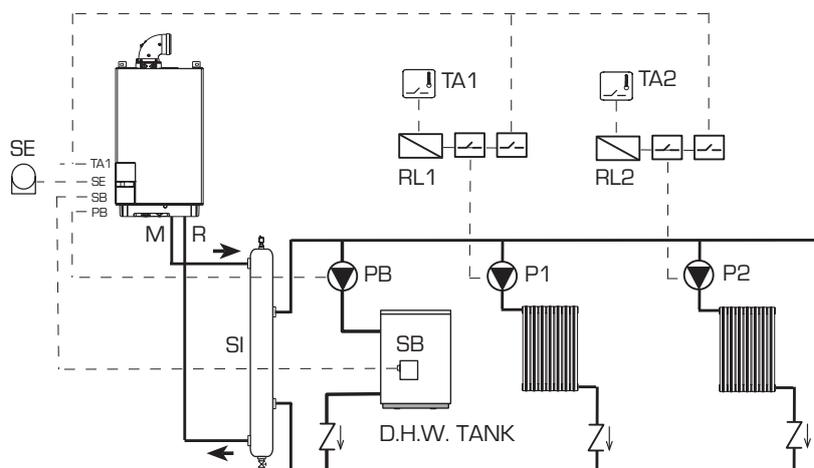

11 SYSTEM WITH MIXER VALVE

SYSTEM WITH ONE DIRECT ZONE, ONE MIXED ZONE, ONE KIT MIXED ZONE (Code 8092234), REMOTE CONTROL CR 73 (Code 8092226) AND EXTERNAL SENSOR (Code 8094101)

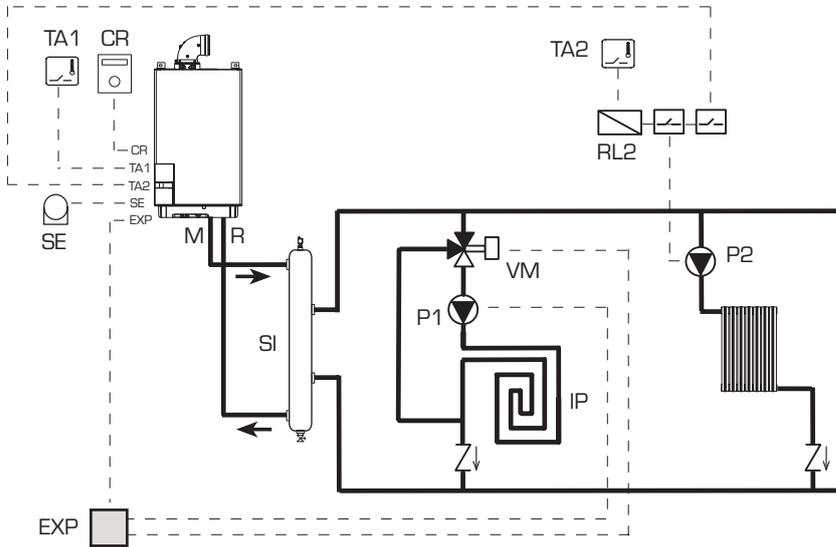


PARAMETERS SETTINGS

To use the remote control (CR) as remote control panel for the boiler rather than as room reference, set:
PAR 7 = 0


12 SYSTEM WITH MIXER VALVE

SYSTEM WITH TWO DIRECT ZONES, TWO MIXED ZONE, ONE KIT MIXED ZONE (Code 8092234) AND EXTERNAL SENSOR (Code 8094101)

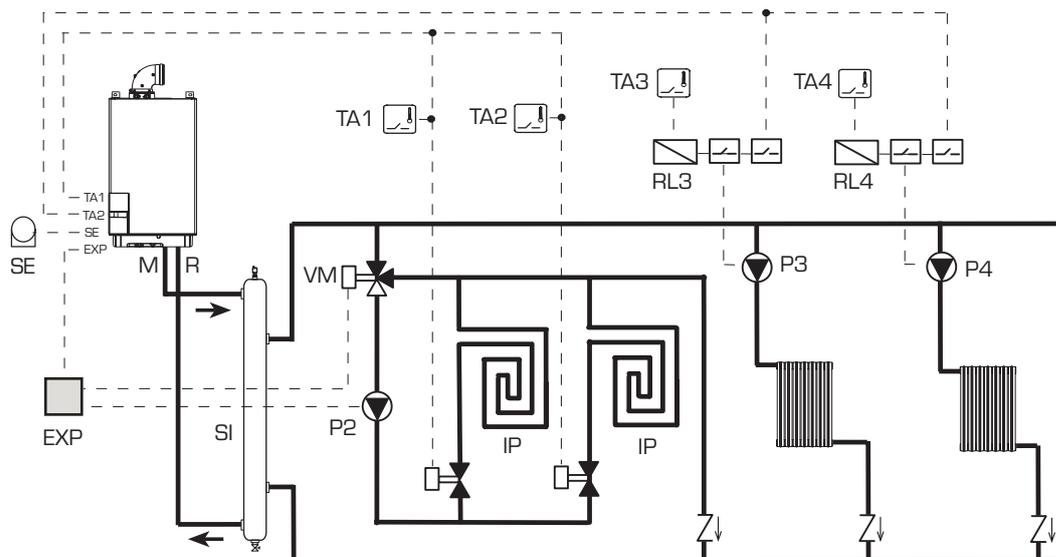


13 SYSTEM WITH MIXER VALVE

SYSTEM WITH TWO MIXED ZONE INDEPENDENT, TWO KITS MIXED ZONE (Code 8092234) AND EXTERNAL SENSOR (Code 8094101)

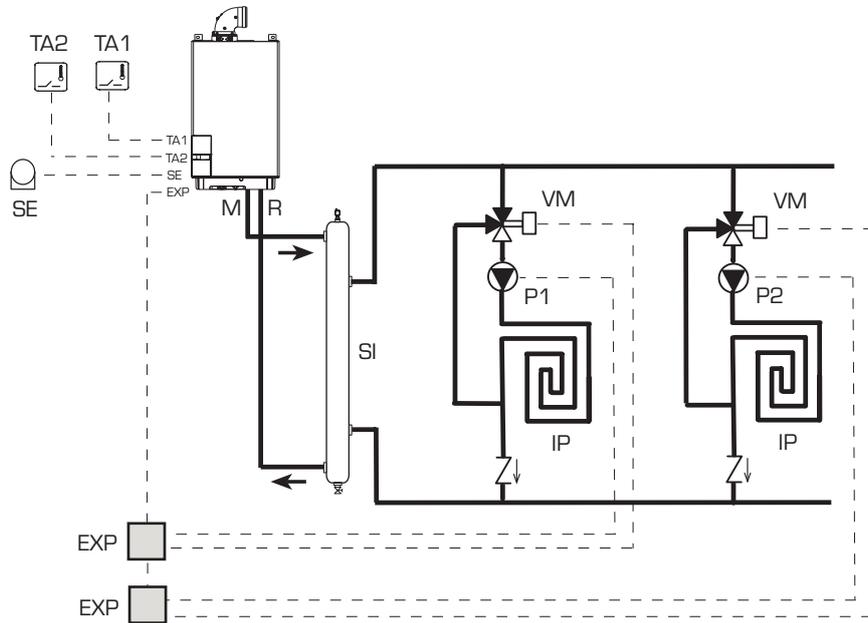


14 SYSTEM SOLAR

SYSTEM WITH TWO MIXED ZONE INDEPENDENT, ONE DIRECT ZONE, TWO KITS MIXED ZONE (Code 8092234), ONE KIT SOLAR INSOL (Code 8092235), REMOTE CONTROL CR 73 (Code. 8092226) AND EXTERNAL SENSOR (Code 8094101)

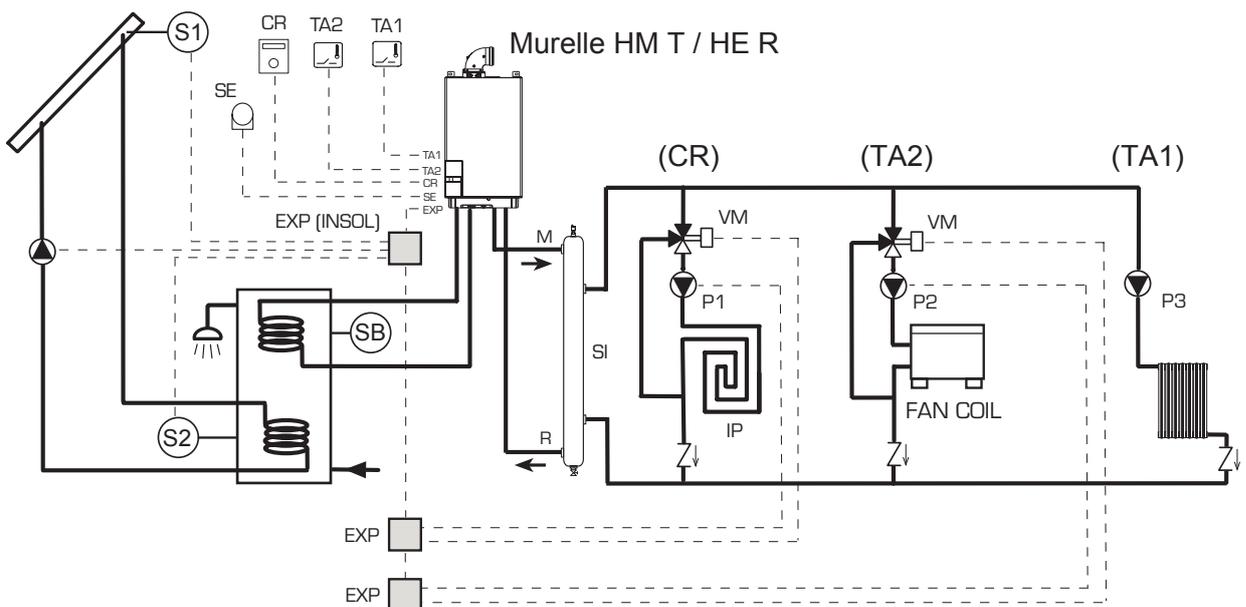

2.8 BOILER ELECTRICAL (fig. 11)

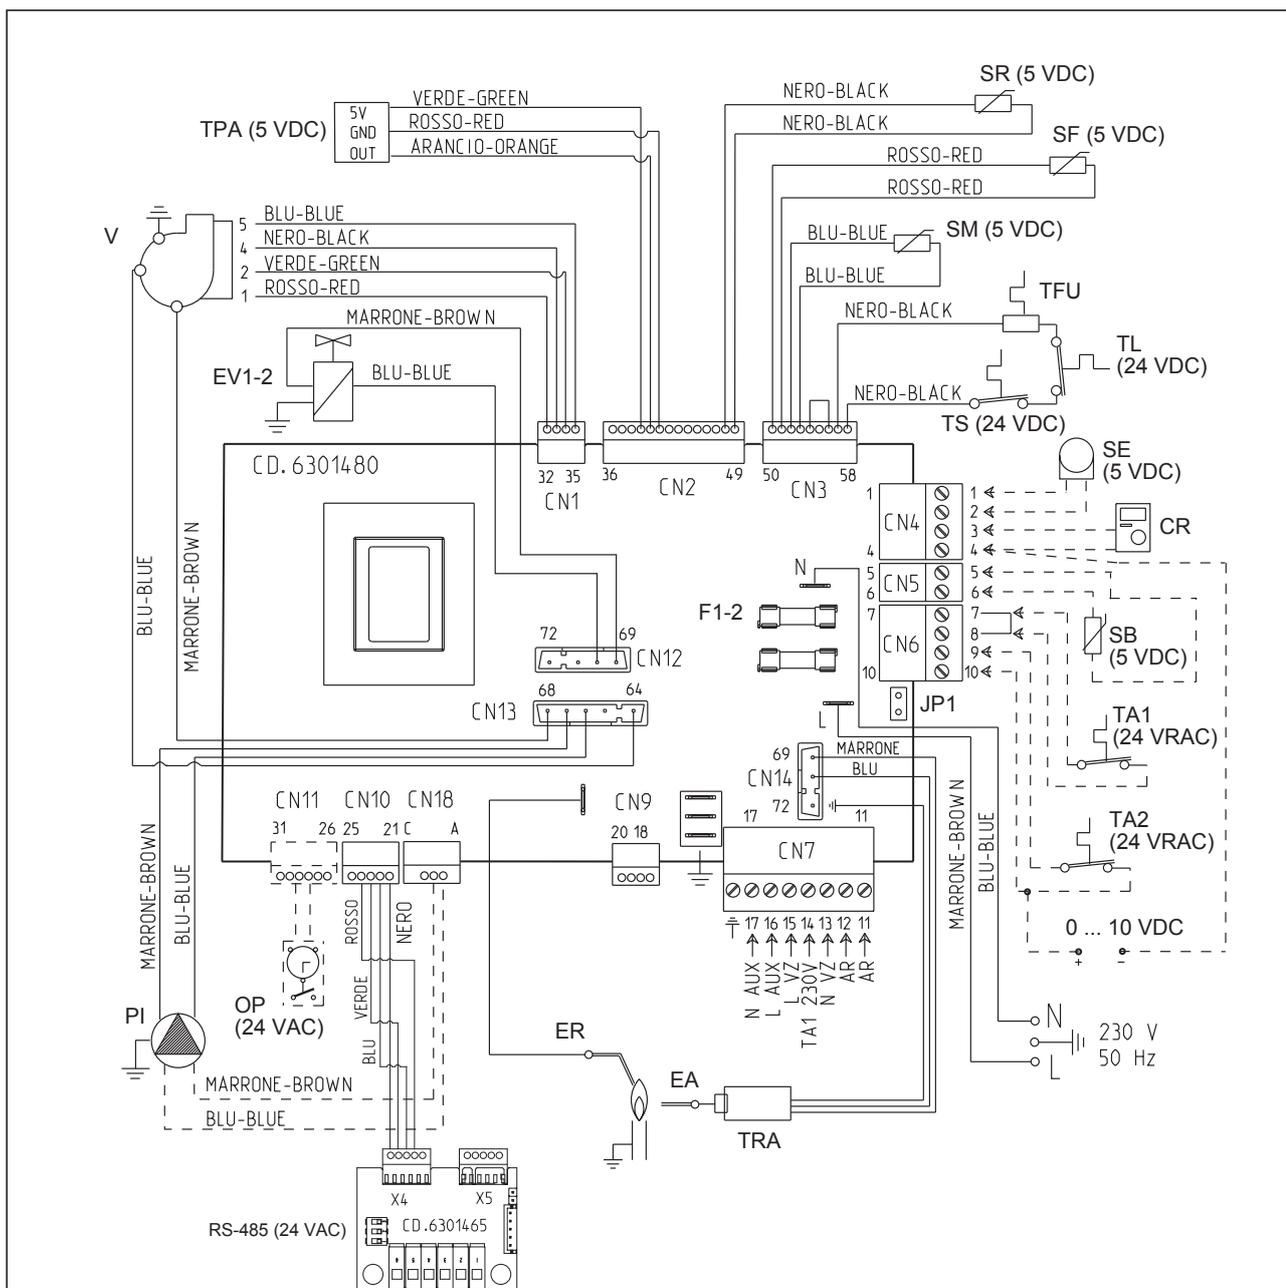

KEY

F1-2	Fuse (4 AT)
TRA	Ignition transformer
PI	Boiler pump
V	Fan
EA	Ignition electrode
ER	Ionisation electrode
EV1-2	Gas valve coil
TS	Safety thermostat
SF	Exhaust temperature sensor
TFU	Thermal fuse
SM	Heating flow sensor
SR	Heating return sensor
TPA	Pressure transducer
JP1	Selection TA2 or 0-10 VDC (See note below)

TA1	Zone 1 environment thermostat
TA2	Zone 2 environment thermostat
SB	D.H.W. sensor L. 2000 (optional)
CR	Remote control CR73 (optional)
SE	External sensor (optional)
OP	Programming clock (optional)
AR	Remote alarm
VZ	Zone valve
AUX	Auxiliary connection
RS-485	CASCADE/MODBUS board
SA	Frost detector (external version only)

NOTE: Connect TA1 to the clamps 7-8 after having removed the bridge.

CONNECTOR SPARE PART CODES:

CN1	code 6319158
CN2	code 6319144
CN3	code 6319156
CN4	code 6316203
CN6	code 6316202
CN7	code 6316204
CN10	code 6319165
CN12	code 6316280
CN13	code 6319157
CN14	code 6316213
CN18	code 6319147 (M)

NOTE - JP1 link

With JP1 link fitted TA2 input is by operation of a clean contact.

For operation by a BMS (0-10v dc) signal, JP1 must be removed, TA1 link fitted and the BMS connected, +ve to terminal 10 - CN6, -ve to terminal 4 - CN4.

PAR 14 will require setting to the maximum flow temperature required."

Fig. 11

3 CHARACTERISTICS

3.1 CONTROL PANEL (fig. 12)

2 - DESCRIPTION OF CONTROLS

- ON/OFF KEYS**
ON = Electricity supply to boiler is on
OFF = Electricity supply to boiler is on but not ready for functioning. However, the protection functions are active.
- SUMMER MODE KEY**
When this key is pressed, the boiler functions only when D.H.W. is requested **(function not available)**
- WINTER MODE KEY**
When this key is pressed, the boiler provides heating and D.H.W.
- D.H.W. TEMP KEY**
When this key is pressed, the temperature of the D.H.W. is shown on the display **(function not available)**
- HEATING TEMP KEY**
The first time the key is pressed, the temperature of heating circuit 1 is shown.
The second time the key is pressed, the temperature of heating circuit 2 is shown.
The third time the key is pressed, the temperature of heating circuit 3 is shown [3-zone system].
- RE-SET KEY**
This allows for restoring functioning after a functioning anomaly.
- INCREASE AND DECREASE KEY**
By pressing this key the set value increases or decreases.

DESCRIPTION OF DISPLAY ICONS

- SUMMER MODE ICON**
- WINTER MODE ICON**
- D.H.W. MODE ICON**
- HEATING DEMAND ICON**
- GRADED POWER SCALE**
The segments of the bar light up in proportion to boiler power output .
- BURNER FUNCTIONING AND LOCKOUT ICON**
- RESET REQUIRED ICON**
- CHIMNEY SWEEP ICON**
- SECONDARY DIGITS**
The boiler visualises the value of the pressure of the system (correct value is between 1 and 1.5 bar)
- MAIN DIGITS**
The boiler visualises the values set, the state of anomaly and the external temperature
- INTEGRATIVE SOURCES ICON**

3 - KEYS RESERVED FOR THE INSTALLER (access to INST and OEM parameters)

- PC CONNECTION**
To be used only with the SIME programming kit and only by authorised personnel. Do not connect other electronic devices (cameras, telephones, mp3 players, etc.) Use a tool to remove the cap and reinsert after use.
ATTENTION: Communication port sensitive to electrostatic charges.
- INFORMATION KEY**
This key can be pressed several times to view the parameters.
- CHIMNEY SWEEP KEY**
This key can be pressed several times to view the parameters.
- DECREASE KEY**
This key changes the default settings.
- INCREASE KEY**
This key changes the default settings.

4 - LUMINOUS BAR

- Blue = Functioning
- Red = Functioning anomaly

5 - PROGRAMMING CLOCK (optional)


- Mechanical clock [code 8092228] or digital clock [code 8092229] to program heating (single zone only).

Fig. 12


3.2 ACCESS TO INSTALLER'S INFORMATION

For access to information for the installer, press the key (3 fig. 14). Each time the key is pressed, the display moves to the next item of information. If expansion boards (MIXED ZONE o INSOL) are connected, the related info will be displayed. If the key is not pressed, the system automatically quits the function. Please note the first press of any key acts to illuminate the display only.


1. Display of external temperature, only when external sensor connected

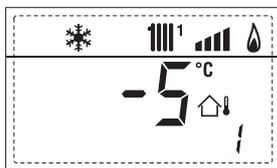


2. Display of heating flow temperature sensor (SM)

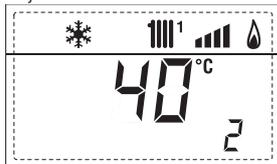


3. Display of D.H.W. temperature sensor (SS) only for instantaneous boilers

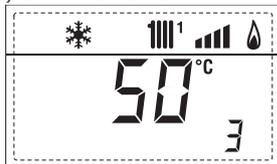


4. Display of auxiliary temperature sensor or D.H.W. sensor (SB)

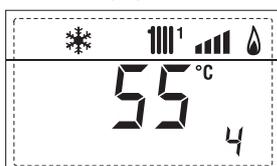


5. Display of exhaust temperature sensor (SF)

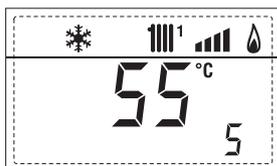

6. Display of heating temperature of first circuit

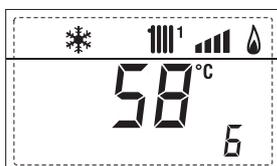

7. Display of heating temperature of second circuit

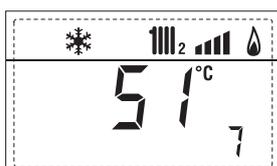


8. Display of ionisation current in μA



9. Display fan speed in rpm x 100 (e.g. 4.800 and 1850 rpm)




10. Display of number of hours of functioning of the burner in h x 100 (e.g. 14000 and 10)

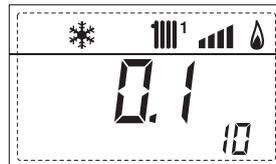

11. Display of number of times the burner has ignited x 1000 (e.g. 97000 and 500)



12. Display of total number of errors

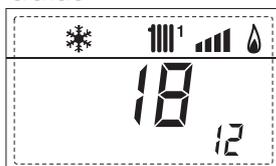

13. Parameter access counter-Installer (i.e. 140 accesses)





14. Parameter access counter-OEM (i.e. 48 accesses)




15. Access counter parameters CASCADE OEM (es. 05 access)




17. Display of D.H.W. flowmeter load (i.e. 18 l/min and 0.3 l/min) or flow switch [respectively ON and OFF]. Combi boiler only.

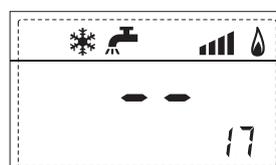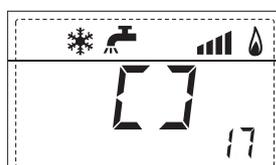

18. Display of heating return temperature sensor (SR)

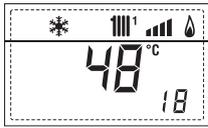


19. Display of the Cascade flow temperature value(when fitted)

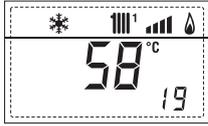


20. Display delivery probe value mixed with board MIXED ZONE 1 (input S2)




21. Display safety thermostat MIXED ZONE (input S1) respectively ON and OFF

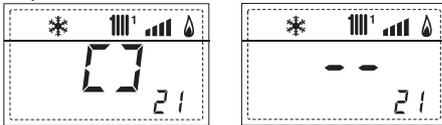


22. Display of pump operation with board MIXED ZONE (respectively ON and OFF)

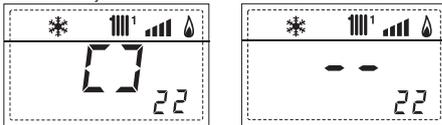

23. Display valve opening control with board MIXED ZONE (respectively ON and OFF)

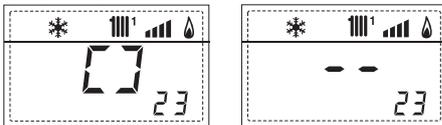


24. Display valve closing control with board MIXED ZONE (respectively ON and OFF)

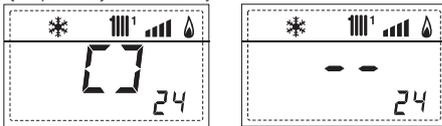


25. Display of the plant delivery probe mixed with board MIXED ZONE 2



26. Display safety thermostat with board MIXED ZONE 2 (input S1) respectively ON and OFF

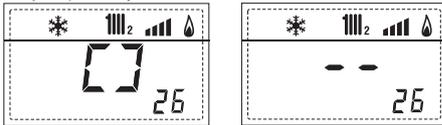


27. Display pump with board MIXED ZONE 2 (respectively ON and OFF)

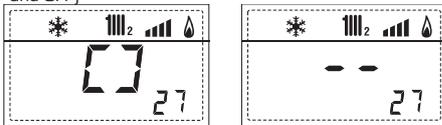


28. Display valve opening control with board MIXED ZONE 2 (respectively ON and OFF)




29. Display of valve operation with board MIXED ZONE 2 (respectively ON and OFF)

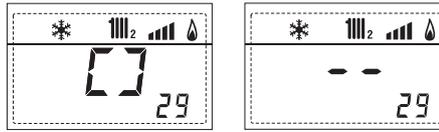


30. Display solar probe temperature value S1 with solar board INSOL

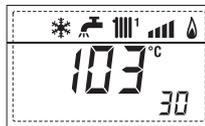


31. Display solar probe temperature value S2 with solar board INSOL

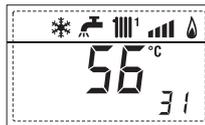


32. Display solar probe temperature value S3 with solar board INSOL

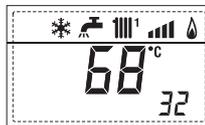


33. Display solar relay R1 with solar board INSOL (respectively ON and OFF)

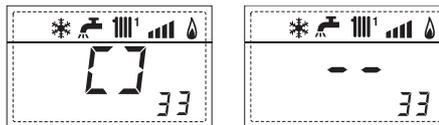


34. Display solar relay R2 with solar board INSOL (respectively ON and OFF)

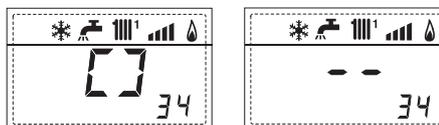

35. Display solar relay R3 with solar card INSOL (respectively ON and OFF)

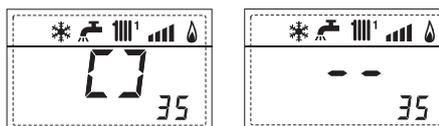

36. Display of solar flow meter state (respectively ON and OFF)

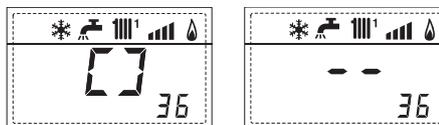

40. Display % value pump control PWM (Modulating pump version only)



60. Code of last recorded error.



90. RS-485 software last version (es. 01 version)



45. Visualization temperature heating refers to the third circuit



61. Code of penultimate error recorded.



91. EXP software version (configuration MIXED ZONE)



70. Warning code (see 3.3.2)




92. 2° EXP software version (configuration MIXED ZONE)



3.3 ACCESS TO INSTALLER'S PARAMETERS

For access to the installer's parameters, press simultaneously the keys and or 2 seconds (3 fig. 12).

For example, the parameter PAR 23 is visualised on the display of the control panel in the following way:

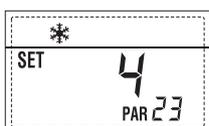

The parameters scroll forwards and backwards with the key and and the default parameters can be changed with the keys and .

The standard display returns automatically after 60 seconds, or by pressing one of the control keys (2 fig. 12) excluding the key RESET.

3.3.1 Replacing the board or RESETTING parameters

If the electronic board is replaced or reset, it is necessary to configure PAR 1 and PAR 2 by associating the following values to each type of boiler to be able to restart the boiler:

GAS	MODEL	PAR 1
METHANE (G 20)	Single (35 R)	3
	Sequence/cascade	4
PROPANE (G 31)	Single (35 R)	11
	Sequence/cascade	12

PARAMETERS INSTALLER					
FAST CONFIGURATION					
PAR	DESCRIPTION	RANGE	UNIT OF MEASUREMENT	INC./DEC UNIT	DEFAULT SETTING
1	Combustion configuration	- = ND 1...31	=	=	"-."
2	Hydraulic configuration	- = ND 1...14	=	=	"-."
3	Timetable 2 programmer	1 = DHW + Recirc. pump 2 = DHW 3 = Recirculation pump	=	=	1
4	Pressure transducer disabler	0 = Disabled 1 = Enabled 0-4 BAR 2 = Enabled 0-6 BAR 3 = Enabled 0-4 BAR (NO ALL 09) 4 = Enabled 0-6 BAR (NO ALL 09)	=	=	1
5	Assignment of auxiliary relay AUX	1 = Remote alarm NO 2 = Recirculation pump 3 = Automatic load. 4 = Remote alarm NC 5 = Heat pump 6 = Zone 2 valve	=	=	1
6	Luminous bar indicating presence of voltage	0 = Disabled 1 = Enabled	=	=	1
7	Allocation of CR73 channels	0 = Not assigned 1 = Circuit 1 2 = Three-zone circuit	=	=	1
8	Fan rpm Step ignition	0,0 ... 81	rpmx100	0,1 from 0,1 to 19,9 1 from 20 to 81	0,0
9	Long chimneys	0 ... 20	%	1	0
10	Remote control option setting	1 = CR 73 2 = CR 53 3 = RVS 43.143 4 = RVS 46.530 5 = RVS 61.843	=	=	1
11	Correction values external sensor	-5 ... +5	°C	1	0
12	Backlighting duration	- = Always 0 = Never 1 ... 199	sec. x 10	1	3
13	Modulating pump speed	- = None AU = Automatic mod. 30..100 = % Settable modulation	%	10	-
14	Setting second input TA	- = Contact TA 5...160 = Input 0...10VDC	-	-	-
15	Cascade address	- = Not enabled 0 = Master 1...7 = Slaves	-	1	-
16	ModBus address	- = Not enabled 1...31 = Slaves	-	1	-
17	ModBus communication configuration	1 ... 30	-	1	25
19	Type circuit	0 = Two zones 1 = Three zones	-	-	0
D.H.W. - HEATING					
PAR	DESCRIPTION	RANGE	UNIT OF MEASUREMENT	INC./DEC UNIT	DEFAULT SETTING
20	Minimum heating temperature Zone 1	PAR 64 OEM ... PAR 21	°C	1	20
21	Maximum heating temperature Zone 1	PAR 20 ... PAR 65 OEM	°C	1	80
22	Heating curve slope Zone 1	3 ... 40	-	1	20
23	Minimum heating temperature Zone 2	PAR 64 OEM ... PAR 24	°C	1	20
24	Maximum heating temperature Zone 2	PAR 23 ... PAR 65 OEM	°C	1	80
25	Heating curve slope Zone 2	3 ... 40	-	1	20
26	Minimum heating temperature Zone 3	PAR 64 OEM ... PAR 27	°C	1	20
27	Maximum heating temperature Zone 3	PAR 26 ... PAR 65 OEM	°C	1	80
28	Heating curve slope Zone 3	3...40	-	1	20
29	At heating circuit	10 ... 40	°C	1	20
30	Post-circulation heating time	0 ... 199	Sec.	10	30
31	Maximum heating capacity	30 ... 100	%	1	100
32	Zone 1 pump activation delay	0 ... 199	10 sec.	1	1
33	Start-up delay	0 ... 10	Min.	1	3
34	Additional source activation threshold	-...10...40	°C	1	"-."
35	Boiler antifreeze	0 ... +20	°C	1	3
36	External sensor antifreeze	-5 ... +5	°C	1	-2
37	Band saturation flowmeter modulation	- = Disabled 0 ... 100	%	1	100
38	D.H.W. post-circulation time	0 ... 199	Sec.	1	0
39	Anti-legionella (only D.H.W tank)	0 = Disabled 1 = Enabled	-	-	0

BOILER	PAR 2
Instantaneous with diverter valve and flowmeter	1
Instantaneous with diverter valve, flowmeter and solar system	2
Remote control cylinder with diverter valve and cylinder sensor T version (LOW INERTIA)	3
On board DHW cylinder, diverter valve and DHW sensor (LOW INERTIA)	4
Remote DHW cylinder with diverter valve and tank thermostat. or heating only T/R version (LOW INERTIA)	5
Remote DHW cylinder with double pump and cylinder sensor T/R version (LOW INERTIA)	6
Remote DHW cylinder with double pump and tank thermostat T/R version (LOW INERTIA)	8
Only heating with antifreeze sensor (LOW INERTIA)	9

NOTE: the inside of the upper door of the boiler panel has a label with the values that have to be set for PAR 1 and PAR 2 (fig. 19).

3.3.2 Warning

If the boiler is operating, but not optimally and not showing any errors, press  until info 70 and the warning code associated to the ongoing event are displayed. Once optimal operation is restored, info 70 will display: "- -". Below is the table of warning codes:

CODE	DESCRIPTION
E0	Reduced capacity operation (At between delivery and return over 40°C)
E1	Shorted external sensor (SE)
E2	Preheating function active
E3	TBD
E4	TBD
E5	TBD
E6	TBD
E7	TBD
E8	TBD
E9	TBD

PARAMETERS INSTALLER				
EXPANSION CARD				
PAR DESCRIPTION	RANGE	UNIT OF MEASUREMENT	INC/DEC UNIT	DEFAULT SETTING
40 Number of expansion boards	0 ... 3	=	1	0
41 Mix valve stroke time	0 ... 199	10 sec.	1	12
42 Priority of D.H.W. over mixed zone	0 = Paralle 1 = Absolute	=	=	1
43 Floor screed drying(see 4.5.2)	0 = No activated 1 = Curve A 2 = Curve B 3 = Curve A+B	=	=	0
44 Type of solar system	1 ... 8	=	1	1
45 Δt solar collector pump 1	PAR 74 OEM - 1... 50	°C	1	8
46 Solar integration delay	"-", 0 ... 199	Min.	1	0
47 Tmin solar collector	"-", -30 ... 0	°C	1	- 10
48 Tmax solar collector	"-", 80 ... 199	°C	1	120
PARAMETERS RESTORATION				
PAR DESCRIPTION	RANGE	UNIT OF MEASUREMENT	INC/DEC UNIT	DEFAULT SETTING
49 * Reset default parameters (par 01 - par 02 = "-")	- , 1	=	=	=
* IShould the boiler not be functioning correctly, the original default values can be reset by setting PAR 49 = 1 and the PAR 1 then correctly setting PAR 2 as specified at point 3.3.1.				

CASCADE CONNECTION PARAMETERS

When the appliance is installed in sequence/cascade (modular system with several generators) it is necessary to set on all the boilers the following INST PAR parameters:

**PAR 15 = 0 for the first boiler (MASTER)
1 7 for the other boilers (SLAVE)
(Avoid assigning the same number to SLAVE boilers)**

Set the following INST parameter if polypropylene smoke collectors with a clapet valve are used in sequence/cascade installations:

**PAR 1 = 8 (for NATURAL GAS boilers)
16 (for PROPANE boilers)**

In addition, when the number of boilers in cascade is more than two, configure the parameters OEM A1 of the MASTER boiler.

See 2.2.2 Item CASCADE WITH MORE THAN TWO BOILERS.

**Set the parameter:
PAR A1 = Number of cascade generators (3 ... 8)**

3.4 EXTERNAL SENSOR (fig. 13)

If there is an external sensor, the heating settings SET can be taken from the climatic curves according to the external temperature and, in any case, limited to with the range values described in point 3.3 (parameters PAR 22 for zone 1, PAR 25 for zone 2 and PAR 28 for zone 3). The climatic curve to be set can be selected from a value of 3 and 40 (at step 1). Increasing the steepness of the curves of fig. 13 will increase the output temperature as the external temperature decreases.

3.5 CARD FUNCTIONING

The electronic card has the following functions:

- Antifreeze protection of the heating and sanitary water circuits (ICE).
- Ignition and flame detection system.
- Control panel setting for the power and the gas for boiler functioning.
- Anti-jamming for the pump which is fed for a few seconds after 24 hours of inactivity.
- Antifreeze protection for boilers with cylinders
- Chimney sweep function which can be activated from the control panel.
- Temperature which can be shifted with the external sensor connected. It can be set from the control panel and is active on the heating systems of both circuit 1, circuit 2 and circuit 3.
- Management of 3 independent heating circuit systems.
- Automatic regulation of the ignition power and maximum heating. Adjustments are managed automatically by the electronic card to guarantee maximum flexibility in use of the system.
- Interface with the following electronic systems: climatic regulator CR 53, remote control CR 73, thermal regulator RVS, connected to a management card of a mixed zone MIXED ZONE code 8092234, card solar INSOL code 8092235 and to board RS-485 for managing up to 8 boilers in cascade or implement a communication type Modbus (slave RTU-RS485, Reference Guide PI-MBUS-300 Rev. J) cod. 8092243.

NOTE: If using CR 53 set parameter 10 to 2 (PAR 10 = 2).

3.6 TEMPERATURE DETECTION SENSOR

Table 4 shows the resistance values of the heating, DHW and exhaust fumes thermistors.

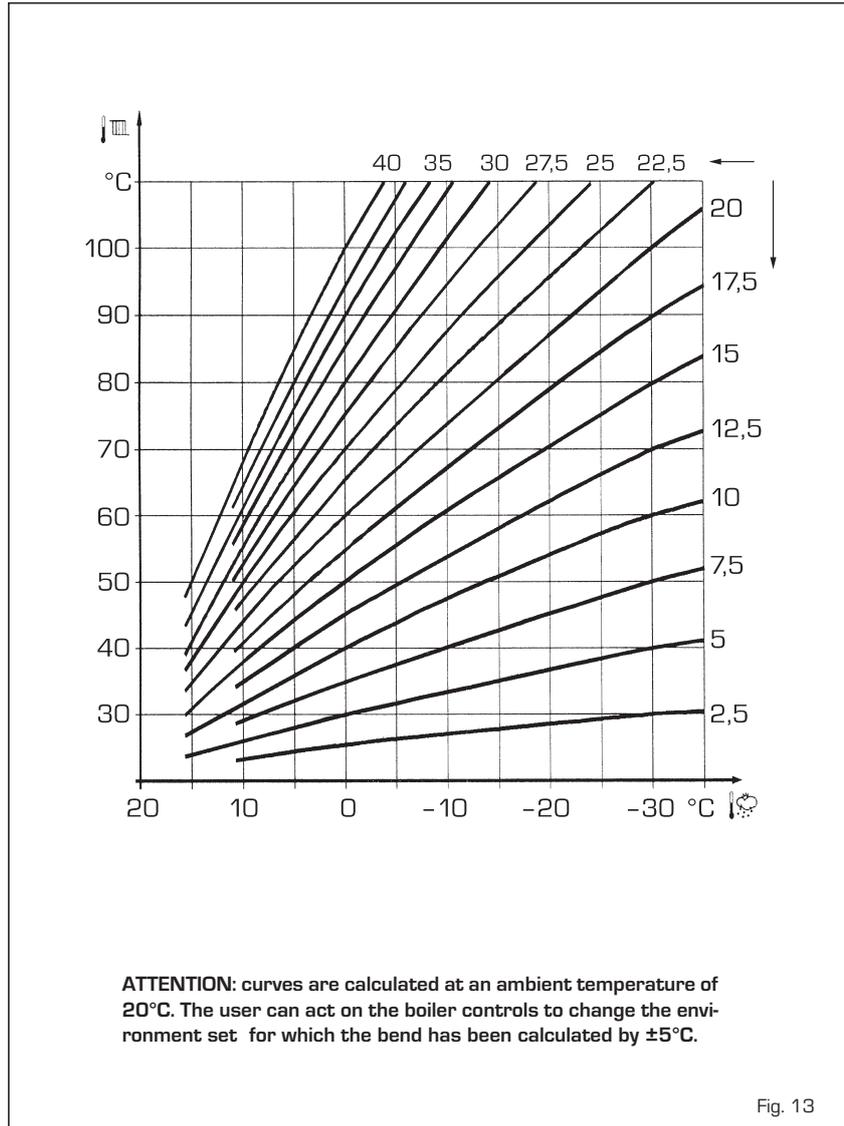


Fig. 13

If the heating flow sensor (SM), heating return sensor (SR) or the exhaust fumes sensor (SF) is faulty or open circuit, the boiler will not function on either heating or DHW.

TABLE 4 (SM - SR - SF sensors)

Temperature (°C)	Resistance (Ω)
20	12.090
30	8.313
40	5.828
50	4.161
60	3.021
70	2.229
80	1.669

3.7 ELECTRONIC IGNITION

Ignition and flame detection is controlled by a electrodes on the burner which guarantees reaction in the case of accidental extinction or lack of gas

within one second.

3.7.1 Functioning cycle

Burner ignition occurs within max. 10 seconds after the opening of the gas valve. if after three attempts to light, the ignition is not detected, the boiler will lockout (ALL06). this can be due to:

- Lack of gas

The ignition electrode will discharge for max. 10 seconds. If the burner does not ignite, the error ALL06 is signalled.

This can happen the first time the boiler is switched on after a long period of inactivity due to the presence of air in the gas pipes. It can be caused by a closed gas tap or by a broken valve coil (the interruption does not allow for opening).

- No ionisation

The boiler will make three attempts

to light, if after the third attempt the flame has not been recognised, the boiler will lockout (ALL06). This may be due to a worn or distorted ionisation electrode.

In the case of a sudden lack of voltage, the burner will immediately switch off. When voltage returns, the boiler will

automatically start up again.

3.8 HEAD AVAILABLE TO SYSTEM (fig. 14 - fig. 14/a)

Residual head for the heating system is shown as a function of rate of flow in

the graph in fig. 14. The speed of the modulating pump system WIL0-YON0S PARA PWM is set as default (installation parameter **PAR 13 = - -**).

To obtain the maximum head available to the system, turn off the by-pass by turning the union to the vertical position (fig. 14/a).

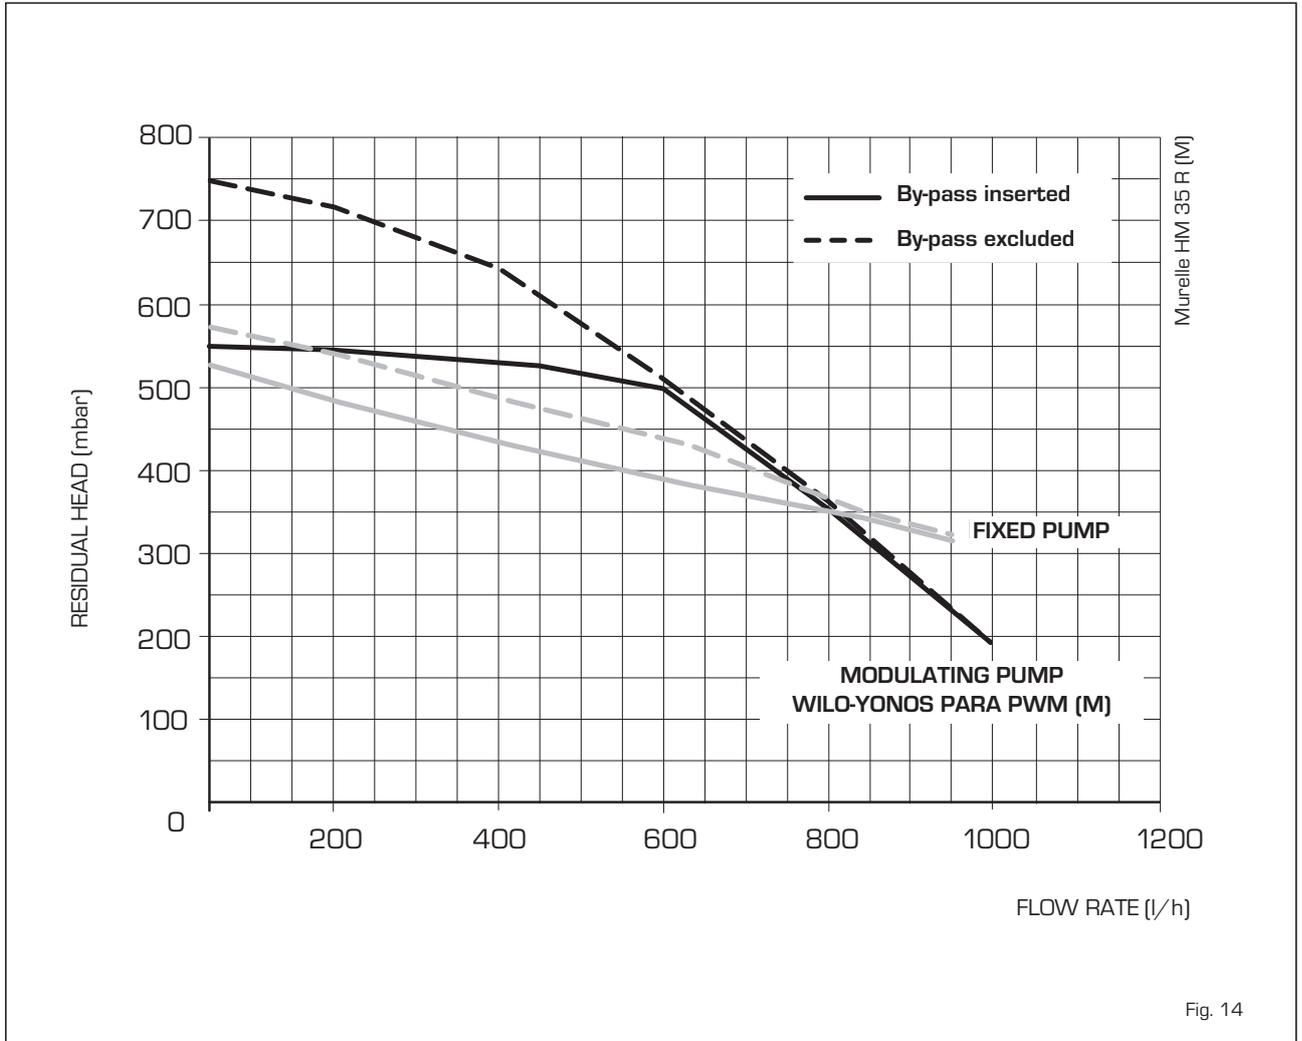


Fig. 14

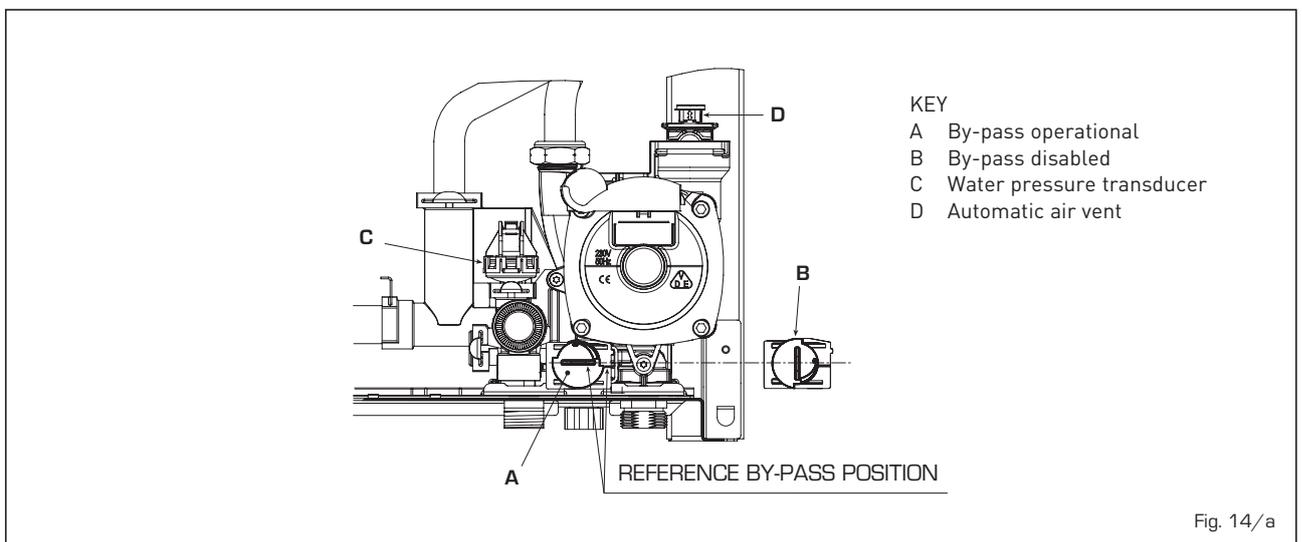


Fig. 14/a

4 COMMISSIONING, USE and MAINTENANCE

COMMISSIONING INSTRUCTIONS

A Commissioning checklist is included in this manual and must be completed by the engineer at the time of commissioning.

General

Please note: the combustion for this appliance has been checked, adjusted and preset at the factory for operation on the gas type defined on the appliance data plate. However, it is advisable to check for correct combustion having first checked the following.

- That the boiler has been installed in accordance with these instructions
- The integrity of the flue system and the flue seals
- That PAR 9 has been set according to the calculated flue head losses (single boilers)
- That PAR 1 is set correctly for boilers connected to cascade flues
- The integrity of the boiler combustion circuit

Proceed to put the boiler into operation as follows:

1. Check the operational (working) gas inlet pressure.

Set up the boiler(s) to operate at maximum rate as described in 4.5.1

(chimney sweep)

With the boiler operating in the maximum rate condition check that the operational (working) gas pressure at the inlet gas pressure test point (see fig 16 item 1) complies with the requirements of table 1.3.

Ensure that this inlet pressure can be obtained with all other gas appliances in the property working.

2. Competence to carry out the check of combustion performance

- The person carrying out a combustion measurement should have been assessed as competent in the use of a flue gas analyser and the interpretation of the results.
- The flue gas analyser used should be one meeting the requirements of BS7927 or BS-EN50379-3 and be calibrated in accordance with the analyser manufacturers requirements, and
- Competence can be demonstrated by satisfactory completion of the CPA1 ACS assessment, which covers the use of electronic portable gas analysers in accordance with BS 7967, parts 1 to 4.

3. Combustion check

Connect the flue gas analyser to the flue gas sampling point as shown in the diagram (fig. 15/a).

Procedure for checking the combustion.

Operate the boilers in "Chimney Sweep" mode as described in section 4.5.1 and record the measurements from the flue gas analyser on both minimum and maximum output. Compare the results to the following:

CO less than 200ppm

CO₂ between 8.9% and 9.7% natural gas, and 9.9% and 10.5% LPG

Ratio less than 0.004

If the combustion reading is greater than the acceptable value AND the integrity of the complete flue system, combustion circuit seals have been verified, AND the gas inlet pressure has been verified, AND the boiler parameter settings are correct, proceed as shown in 4.2.2. Any adjustments should be done in small steps and adjustments of no more than 1/8th of a turn should be made, waiting at least 1 minute between adjustments to allow the settings to stabilise. Using the CO₂ reading, adjustments should be made to the "OFF-SET" screw (6 fig 16) if it is incorrect at the minimum output, or to the "SHUTTER" (5 fig 16) if it is incorrect at the maximum output.

If an acceptable setting level cannot be achieved, re-confirm that the integrity of the flue system, combustion circuit and working gas supply pressure. If required contact Sime Ltd for further assistance.


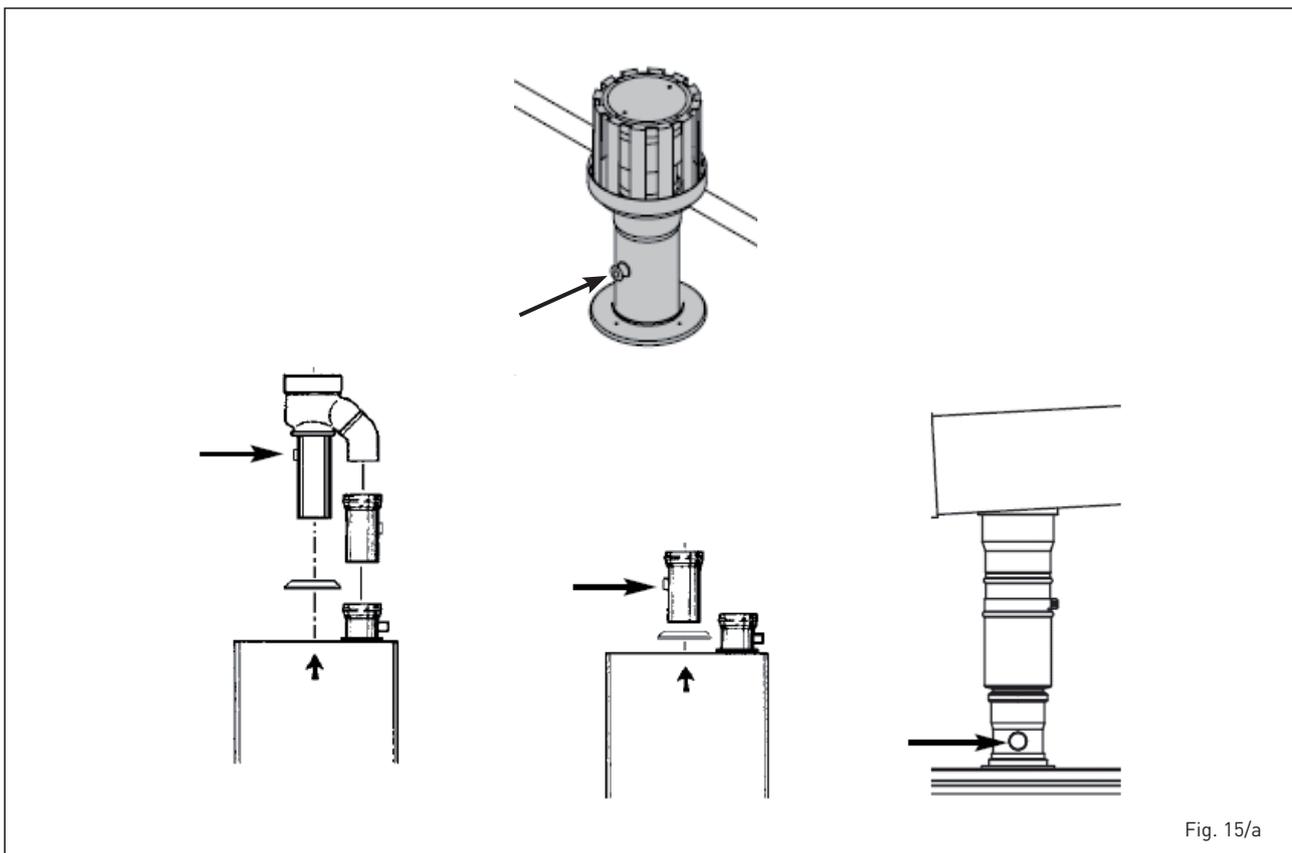


Fig. 15/a

4.1 GAS VALVE (fig. 16)

The boiler is supplied as standard with a gas valve, model SIT 848 SIGMA (fig. 16).

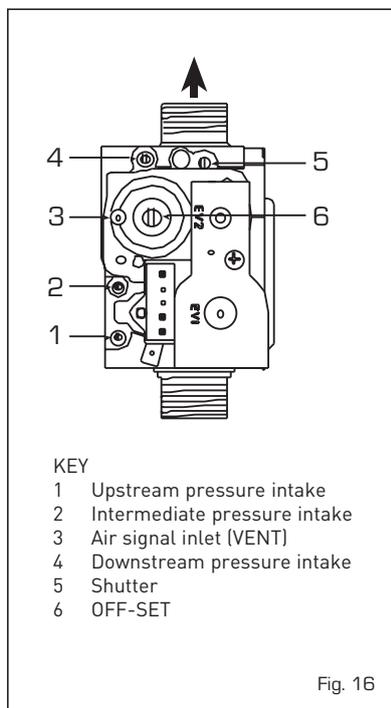

4.2 GAS CONVERSION (fig. 17)

This operation must be performed by authorised personnel using original Sime components.

To convert from natural gas to LPG or vice versa, perform the following operations

- Close the gas isolation valve.
- Replace the two differential nozzles (1-2) and relative seal o-rings (3) with those supplied in the conversion kit. Note the difference in the shape of the head of the nozzles, avoid reversal during assembly.
- Apply the nameplate with the new gas flow layout.
- Calibrate the maximum and minimum pressures of the gas valve following the instructions provided in paragraph 4.2.2.

4.2.1 New fuel configuration

For access to the installer's parameters press simultaneously keys and for 5 seconds (3 fig. 12).

The parameters will scroll up and down with the keys and .


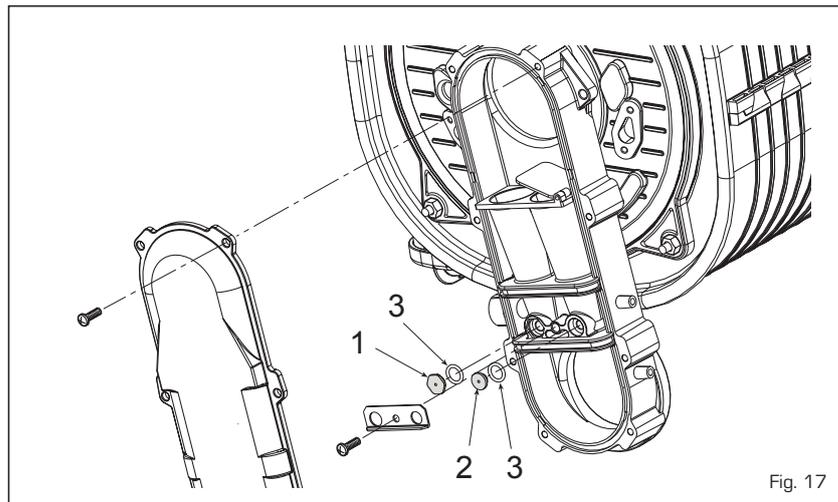


Fig. 17

The display pane will show the values of the parameter PAR 1.

If the boiler is a methane (G20) model, SET 3 will be displayed:

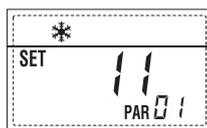

To change the fuel to propane (G31), it is necessary to set SET 11, by pressing the key .

The standard display will automatically return after 10 seconds.

The table below shows the SET settings to enter when the type of gas fuel is changed.

GAS	MODES	PAR 1
METHANE (G 20)	Single (35 R)	3
	Sequence/cascade	4
PROPANE (G 31)	Single (35 R)	11
	Sequence/cascade	12

4.2.2 Calibrating the gas valve pressures

This can only be done with a flue gas analyser. If the combustion reading is outside the acceptable values, AND the integrity of the flue system and combustion seals has been verified, the working inlet pressure has been verified, then adjustments to the gas valve can

be made as described below. Make only small adjustments (1/8 turn max) and allow time for the combustion analysis to be made before making further adjustments.

Sequence of operations:

- 1) Press and hold the button down for a few seconds .
- 2) Press the button for a few seconds .
- 3) Identify the CO₂ values at max. power by adjusting the shutter (5 fig. 16):

MAX power	
CO ₂ (Methane)	CO ₂ (Propane)
9,3 ±0,2	10,2 ±0,3

- 4) Press the button for a few seconds .
- 5) Identify the CO₂ values at min. power by adjusting the OFF-SET regulation screw (6 fig. 16):

MIN power	
CO ₂ (Methane)	CO ₂ (Propane)
8,4 ±0,2	10,0 ±0,3

- 6) Press the buttons several times to check the pressures and and change them if required.
- 7) Press the button once more to quit the function.

4.3 CO / CO₂ RATIO

		CO ppm	
		100	400
CO ₂ %	NG 9%	0,0011	0,0044
	LPG 10%	0,0010	0,0040

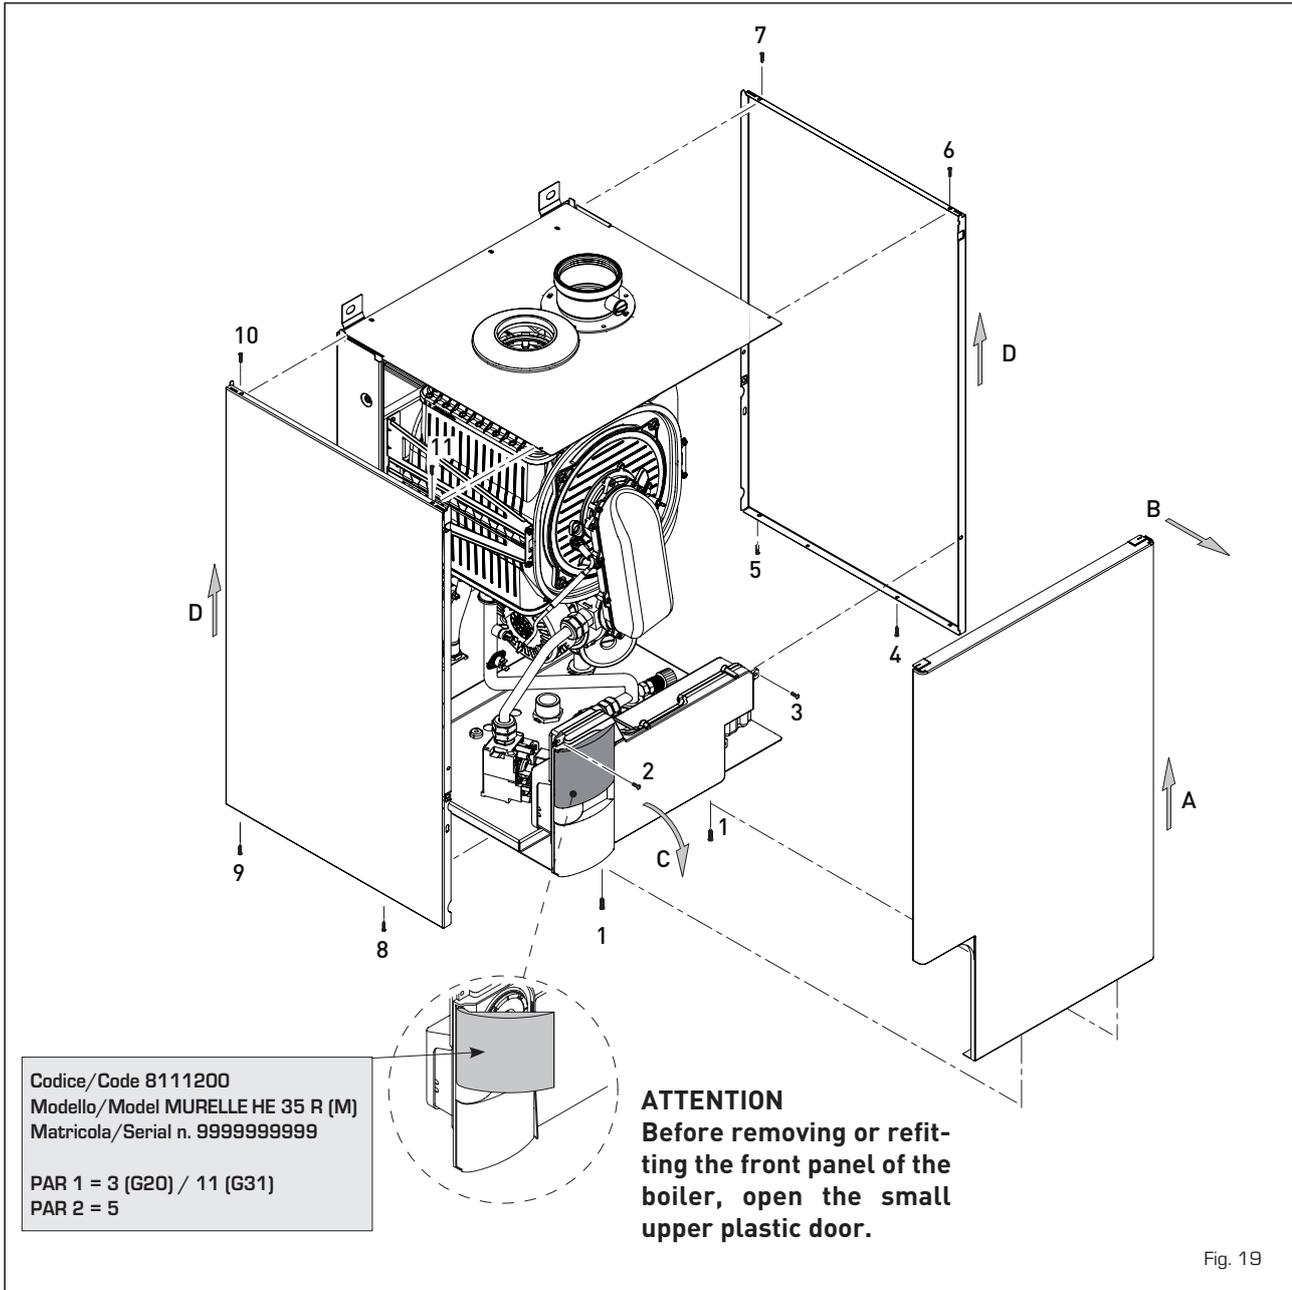


Fig. 19

4.4 DISASSEMBLING THE SHELL (fig. 19)

To simplify maintenance operations on the boiler, it is also possible to completely remove the shell, as shown in figure 19.

Turn the control panel to move it forward and be able to access the internal components of the boiler.

4.5 MAINTENANCE (fig. 20)

To ensure correct operation and efficiency, it is important that the boiler is serviced at regular intervals, at least once a year (this may also be a condition of the warranty).

Servicing must only be done by suitably qualified technicians. It is recommended that the service should include removal

and inspection of the burner and its insulation. On completion a combustion analysis must be done.

During the routine service the condensate drain can be checked by carefully pouring water into the burner.

If the boiler is not used for long periods of time, it is important that the condensate trap is checked and if necessary filled via the filling point provided, see fig 20.

4.5.1 Chimney sweep function (fig. 21)

To check boiler combustion, press the installer's key for a few seconds. The chimney sweep function will switch on and will continue for 15 minutes.

The boiler will start working in heating mode at maximum power, with

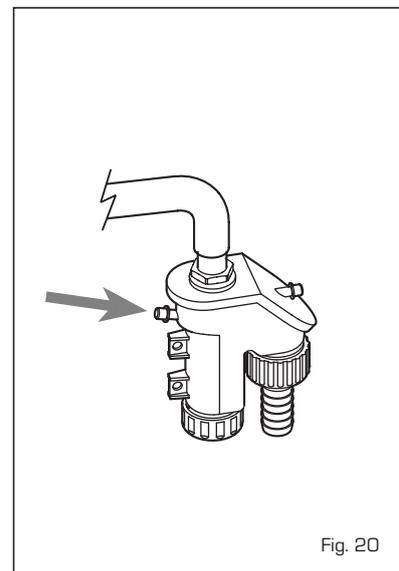


Fig. 20

cut off at 80°C and re-ignition at 70°C
[ATTENTION! Ensure adequate circulation to the heating system is available before activating chimney sweep.
 The chimney sweep function will automatically switch off after 15 minutes or when the key is pressed again.

4.5.2 Cleaning the filter “Aqua Guard Filter System” (fig. 22)

To clean the filter, isolate the electrical supply and close the flow and return valves.
 Drain the boiler using the drain vent (item 5 fig 5).
 Place a container underneath and unscrew the filter.
 Clean the filter and replace.
 Check the o-ring seal after refilling the boiler.

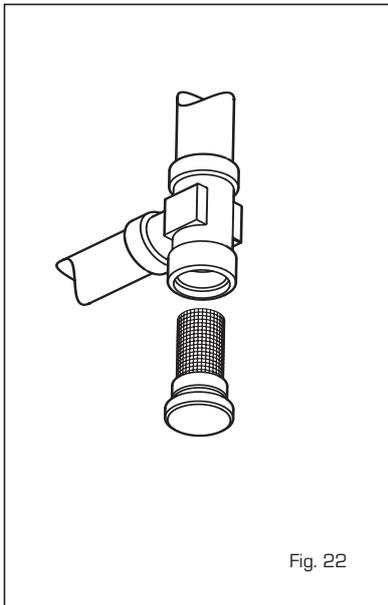


Fig. 22

4.5.3 Operation floor drying (fig. 22/a)

The operation floor drying keeps the floor at a pre-established temperature profile and it is **activated only for those systems combined with the mixed zone card MIXED ZONE code 8092234.**

The temperature profiles can be selected by means of the installer parameter PAR 43:

- 0 = Not activated function
- 1 = Curve setting A
- 2 = Curve setting B
- 3 = Curve setting A + B

The operation can be stopped by turning the boiler off, or automatically at the end of the cycle, or by altering PAR 43 to 0. The set of the mixed zone follows the development of the selected curve and reaches a maximum of 55°C.

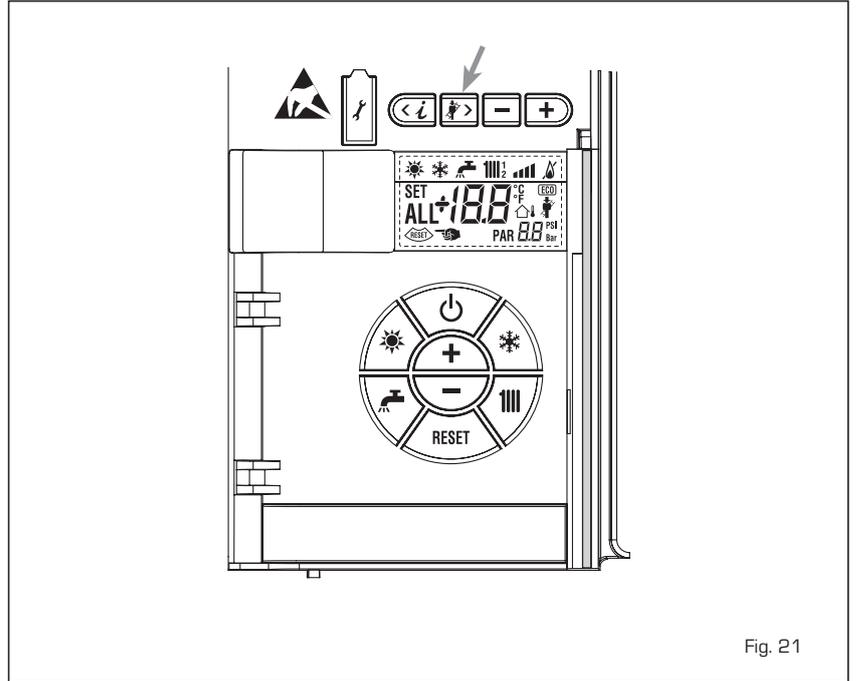


Fig. 21

During the function all the other heating demands are ignored (heating, sanitary, antifreeze and chimney sweep).
 During the functioning the display shows the remaining days for the completion of the function (example mains digits -15 = 15 days lack to the end of the function).
 The diagram fig. 22/a reports the development of the curve.

ATTENTION:

- Observe the relevant standards and regulations of the floor manufacturer!
- Proper functioning is ensured only when the plant is correctly installed (hydraulic system, electrical installation, settings)! If not observed, the floor might get damaged!

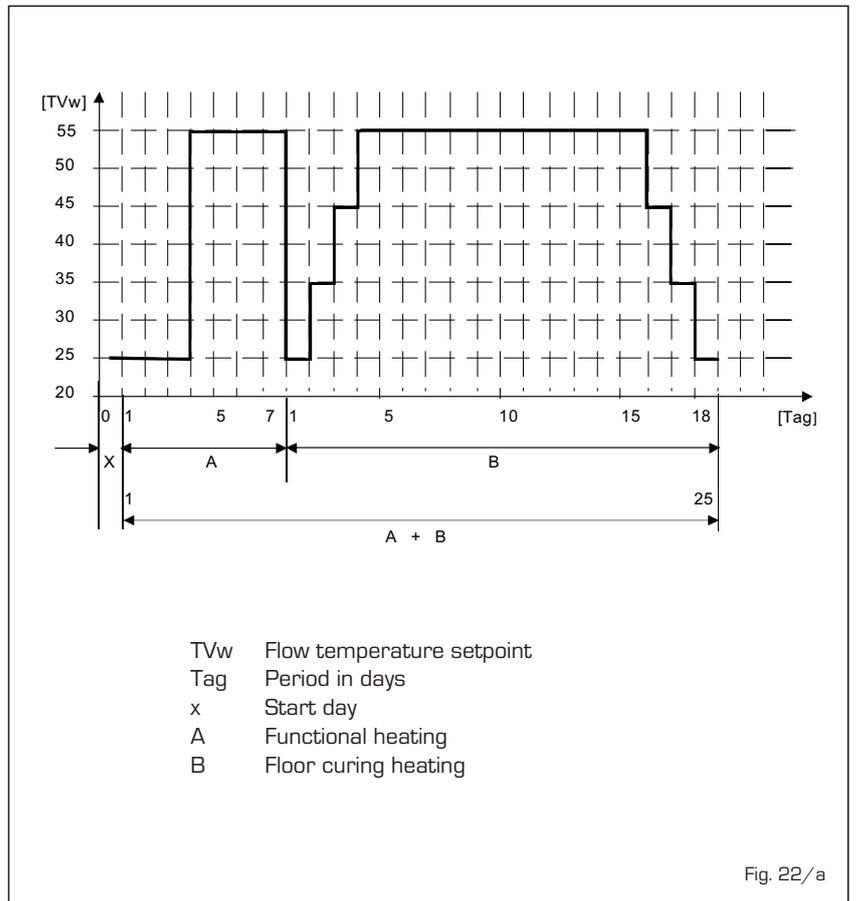


Fig. 22/a

4.5.4 WILO-YONOS PARA PWM pump diagnose and remedy (fig. 22/b)



LED diagnose and remedy

Led color	Meaning	Diagnostic	Cause	Remedy
Continuous green	Normal running	Pump run as expected or is faced to a phenomenon that shortly affects its running	Normal operation	
Red/green blinking	Abnormal situation (pump functional but stopped)	Pump will restart by itself after the abnormal situation disappeared	1. <u>Undervoltage or Overvoltage:</u> U<160V or U> 253V 2. <u>Module overvoltage:</u> T° inside motor too high	1. Check voltage supply: 195V<U<253V 2. Check water & ambient T°
Red blinking	Stopped (e.g. pump blocked)	Reset the pump Check LED signal	Pump cannot restart itself due to a permanent failure	Change pump
No LED	No power supply	No voltage on electronics	1) Pump is not connected to power supply 2) LED is damaged 3) Electronics are damaged	1) Check cable connection 2) Check if pump is running 3) Change pump

Fig. 22/b

4.6 FUNCTIONING ERRORS

When there is a functioning error, an alarm appears on the display **and the blue luminous bar may becomes red**. Descriptions of the errors with relative alarms and solutions are given below:

- LOW WATER PRESSURE ERRORS ALARM 02 (fig. 23/a)

If the pressure detected by the transducer is lower than 0.5 bar, the boiler stops and the display shows the alarm ALL 02. Using the external filling device, fill the system until the pressure indicated by the transducer is between 1 and 1.5 bars.

If the refilling procedure has to be repeated several times, it is advisable to check that the seal of the heating circuit is intact (check that there are no leaks).



Fig. 23/a

- HIGH WATER PRESSURE ERRORS ALARM 03 (fig. 23/b)

If the pressure detected by the transducer is more than 2.8 bar, the boiler stops and the display shows error ALL 03.

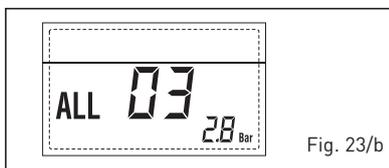


Fig. 23/b

- HEATING FLOW SENSOR ERRORS ALARM 05 (fig. 23/d)

If the heating flow sensor (SM) is open or short circuited, the boiler will not function and the display will show the alarm ALL 05.

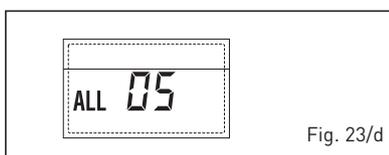


Fig. 23/d

- LOCKOUT ALARM 06 (fig. 23/e)

If the flame control has not detected the presence of the flame after a complete ignition sequence, or for any other reason the card cannot "see" the flame, the boiler will stop and the display will show the alarm ALL 06. Press the key  of the controls (2) to start up the boiler again.

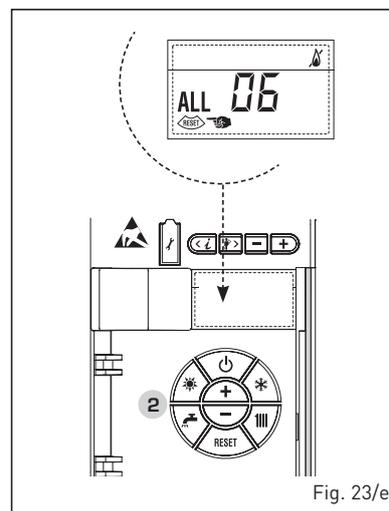


Fig. 23/e

– **SAFETY/LIMIT THERMOSTAT ERROR ALARM 07 (fig. 23/f)**

If the connection with the safety thermostat/limit thermostat is interrupted, the boiler will stop; the flame control will remain waiting to be switched off for one minute, keeping the system pump on for that period. If, the thermostat connection is restored within the minute, the boiler will start up working normally again, otherwise it will stop and the display will show the alarm ALL 07.

Press the key  of the controls (2) to start up the boiler again.

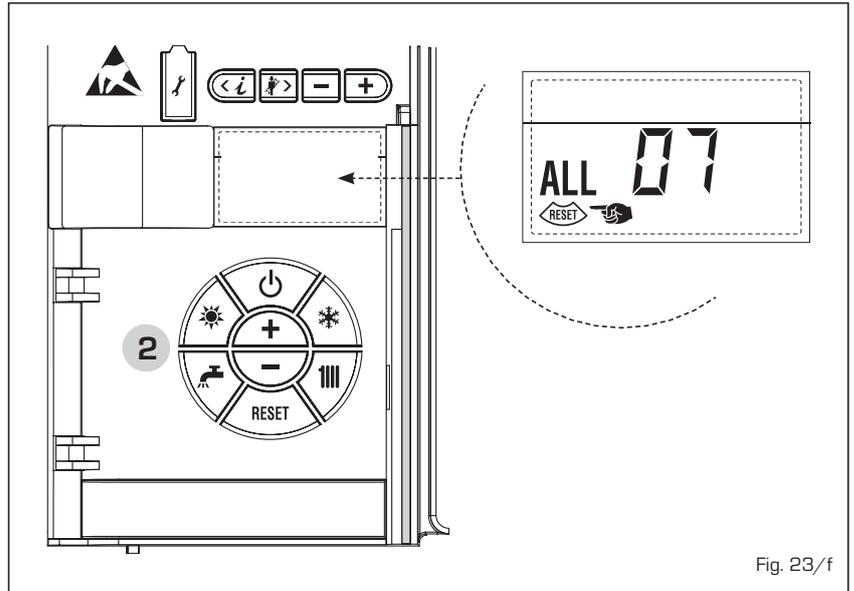


Fig. 23/f

– **FLAME DETECTION ERROR ALARM 08 (fig. 23/g)**

If the flame control section recognises the presence of flames also in phases when they should not be present, it means there is a breakdown in the flame detection circuit; the boiler will stop and the display will show error ALL 08.

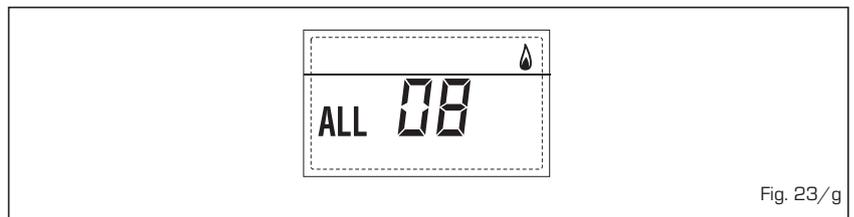


Fig. 23/g

– **WATER CIRCULATION ERRORS ALARM 09 (fig. 23/h)**

1, Water circulation has not been detected in the primary(boiler) circuit. If this error is detected the boiler will make two further attempts. If circulation is not detected it will stop and display ALL09.

Note, circulation is detected by a small rise in system pressure at the boiler transducer when the pump is energised. In large systems this may not be detected, and can be disabled by alteration of PAR 4.

2, The flow temperature sensor has detected a temperature rise in excess of 5 degrees per second.

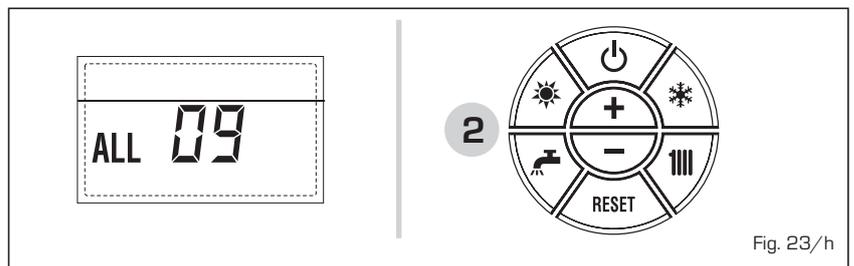


Fig. 23/h

– **AUXILIARY SENSOR ERRORS ALARM 10 (fig. 23/i)**

SB sensor (if fitted), shorted or open circuit. Confirm correct setting of PAR2.

On BOX version shorted or open circuit of SA sensor

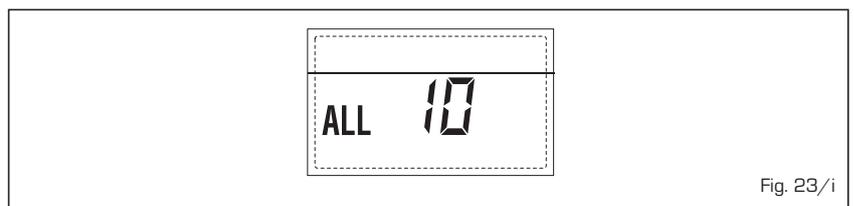


Fig. 23/i

– **ACTIVATION OF THE EXHAUST FUMES PROBE “ALL 13” (fig. 23/j)**

The activation of this probe causes the boiler to stop and error message ALL 13 to display.

Press the key  of the controls (2) to start up the boiler again.

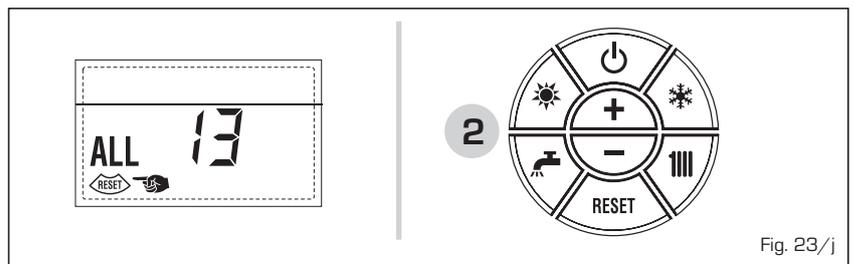


Fig. 23/j

– **TEMPERATURE SENSOR ERROR “ALL 14”(fig. 23/k)**

If the exhaust fumes probes is open or short-circuited, the boiler stops and error message ALL 14 displays.



Fig. 23/k

- FAN ERROR "ALL 15" (fig. 23/m)

The fan speed does not fall within the rated speed range.

If the error conditions persists for two minutes, the boiler activates a forced stop for thirty minutes.

A new start attempt is repeated after the expiry of this interval of time.

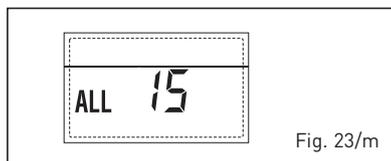


Fig. 23/m

- EXTERNAL PROBE ERROR "FLASHING" (fig. 23/p)

When fitted if the external probe (SE) is short-circuited, the display the symbol flashes

During such anomaly the boiler continues normal functioning.

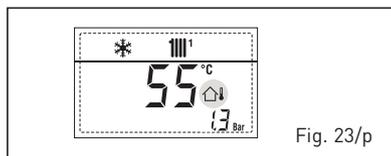


Fig. 23/p

- SAFETY THERMOSTAT INTERVENTION FIRST MIXED ZONE "ALL 20" (fig. 23/q)

When the mixed zone board is connected to the boiler, a safety thermostat intervention switches on the mixed zone pump, the mixed zone valve closes and the display indicates error ALL 20.

During this error the boiler continues to function normally.



Fig. 23/q

- DELIVERY PROBE BREAKDOWN ERROR FIRST MIXED ZONE "ALL 21" (fig. 23/r)

When a mixed zone board is connected to the boiler, if the delivery probe becomes open or short circuit the display will indicate ALL21.

During this error, the boiler continues to function normally.

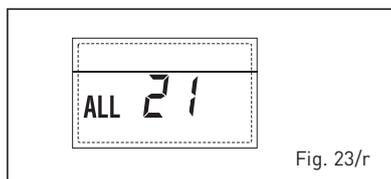


Fig. 23/r

- SAFETY THERMOSTAT INTERVENTION SECOND MIXED ZONE "ALL 22" (fig. 23/s)

When a mixed zone board is connected to the boiler, an intervention of the safety thermostat switches on the mixed zone pump, the mixed zone valve closes and the display indicates ALL 22. During this anomaly the boiler continues to function normally.

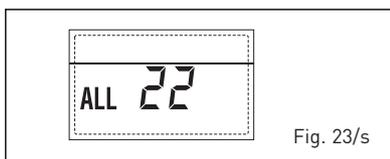


Fig. 23/s

- DELIVERY PROBE BREAKDOWN ERROR SECOND MIXED ZONE "ALL 23" (fig. 23/t)

When a mixed zone board is connected to the boiler, if the delivery probe is open or short circuited, the display will indicate ALL 23 appears. During this anomaly the boiler continues to function normally.

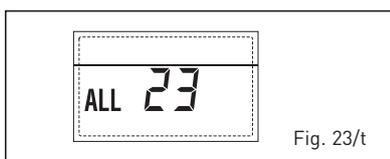


Fig. 23/t

- SOLAR COLLECTOR SENSOR ERROR (S1) "ALL 24" (fig. 23/18)

When the solar probe is open or short circuited, on the display the anomaly ALL 24 appears. During this anomaly the boiler continues to function normally but loses the solar function that is no longer available.

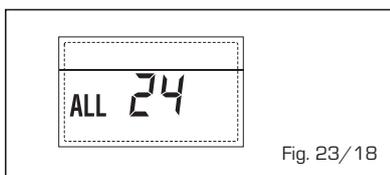


Fig. 23/18

- SOLAR PROBE ERROR STORAGE TANK (S2) "ALL 25" (fig. 23/19)

When the solar probe is open or short circuited, on the display the anomaly ALL 25 appears. During this anomaly the boiler continues to function normally but loses the solar function that is no longer available.

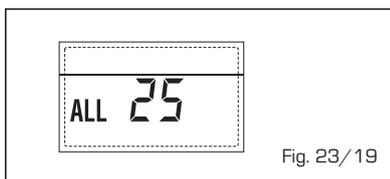


Fig. 23/19

- AUXILIARY SENSOR ERROR (S3) "ALL 26" (fig. 23/20)

When the solar probe is open or short circuited, on the display the anomaly ALL 26 appears. During this anomaly the boiler continues to function normally but loses the solar function that is no longer available.

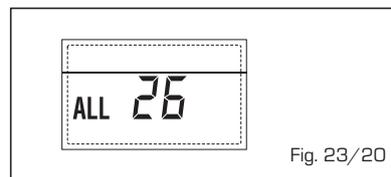


Fig. 23/20

- ERROR SOLAR APPLICATION COMPATIBILITY "ALL 27" (fig. 23/21)

When the hydraulic configuration PAR 2 is not consistent with the selection solar application, on the display the anomaly ALL 27 appears. During this anomaly the boiler continues to function normally but for the board is active in the solar anomaly, the function is only available antifreeze collector.

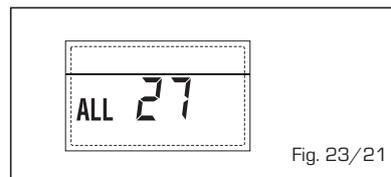


Fig. 23/21

- COMPATIBILITY INPUT (S3) ERROR ONLY FOR SYSTEM 7 "ALL 28" (fig. 23/22)

When a probe is connected instead of a clean contact on entry S3 the board on display shows the anomaly ALL 28. During this anomaly the boiler continues to function normally but for the board is active in the solar anomaly, the function is only available antifreeze collector.

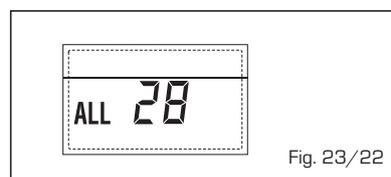


Fig. 23/22

- ERROR NUMBERS RELATED BOARD "ALL 29" (fig. 23/23)

When there is no communication with a fitted expansion board, the display will indicate ALL29.

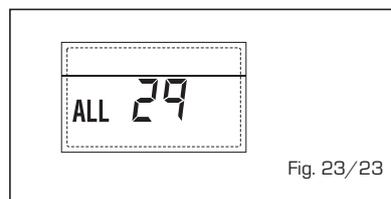


Fig. 23/23

– **HEATING RETURN SENSOR ERROR “ALL 30” (fig. 23/u)**

When the heating return sensor (SR) is open or shorted, ALL 30 will be displayed.

During such anomaly, the boiler will continue to operate normally.

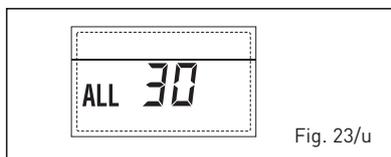


Fig. 23/u

– **CASCADE DELIVERY SENSOR ERRORS “ALL 31” (fig. 23/v)**

In cascade systems, should the delivery probe sensor (SMC) become open or short circuited, the display will show ALL31.

During such anomaly, the boiler will continue to operate normally.

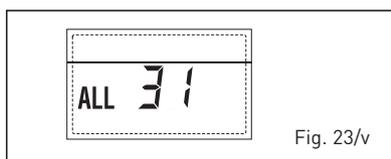


Fig. 23/v

– **THREE-ZONE SYSTEM CONFIGURATION ERROR “ALL 32” (fig. 23/w)**

When the boards connected to the RS-485 are not enough and/or at least one of them it is not mixing zone board, the boiler stops and anomaly ALL 32 is displayed.

The boiler restarts when the boiler three-zone system configuration is activated

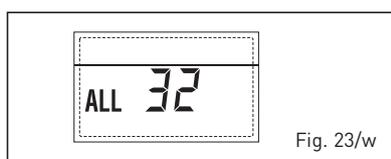


Fig. 23/w

– **RS-485 BOARD COMMUNICATION ERROR IN MODBUS MODE “ALL 33” (fig. 23/k)**

When PAR 16 is different from “- -” and there is no communication between the boiler board and the RS-485 board in MODBUS mode for at least four minutes, the boiler stops and anomaly ALL 33 is displayed.

The boiler restarts when communication is restored or when PAR 16 = “- -” is set.

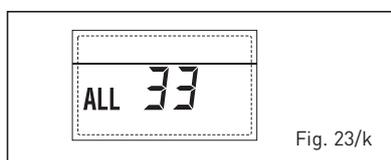


Fig. 23/k

– **RS-485 BOARD COMMUNICATION ERROR IN CASCADE MODE “ALL 34” (fig. 23/j)**

When PAR 15 is different from “- -” and there is no communication between the boiler board and the RS-485 board in CASCADE mode, the boiler stops and anomaly ALL 34 is displayed. The boiler restarts when communication is restored or when PAR 15 = “- -” is set.

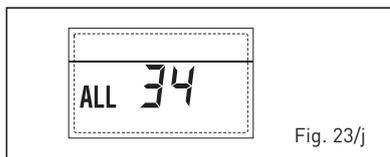


Fig. 23/j

– **RS-485 AND RS-485 COMMUNICATION ERROR “ALL 35” (fig. 23/x)**

When PAR 15 is different from “- -” and there is no communication between the two RS-485 boards, the boiler stops and error ALL 35 is displayed. The boiler restarts when communication is restored or when PAR 15 = “- -” is set.

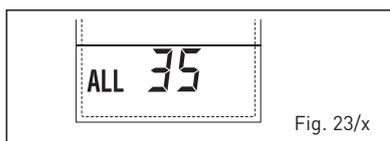


Fig. 23/x

CAUTION: In the event of sequence/cascade connection, error codes 70 and 71 will appear on the CR 73 remote control display:

– **ALARM 70**

When an anomaly affects cascade operation (cascade delivery sensor ALL 31), CR 73 remote control display will show alarm 70. Verify the anomaly in the cascade.

– **ALARM 71**

When an anomaly occurs in one of the modules and the others keep operating to the extent permitted, the CR 73 remote control display will show alarm 71. Verify the anomaly in the cascade.

GAS BOILER SYSTEM COMMISSIONING CHECKLIST

This Commissioning Checklist is to be completed in full by the competent person who commissioned the boiler as a means of demonstrating compliance with the appropriate Building Regulations and then handed to the customer to keep for future reference.

Failure to install and commission according to the manufacturer's instructions and complete this Benchmark Commissioning Checklist will invalidate the warranty. This does not affect the customer's statutory rights.

Customer name:	Telephone number:
Address:	
Boiler make and model:	
Boiler serial number:	
Commissioned by (PRINT NAME):	Gas Safe register number:
Company name:	Telephone number:
Company address:	
Commissioning date:	

To be completed by the customer on receipt of a Building Regulations Compliance Certificate*

Building Regulations Notification Number (if applicable):

CONTROLS (tick the appropriate boxes)			
Time and temperature control to heating	Room thermostat and programmer/timer		Programmable room thermostat
	Load/weather compensation		Optimum start control
Time and temperature control to hot water	Cylinder thermostat and programmer/timer		Combination Boiler
Heating zone valves	Fitted		Not required
Hot water zone valves	Fitted		Not required
Thermostatic radiator valves	Fitted		Not required
Automatic bypass to system	Fitted		Not required
Boiler interlock			Provided

ALL SYSTEMS			
The system has been flushed and cleaned in accordance with BS7593 and boiler manufacturer's instructions		Yes	
What system cleaner was used?			
What inhibitor was used?	Quantity		litres
Has a primary water system filter been installed?	Yes		No

CENTRAL HEATING MODE measure and record:			
Gas rate	m ³ /hr	OR	ft ³ /hr
Burner operating pressure (if applicable)	mbar	OR Gas inlet pressure	mbar
Central heating flow temperature			°C
Central heating return temperature			°C

COMBINATION BOILERS ONLY			
Is the installation in a hard water area (above 200ppm)?	Yes		No
If yes, and if required by the manufacturer, has a water scale reducer been fitted?	Yes		No
What type of scale reducer has been fitted?			

DOMESTIC HOT WATER MODE Measure and Record:			
Gas rate	m ³ /hr	OR	ft ³ /hr
Burner operating pressure (at maximum rate)	mbar	OR Gas inlet pressure at maximum rate	mbar
Cold water inlet temperature			°C
Hot water has been checked at all outlets	Yes	Temperature	°C
Water flow rate			l/min

CONDENSING BOILERS ONLY			
The condensate drain has been installed in accordance with the manufacturer's instructions and/or BS5546/BS6798		Yes	

ALL INSTALLATIONS					
Record the following:	At max. rate:	CO	ppm	AND	CO/CO ₂ Ratio
	At min. rate: (where possible)	CO	ppm	AND	CO/CO ₂ Ratio
The heating and hot water system complies with the appropriate Building Regulations					Yes
The boiler and associated products have been installed and commissioned in accordance with the manufacturer's instructions					Yes
The operation of the boiler and system controls have been demonstrated to and understood by the customer					Yes
The manufacturer's literature, including Benchmark Checklist and Service Record, has been explained and left with the customer					Yes

Commissioning Engineer's Signature
Customer's Signature
(To confirm satisfactory demonstration and receipt of manufacturer's literature)

*All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.

SERVICE RECORD

It is recommended that your heating system is serviced regularly and that the appropriate Service Interval Record is completed.

Service Provider

Before completing the appropriate Service Record below, please ensure you have carried out the service as described in the manufacturer's instructions. Always use the manufacturer's specified spare part when replacing controls.

<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">SERVICE 01</td> <td colspan="2">Date:</td> </tr> <tr><td colspan="4">Engineer name:</td></tr> <tr><td colspan="4">Company name:</td></tr> <tr><td colspan="4">Telephone No:</td></tr> <tr><td colspan="4">Gas safe register No:</td></tr> <tr> <td>Record:</td> <td>At max. rate:</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr> <td></td> <td>At min. rate: (Where Possible)</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr><td colspan="4">Comments:</td></tr> <tr><td colspan="4">Signature</td></tr> </table>	SERVICE 01		Date:		Engineer name:				Company name:				Telephone No:				Gas safe register No:				Record:	At max. rate:	CO ppm	AND CO ₂ %		At min. rate: (Where Possible)	CO ppm	AND CO ₂ %	Comments:				Signature				<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">SERVICE 02</td> <td colspan="2">Date:</td> </tr> <tr><td colspan="4">Engineer name:</td></tr> <tr><td colspan="4">Company name:</td></tr> <tr><td colspan="4">Telephone No:</td></tr> <tr><td colspan="4">Gas safe register No:</td></tr> <tr> <td>Record:</td> <td>At max. rate:</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr> <td></td> <td>At min. rate: (Where Possible)</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr><td colspan="4">Comments:</td></tr> <tr><td colspan="4">Signature</td></tr> </table>	SERVICE 02		Date:		Engineer name:				Company name:				Telephone No:				Gas safe register No:				Record:	At max. rate:	CO ppm	AND CO ₂ %		At min. rate: (Where Possible)	CO ppm	AND CO ₂ %	Comments:				Signature			
SERVICE 01		Date:																																																																							
Engineer name:																																																																									
Company name:																																																																									
Telephone No:																																																																									
Gas safe register No:																																																																									
Record:	At max. rate:	CO ppm	AND CO ₂ %																																																																						
	At min. rate: (Where Possible)	CO ppm	AND CO ₂ %																																																																						
Comments:																																																																									
Signature																																																																									
SERVICE 02		Date:																																																																							
Engineer name:																																																																									
Company name:																																																																									
Telephone No:																																																																									
Gas safe register No:																																																																									
Record:	At max. rate:	CO ppm	AND CO ₂ %																																																																						
	At min. rate: (Where Possible)	CO ppm	AND CO ₂ %																																																																						
Comments:																																																																									
Signature																																																																									
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">SERVICE 03</td> <td colspan="2">Date:</td> </tr> <tr><td colspan="4">Engineer name:</td></tr> <tr><td colspan="4">Company name:</td></tr> <tr><td colspan="4">Telephone No:</td></tr> <tr><td colspan="4">Gas safe register No:</td></tr> <tr> <td>Record:</td> <td>At max. rate:</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr> <td></td> <td>At min. rate: (Where Possible)</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr><td colspan="4">Comments:</td></tr> <tr><td colspan="4">Signature</td></tr> </table>	SERVICE 03		Date:		Engineer name:				Company name:				Telephone No:				Gas safe register No:				Record:	At max. rate:	CO ppm	AND CO ₂ %		At min. rate: (Where Possible)	CO ppm	AND CO ₂ %	Comments:				Signature				<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">SERVICE 04</td> <td colspan="2">Date:</td> </tr> <tr><td colspan="4">Engineer name:</td></tr> <tr><td colspan="4">Company name:</td></tr> <tr><td colspan="4">Telephone No:</td></tr> <tr><td colspan="4">Gas safe register No:</td></tr> <tr> <td>Record:</td> <td>At max. rate:</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr> <td></td> <td>At min. rate: (Where Possible)</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr><td colspan="4">Comments:</td></tr> <tr><td colspan="4">Signature</td></tr> </table>	SERVICE 04		Date:		Engineer name:				Company name:				Telephone No:				Gas safe register No:				Record:	At max. rate:	CO ppm	AND CO ₂ %		At min. rate: (Where Possible)	CO ppm	AND CO ₂ %	Comments:				Signature			
SERVICE 03		Date:																																																																							
Engineer name:																																																																									
Company name:																																																																									
Telephone No:																																																																									
Gas safe register No:																																																																									
Record:	At max. rate:	CO ppm	AND CO ₂ %																																																																						
	At min. rate: (Where Possible)	CO ppm	AND CO ₂ %																																																																						
Comments:																																																																									
Signature																																																																									
SERVICE 04		Date:																																																																							
Engineer name:																																																																									
Company name:																																																																									
Telephone No:																																																																									
Gas safe register No:																																																																									
Record:	At max. rate:	CO ppm	AND CO ₂ %																																																																						
	At min. rate: (Where Possible)	CO ppm	AND CO ₂ %																																																																						
Comments:																																																																									
Signature																																																																									
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">SERVICE 05</td> <td colspan="2">Date:</td> </tr> <tr><td colspan="4">Engineer name:</td></tr> <tr><td colspan="4">Company name:</td></tr> <tr><td colspan="4">Telephone No:</td></tr> <tr><td colspan="4">Gas safe register No:</td></tr> <tr> <td>Record:</td> <td>At max. rate:</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr> <td></td> <td>At min. rate: (Where Possible)</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr><td colspan="4">Comments:</td></tr> <tr><td colspan="4">Signature</td></tr> </table>	SERVICE 05		Date:		Engineer name:				Company name:				Telephone No:				Gas safe register No:				Record:	At max. rate:	CO ppm	AND CO ₂ %		At min. rate: (Where Possible)	CO ppm	AND CO ₂ %	Comments:				Signature				<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">SERVICE 06</td> <td colspan="2">Date:</td> </tr> <tr><td colspan="4">Engineer name:</td></tr> <tr><td colspan="4">Company name:</td></tr> <tr><td colspan="4">Telephone No:</td></tr> <tr><td colspan="4">Gas safe register No:</td></tr> <tr> <td>Record:</td> <td>At max. rate:</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr> <td></td> <td>At min. rate: (Where Possible)</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr><td colspan="4">Comments:</td></tr> <tr><td colspan="4">Signature</td></tr> </table>	SERVICE 06		Date:		Engineer name:				Company name:				Telephone No:				Gas safe register No:				Record:	At max. rate:	CO ppm	AND CO ₂ %		At min. rate: (Where Possible)	CO ppm	AND CO ₂ %	Comments:				Signature			
SERVICE 05		Date:																																																																							
Engineer name:																																																																									
Company name:																																																																									
Telephone No:																																																																									
Gas safe register No:																																																																									
Record:	At max. rate:	CO ppm	AND CO ₂ %																																																																						
	At min. rate: (Where Possible)	CO ppm	AND CO ₂ %																																																																						
Comments:																																																																									
Signature																																																																									
SERVICE 06		Date:																																																																							
Engineer name:																																																																									
Company name:																																																																									
Telephone No:																																																																									
Gas safe register No:																																																																									
Record:	At max. rate:	CO ppm	AND CO ₂ %																																																																						
	At min. rate: (Where Possible)	CO ppm	AND CO ₂ %																																																																						
Comments:																																																																									
Signature																																																																									
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">SERVICE 07</td> <td colspan="2">Date:</td> </tr> <tr><td colspan="4">Engineer name:</td></tr> <tr><td colspan="4">Company name:</td></tr> <tr><td colspan="4">Telephone No:</td></tr> <tr><td colspan="4">Gas safe register No:</td></tr> <tr> <td>Record:</td> <td>At max. rate:</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr> <td></td> <td>At min. rate: (Where Possible)</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr><td colspan="4">Comments:</td></tr> <tr><td colspan="4">Signature</td></tr> </table>	SERVICE 07		Date:		Engineer name:				Company name:				Telephone No:				Gas safe register No:				Record:	At max. rate:	CO ppm	AND CO ₂ %		At min. rate: (Where Possible)	CO ppm	AND CO ₂ %	Comments:				Signature				<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">SERVICE 08</td> <td colspan="2">Date:</td> </tr> <tr><td colspan="4">Engineer name:</td></tr> <tr><td colspan="4">Company name:</td></tr> <tr><td colspan="4">Telephone No:</td></tr> <tr><td colspan="4">Gas safe register No:</td></tr> <tr> <td>Record:</td> <td>At max. rate:</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr> <td></td> <td>At min. rate: (Where Possible)</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr><td colspan="4">Comments:</td></tr> <tr><td colspan="4">Signature</td></tr> </table>	SERVICE 08		Date:		Engineer name:				Company name:				Telephone No:				Gas safe register No:				Record:	At max. rate:	CO ppm	AND CO ₂ %		At min. rate: (Where Possible)	CO ppm	AND CO ₂ %	Comments:				Signature			
SERVICE 07		Date:																																																																							
Engineer name:																																																																									
Company name:																																																																									
Telephone No:																																																																									
Gas safe register No:																																																																									
Record:	At max. rate:	CO ppm	AND CO ₂ %																																																																						
	At min. rate: (Where Possible)	CO ppm	AND CO ₂ %																																																																						
Comments:																																																																									
Signature																																																																									
SERVICE 08		Date:																																																																							
Engineer name:																																																																									
Company name:																																																																									
Telephone No:																																																																									
Gas safe register No:																																																																									
Record:	At max. rate:	CO ppm	AND CO ₂ %																																																																						
	At min. rate: (Where Possible)	CO ppm	AND CO ₂ %																																																																						
Comments:																																																																									
Signature																																																																									
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">SERVICE 09</td> <td colspan="2">Date:</td> </tr> <tr><td colspan="4">Engineer name:</td></tr> <tr><td colspan="4">Company name:</td></tr> <tr><td colspan="4">Telephone No:</td></tr> <tr><td colspan="4">Gas safe register No:</td></tr> <tr> <td>Record:</td> <td>At max. rate:</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr> <td></td> <td>At min. rate: (Where Possible)</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr><td colspan="4">Comments:</td></tr> <tr><td colspan="4">Signature</td></tr> </table>	SERVICE 09		Date:		Engineer name:				Company name:				Telephone No:				Gas safe register No:				Record:	At max. rate:	CO ppm	AND CO ₂ %		At min. rate: (Where Possible)	CO ppm	AND CO ₂ %	Comments:				Signature				<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">SERVICE 10</td> <td colspan="2">Date:</td> </tr> <tr><td colspan="4">Engineer name:</td></tr> <tr><td colspan="4">Company name:</td></tr> <tr><td colspan="4">Telephone No:</td></tr> <tr><td colspan="4">Gas safe register No:</td></tr> <tr> <td>Record:</td> <td>At max. rate:</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr> <td></td> <td>At min. rate: (Where Possible)</td> <td>CO ppm</td> <td>AND CO₂ %</td> </tr> <tr><td colspan="4">Comments:</td></tr> <tr><td colspan="4">Signature</td></tr> </table>	SERVICE 10		Date:		Engineer name:				Company name:				Telephone No:				Gas safe register No:				Record:	At max. rate:	CO ppm	AND CO ₂ %		At min. rate: (Where Possible)	CO ppm	AND CO ₂ %	Comments:				Signature			
SERVICE 09		Date:																																																																							
Engineer name:																																																																									
Company name:																																																																									
Telephone No:																																																																									
Gas safe register No:																																																																									
Record:	At max. rate:	CO ppm	AND CO ₂ %																																																																						
	At min. rate: (Where Possible)	CO ppm	AND CO ₂ %																																																																						
Comments:																																																																									
Signature																																																																									
SERVICE 10		Date:																																																																							
Engineer name:																																																																									
Company name:																																																																									
Telephone No:																																																																									
Gas safe register No:																																																																									
Record:	At max. rate:	CO ppm	AND CO ₂ %																																																																						
	At min. rate: (Where Possible)	CO ppm	AND CO ₂ %																																																																						
Comments:																																																																									
Signature																																																																									

*All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.

© Heating and Hotwater Industry Council (HHIC)



www.centralheating.co.uk

INSTALLATION CHECKLIST

SINGLE BOILER INSTALLATION

PAR 14 (See section 2.7.6) When BMS input used, and input is 10v, the required flow temperature = °C Set value of PAR 14

BOILERS INSTALLED IN CASCADE

ALL BOILERS IN THE CASCADE

PAR 15 (see fig 4/b) The cascade address must be set in each boiler in the cascade, denoting the master and each slave (Master = 0)

Boiler 1	Boiler 2	Boiler 3	Boiler 4	Boiler 5	Boiler 6
Set value of PAR 15					

PAR 1 (see section 2.2.2) When installed with a cascade flue, incorporating a clappet(non return) valve, PAR 1 must be set accordingly on each boiler in the cascade

Boiler 1	Boiler 2	Boiler 3	Boiler 4	Boiler 5	Boiler 6
Set value of PAR 1					

MASTER BOILER

OEM A1 (see section 2.2.2) When the number of boilers in the cascade is greater than two, the OEM A1 on the MASTER boiler (boiler with PAR 15=0), must be set to the same value as the number of boilers in the cascade. This can only be done after PAR 15 has been set.

Number of boilers in cascade
 Set value of OEMA1 on boiler number

PAR 14 (See section 2.7.6) When BMS input used, and input is 10v, the required flow temperature = °C Set value of PAR 14 on the master boiler

Commissioning Checklist for Boilers in Cascade

This checklist is for guidance only, and is not a full installation safety check

Address _____ Engineer _____

	1	2	3	4	5	6	7	8
Satisfactory visual check of flue Y/N								
Flue within allowable length and correctly terminated Y/N								
Confirm Tightness of installation pipework downstream of Isolating valve using leak detection fluid Y/N								
Check tightness of all valves Y/N								
Carryout ignition test of boiler with gas isolated to ensure boiler fails safe Y/N								
Turn on gas supply to boiler and isolate main burner(disconnect gas valve) and ensure boiler goes to lockout Y/N								
Reset boiler lockout and retry, ensuring boiler again locks out Y/N								
Reconnect gas valve, reset boiler lockout, and ensure boiler lights and is stable Y/N								
Test safety devices Y/N								
Safety stat(TS) - Disconnect - the boiler locks out Y/N								

	Boiler 1		Boiler 2		Boiler 3		Boiler 4		Boiler 5		Boiler 6		Boiler 7		Boiler 8	
	Min	Max														
Flue analysis																
Boiler Output																
CO ppm																
CO2 %																
Ratio																
Boiler size																
Serial Number																
Completed By																
Date																

5 FAULT FINDING

If an electrical fault occurs on the appliance the preliminary electrical system checks must be carried out first.

When any service or replacement of electrical components which has required the breaking and re-making of electrical connections has taken place, the following tests must be repeated:

- earth continuity;
- short circuit;
- polarity;
- resistance to earth.

5.1 EARTH CONTINUITY CHECK

Appliances must be electrically disconnected, meter set on Ω (ohm) x 1 scale and adjust zero if necessary. Test leads from any appliance earth point (e.g. inside control box) see wiring diagrams (section 7) to earth pin on plug.

Resistance should be less than 1 Ω (ohm). If the resistance is greater than 1 Ω (ohm) check all earth wires for continuity and all contacts are clean and tight. If the resistance to earth is still greater than 1 Ω (ohm) then this should be investigated further.

5.2 SHORT CIRCUIT CHECK

Switches turned FULL ON - meter set on Ω (ohms) x 1 scale. Test leads from L to N on appliance terminal block, if meter reads 0 then there is a short circuit.

Meter set on Ω (ohm) x 100 scale. Repeat it with leads from L to E. If meter reads less than infinity (∞) there is a fault.

NOTE: Should it be found that the fuse has failed but no fault is indicated, a detailed continuity check (i.e. by disconnecting and checking each component) is required to trace the faulty component. It is possible that a fault could occur as a result of local burning/arc-ing but no fault could be found under test. However, a detailed visual inspection should reveal evidence of burning around the fault.

5.3 POLARITY CHECK

Appliance reconnected to mains supply and meter set on 300 V ac scale. Test at appliance terminal block.

- Test leads from L to N meter reads

approx.: 240 V ac.

- Test leads from L to E " * " meter reads approx. 240 V ac.
- Test leads from N to E " * " meter reads from 0 to 15 V ac.

5.4 RESISTANCE TO EARTH CHECK

Appliance must be disconnected from main supply and meter on Ω (ohm) x 100 scale.

All switches including thermostat on test leads from L to E - if meter reads other than infinity (∞) there is a fault which should be isolated.

A detailed continuity check is required to trace the faulty component.

IMPORTANT:

These series of checks are the first electrical checks to be carried out during a fault finding procedure. On completion of the service/fault finding task which has required the breaking and remaking of electrical connections then the checks 5.1 Earth continuity, 5.3 Polarity and 5.4 Resistance to earth must be repeated.

6 REPLACEMENT OF PARTS

The boiler certification and warranty will be void should spares or replacement parts be used that are not supplied by Sime Ltd, and only suitably qualified personnel are permitted to work on gas appliances.

Ensure that the boiler is isolated from the gas and electrical supply before commencing work. Use appropriate personal safety equipment and be aware of hot surfaces and hot water.

Close the flow and return valves, and use the drain vents provided before removal of any part of the hydraulic circuit.

The boiler shell can be removed to improve access, see 4.4

The control panel can be lowered after removal of the securing screw.

6.1 BURNER INSPECTION

Isolate the electrical and gas supply.

Lower the control panel.

Disconnect the ignition and ionisation electrodes.

Disconnect the air inlet to the fan.

Disconnect the gas connection at the fan.

Disconnect the two electrical connections from the fan.

While supporting the assembly, remove the four nuts securing the burner plate.

Carefully remove the burner / fan assembly from the heat exchanger.

Inspect the internal section of the heat exchanger, clean if required using a soft brush and vacuum cleaner.

Inspect the burner seals and insulation, replace if damaged.

Check the position and condition of the ignition and ionisation electrodes, replace if required.

Refit in reverse order.

On completion a flue gas analysis must be taken. See section 4- Commissioning.

6.2 FAN

Remove the burner / fan assembly as described in 6.1.

Remove the four fixing bolts and remove the fan.

Transfer the air inlet connector to the new fan.

Inspect the gasket and replace if necessary.

Fit the fan and replace in reverse order.

On completion a flue gas analysis must be taken. See section 4- Commissioning

6.3 PUMP

Isolate the electrical and gas supply.

Lower the control panel.

Where possible to improve access, remove the RHS panel, see 4.4

Isolate the flow and return valves, and drain the boiler using the drain vents provided.

Protect any electrical equipment from possible spills of system water.

Disconnect the electrical connection.

Remove the pump fixing screws and remove the pump.

Fit the new pump.

6.4 WATER PRESSURE TRANSDUCER

Isolate the electrical and gas supply.

Lower the control panel.

Where possible to improve access, remove the RHS panel.

Isolate the flow and return valves, and drain the boiler using the drain vents provided.

Protect any electrical equipment from possible spills of system water.

Disconnect the electrical connection.

Remove the transducer fixing clip

Refit in reverse order.

6.5 PCB (PRINTED CIRCUIT BOARD)

Isolate the electrical and gas supply.

Lower the control panel.

Remove the PCB covers

Disconnect all the plugs around the circuit board noting positions of single connections.

Remove the PCB fixing screws.

Replace in reverse order

The new or replacement PCB will need to be reconfigured to suit the boiler.

PAR 1 will need to be set according to the gas used

PAR 2 will need to be set according to the boiler configuration

See section 3.3.

Boilers used in cascade may require additional configuration, see installation checklist.

6.6 GAS VALVE

Isolate the electrical and gas supply.

Lower the control panel.

Where possible to improve access, remove the LHS panel, see 4.4

Remove the electrical connection to the gas valve.

Remove the air sensing tube, noting its position.

Disconnect the gas cock.

Remove the gas valve securing screws at base of boiler.

Disconnect the gas connection at then fan

Remove the pipework from the gas valve and fit to the replacement valve.

Replace the gaskets as required.

Replace in reverse order.

On completion the gas valve will require adjustment. See section 4

6.7 FLOW SENSORS (SM)

Isolate the electrical and gas supply.

Lower the control panel.

Where possible to improve access, remove the RHS panel, see 4.4

Isolate the flow and return valves, and drain the boiler using the drain vents provided.

Protect any electrical equipment from possible spills of system water.

Disconnect the electrical connection to the sensor

Unscrew the sensor

Refit in reverse order.

6.8 RETURN SENSOR (SR)

Isolate the electrical and gas supply.

Lower the control panel.

Disconnect the electrical connection to the sensor

Unclip the sensor from the pipe.

Refit in reverse order

6.9 SAFETY STAT

Isolate the electrical and gas supply.

Lower the control panel.

Disconnect the electrical connection.

Remove the two fixing screws.

Apply heat conducting paste to the replacement stat.

Refit in reverse order.

6.10 LIMIT STAT (TL)

Isolate the electrical and gas supply.

Lower the control panel.

Where possible to improve access, remove the LHS panel, see 4.4

Isolate the flow and return valves, and drain the boiler using the drain vents provided.

Protect any electrical equipment from possible spills of system water.

Disconnect the electrical connection.

Remove the limit stat fixing clip.

Remove the limit stat.

Refit in reverse order

6.11 EXHAUST SENSOR (SF)

Isolate the electrical and gas supply.

Disconnect the exhaust sensor.

Unscrew the exhaust sensor from the heat exchanger.

Refit in reverse order.

6.12 IGNITION TRANSFORMER

Isolate the electrical and gas supply.

Disconnect the electrical connections from the ignition transformer.

Remove the securing screws.

Replace in reverse order.

6.13 IGNITION ELECTRODE

Isolate the electrical and gas supply.

Disconnect the ignition electrode wiring from the ignition transformer.

Remove the Ignition electrode fixing screws.

Remove the ignition electrode.

Check the gasket and replace if required.

Refit in reverse order.

6.14 IONISATION ELECTRODE

Isolate the electrical and gas supply.

Disconnect the ionisation electrode wiring.

Remove the ionisation electrode fixing screws.

Remove the ionisation electrode.

Check the gasket and replace if required.

Refit in reverse order.

6.15 SAFETY DISCHARGE VALVE

Isolate the electrical and gas supply.

Lower the control panel.

Where possible to improve access, remove the RHS panel, see 4.4

Isolate the flow and return valves, and drain the boiler using the drain vents provided.

Protect any electrical equipment from possible spills of system water.

Disconnect the discharge pipe.


Remove the safety discharge valve fixing clip.

Remove the safety discharge valve.


Replace in reverse order using a new washer.

7 EXPLODED VIEWS

MURELLE HE 35 R - MURELLE HE 35 R M

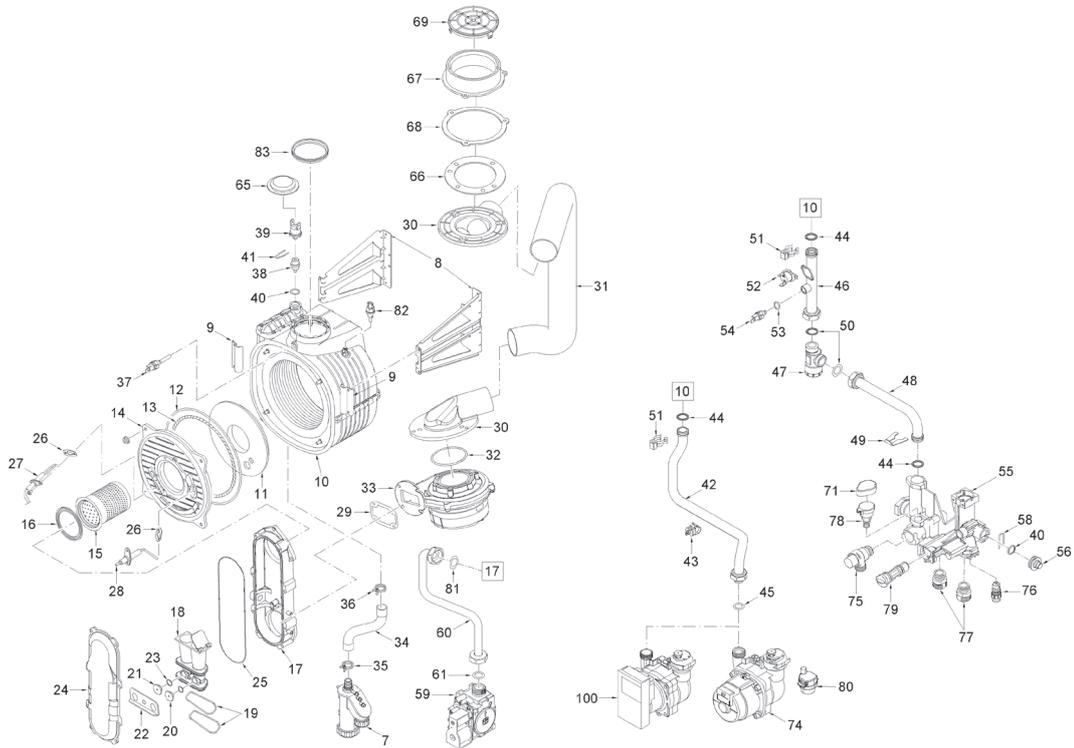

MURELLE HE 35 R / R M

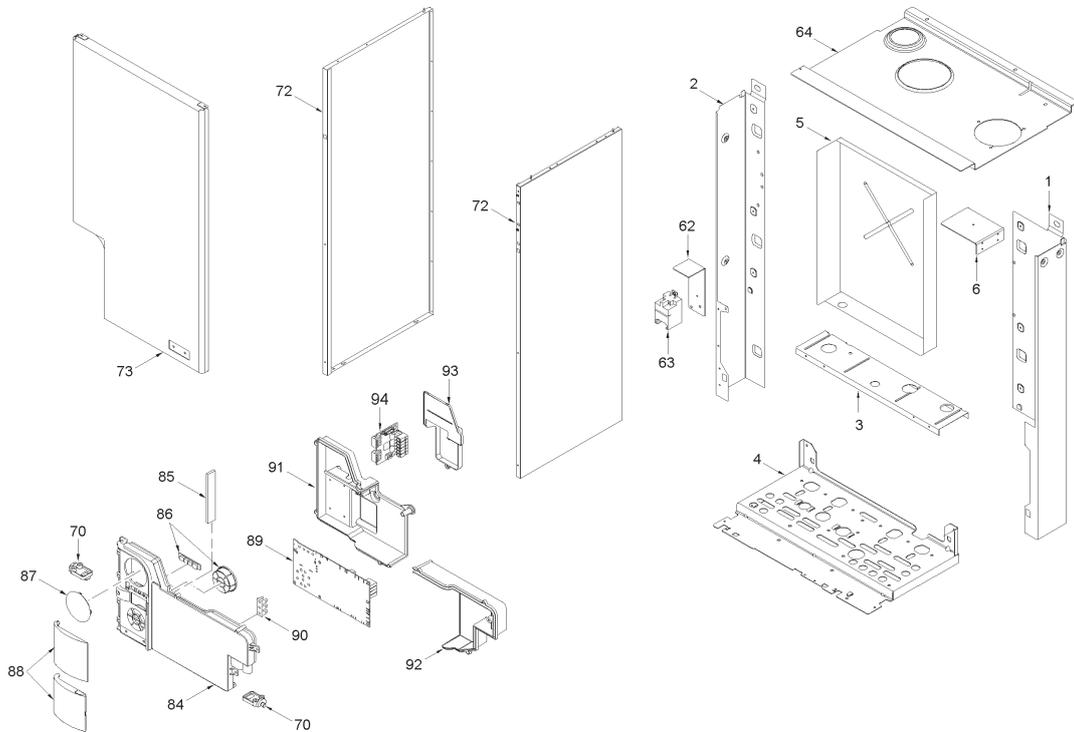

Posiz.	Codice	Descrizione
001	6138533	Right hand side frame part
002	6138632	Left hand side frame part
003	6255431	Expansion vessel lower support
004	6138894	Frame assembly lower side
005	6266081	Rear panel

006	6256751	Upper protection fixing bracket	
007	6277207	Water trap	
008	6010831	Main exchanger supporting brack	
009	6010829	Main exchanger fixing bracket	
010	6278910	Main exchanger body	
011	6269008	Main exchanger door insulation	
012	6248861	Combustion chamber O-ring	
013	6248860	Glass fibre sealing cord	
014	6278853	Main exchanger door	
015	6278357	Burner	
016	6174823	Gasket for burner flange	
017	6278813	Air-gas hose lower side	
018	5200301	Air/gas mixer assembly	
019	6226470	GUARNIZ. OR 3206 EP/851	
020	6322303	Round nozzle Ø 3,50 MET	MET
020A	6322304	Round nozzle Ø 2,80 LPG	GPL
021	6322353	Hexagonal nozzle Ø 4,00 MET	MET
021A	6322354	Hexagonal nozzle Ø 3,00 GPL	GPL
022	6267119	Nozzle locking bracket	
023	6226403	O-ring 2031	
024	6278812	Air-gas hose upper side	
025	6226465	O-ring Ø 183,83x2,62	
026	6174809	Gasket for ignition electrode	
027	6221632	Ignition electrode	
028	6221623	Ionisation electrode	
029	6174816	Gasket for fan flange	
030	6034305	Elbow flange	
031	6001153	Pipe Ø 39	
032	6226410	O-Ring Ø 63 x 3	
033	6261405	Fan	
034	6034155	Condensate drainage pipe	
035	2051122	Clamp diam. 22,1	
036	2051123	Clamp diam. 24,2	
037	6277130	Probe NTC D.4X40	
038	6112330	Bush thermostatic	
039	6146728	Limit stat auto reset 80°C	
040	6226464	O-ring 115 diam. 11,91x2,62	
041	6226624	Spring air vent knob	
042	6227436	C.H. return pipe	
043	6231360	Temperature sensor	
044	6226412	O-ring 3068	
045	6226457	O-ring 12bis diam. 16x1,90	
046	6277721	Pipe connect. exchanger-C.H fil	
047	6295501	C.H. filter 3/4" M x 3/4" M	
048	6277729	Pipe connect. C.H. filter-C.H.	
049	6226626	Pipe fixing spring	
050	2030252	Piracriten gasket Ø 16x24,5x2	
051	6226619	Spring for heat exchanger conne	
052	6146701	100°C safety stat	
053	6022010	Sensor gasket	
054	6231351	Plunged sensor	
055	6319696	C.H. Technyl manifold group	
056	6119371	Plastic plug	
058	6226627	Expansion vassel fixing spring	
059	6243837	Gas valve	
060	6277423	Pipe connecting gas valve-mixer	
061	2030228	Gasket Ø 17x24x2	
062	6256750	Transformer fixing bracket	
063	6098315	Ignition transformer	
064	6010865	Upper protection	
065	6226754	Rubber plug	
066	6028703	Gasket for duct flange	
067	6288011	Diam.80 air intake	
068	6028707	Air intake gasket	
069	6190002	Air inlet grid ø 80	
070	6302000	Plastic pin	
071	6319650	Bitron transducer cap	
072	6304430	casing left/right side panel	
073	6304231	Casing front panel	
074	6272312	Circulating pump	MURELLE HE 35 R
075	6040211	Pressure relief valve 3 bar	
076	6319603	Discharger cock	
077	6120533	C.H Nipple	
078	6273608	Water pressure transducer	
079	6319641	By-pass 2 (new)	
080	6013182	Automatic air vent	
081	2030255	Gasket Ø 12,5x18,5x3	
082	6146723	Thermo-fuse 167°C	

083	6248828	Air inlet gasket Ø80	
084	6304700	Control panel	
085	6305160	Guidelight with led	
086	6305120	Kit Rubber button	
087	6247327	Cap for time programmer	
088	6304890	Flap door assembly	
089	6301480	Main PCB	
090	2211610	Earth faston	
091	6305000	Cover	
092	6305010	connection cover	
093	6305020	Time programmer cover	
094	6301465	PCB expansion	
100	6272320	Modulating circulating pump	MURELLE HE 35 R M
700	5198890	Technyl hydraulic group	
701	6319699	Split pin kit for hydraulic gro	
702	6319698	O-ring kit for hydraulic group	
703	6211792	Hydraul. group Bitron caps kit	
706	5185140	Conversion kit to LPG	
707	5197109	Complete control panel	MURELLE HE 35 R
708	6186587	Ionisation electrode cable	
709	6127214	Main cable L=1500	
710	6316202	Connector 4 poli CN6	
711	6316203	Connector 4 poli CN4	
712	6316204	Connector 8 poli CN7	
713	6316213	3 pole cable connector CN14	
714	6316280	4 pole cable connector CN12	
715	6319158	4 pole cable connector	
716	6319156	9 pole cable connector	
717	6319144	14 pole female cable connect.	
718	6319165	5 pole cable connector	
719	6245381	Circulating connector	MURELLE HE 35 R
720	5197118	Control panel x modul.circul.pu	MURELLE HE 35 R M
721	6319147	Modul.pump 3 pole female connec	MURELLE HE 35 R M

INDUSTRY GUIDANCE FOR INSTALLERS ON CONDENSATE

DRAINAGE PIPE INSTALLATION

This guidance is endorsed by HHIC members.

1. BACKGROUND

During recent winters the UK has experienced prolonged spells of extremely cold weather - down to minus 20°C and below in many areas. This resulted in a significant increase in the number of calls to boiler manufacturers and heating engineers from householders with condensing (high efficiency) boilers where the condensate drainage pipe had frozen and become blocked with ice, causing the boiler to shut down. In the vast majority of cases such problems occur where the condensate drainage pipe is located externally to the building for some part of its length.

British Standards, Building Regulations etc. currently allow condensate drainage pipes to be run either internally or externally, or a combination of these. These documents give guidance on how to install the pipes in order to reduce the possibility of freezing. However this guidance may not be sufficient to prevent freezing in extreme conditions - with widespread and prolonged very low temperatures.

In view of the possibility that UK weather patterns will show more “extremes” in future due to the effects of global climate change, the following guidance updates previous recommendations on condensate drainage pipe installation. All other technical requirements for condensate drain installation given in British Standard BS 6798:2009, or in boiler manufacturers’ installation instructions should still be followed.

2. REVISED GUIDANCE ON CONDENSATE DRAINAGE PIPE INSTALLATION

Where a new or replacement boiler is being installed, access to an internal “gravity discharge” termination should be one of the main factors considered when determining potential boiler locations, so that the condensate drainage pipe can be terminated as recommended below. On an existing installation, the guidance below should also be followed if work is carried out to “upgrade” the condensate drainage system to reduce the risk of freezing in extreme conditions.

Internal condensate drainage pipework must be a minimum of 19mm ID (typically 22mm OD) plastic pipe and this should “fall” at least 45 mm per metre away from the boiler, taking the shortest practicable route to the termination point.

In order to minimise the risk of freezing during prolonged very cold spells, one of the following methods of terminating condensate drainage pipe should be adopted -

2.1 INTERNAL TERMINATION:

Wherever possible, the condensate drainage pipe should be terminated at a suitable internal foul water discharge point such as (a) an internal soil and vent stack or (b) an internal kitchen or bathroom waste pipe, washing machine waste pipe etc. A suitable permanent connection to the foul waste pipe should be used. Figures 1, 2(a), 2(b) show appropriate connection methods.

The possibility of waste pipes freezing downstream of the connection point should be considered when determining a suitable connection point - e.g. a slightly longer pipe run to an internal soil stack may be preferable to a shorter run connecting into a kitchen waste pipe discharging directly through the wall to an external drain.

Where “gravity discharge” to an internal termination is not physically possible (e.g. the discharge point is above the appliance location, or access is obstructed by a doorway), or where very long internal pipe runs would be required to reach a suitable discharge point, the following measures may be adopted -

2.2 USE OF A CONDENSATE PUMP (TO AN INTERNAL TERMINATION):

Condensate can be removed using a proprietary condensate pump, of a specification recommended by the boiler or pump manufacturer.

The pump outlet should discharge to a suitable internal foul water discharge point, such as (a) an internal soil and vent stack or (b) an internal kitchen or bathroom waste pipe, washing machine waste pipe etc. Figure 3 shows a typical connection method.

A suitable permanent connection to the foul waste pipe should be used and the manufacturer’s detailed installation instructions for the pump should be followed.

2.3 EXTERNAL TERMINATION:

The use of an externally-run condensate drainage pipe, terminating at a suitable foul water discharge point or purpose-designed soakaway, may be also be considered; however if this termination method is chosen then the following measures should be adopted -

The pipe should be run internally as far as possible before going externally and the pipe diameter should be increased to a minimum of 30mm ID (typically 32mm OD) before it passes through the wall.

The external run should be kept as short as possible, taking the most direct and “most vertical” route possible to the discharge point, with no horizontal sections in which condensate might collect.

The external pipe should be insulated using suitable waterproof and weatherproof insulation (“Class O” pipe insulation is suitable for this purpose) .

The use of fittings, elbows etc should be kept to a minimum and any internal “burrs” on cut pipework should be removed so that the internal pipe section is as smooth as possible.

The customer/householder should be advised that even with the above measures this type of installation could freeze, and that if this were to occur then boiler shutdown could result, requiring remedial action - possibly involving a chargeable engineer call-out.

Where there are likely to be extremes of temperature or wind-chill, the use of a proprietary trace-heating system for external condensate drainage pipework, incorporating an external frost thermostat, should therefore be considered. If such a system is used then the installation instructions of the trace heating manufacturer and any specific recommendations regarding pipe diameter, insulation, etc. should be followed. All other relevant guidance on condensate drainage pipe installation should also be followed.

Other cold weather protection methods approved or endorsed by boiler manufacturers and/or service organisations may be adopted if these are considered suitable by the parties involved.

If an external soil/vent stack is used as the external termination then the connection method shown in Figure 4 should be used, together with the measures on insulation etc. as described above and shown in the diagram.

When a rain water downpipe is used as the termination (**NB** only permissible if this downpipe passes to a combined foul and rainwater drainage system) an air break must be installed between the condensate drainage pipe and the downpipe to avoid reverse flow of rainwater into the boiler should the downpipe itself become flooded or frozen. Figure 5 shows a suitable connection method.

Where the condensate drainage pipe is terminated over an open foul drain or gully, the pipe should terminate below the grating level, but above water level, in order to minimise “wind chill” at the open end. Pipe drainage will be improved if the end is cut at 45° as opposed to a straight cut. The use of a drain cover (such as those used to prevent blockage by leaves) may offer further protection from wind chill. Figure 6 shows a suitable connection method.

Where the condensate drain pipe terminates in a purpose-designed soakaway (see BS 6798:2009 or boiler installation manual for soakaway design requirements) any above-ground section of condensate drainage pipe should be run and insulated as described above. Figure 7 shows a suitable connection method.

3. UNHEATED INTERNAL AREAS:

Internal condensate drainage pipes run in unheated areas such as lofts, basements and garages should be treated as external pipe.

NOTES

The Benchmark Commissioning Checklist (located at the back of the boiler installation manual) should be completed as required to record details of the condensate drainage pipe installation.

Where an external condensate drainage pipe is installed, the customer should be made aware of the risks and consequences of its freezing and offered the option to fit trace heating (or other measures approved by the boiler manufacturer or service organisation).

Separate guidance has been published for householders on remedial actions which can be taken if a condensate drainage pipe freezes. This may result in requests for alteration to condensate drainage pipework, in which case the guidance above should be followed.

In some instances (e.g. where an elderly person's heating needs to be reinstated as an emergency measure) condensate drainage pipes may have been cut in order to bypass any blockage and allow re-ignition of the boiler, with condensate being collected in a suitable container as a temporary solution.

While not unsafe, this is not recommended practice and if such action has been taken then the condensate drainage pipe must be reinstated as soon as possible, using the above guidance to reduce risk of freezing in future.

Figure 1 – Connection of condensate drainage pipe to internal soil and vent stack

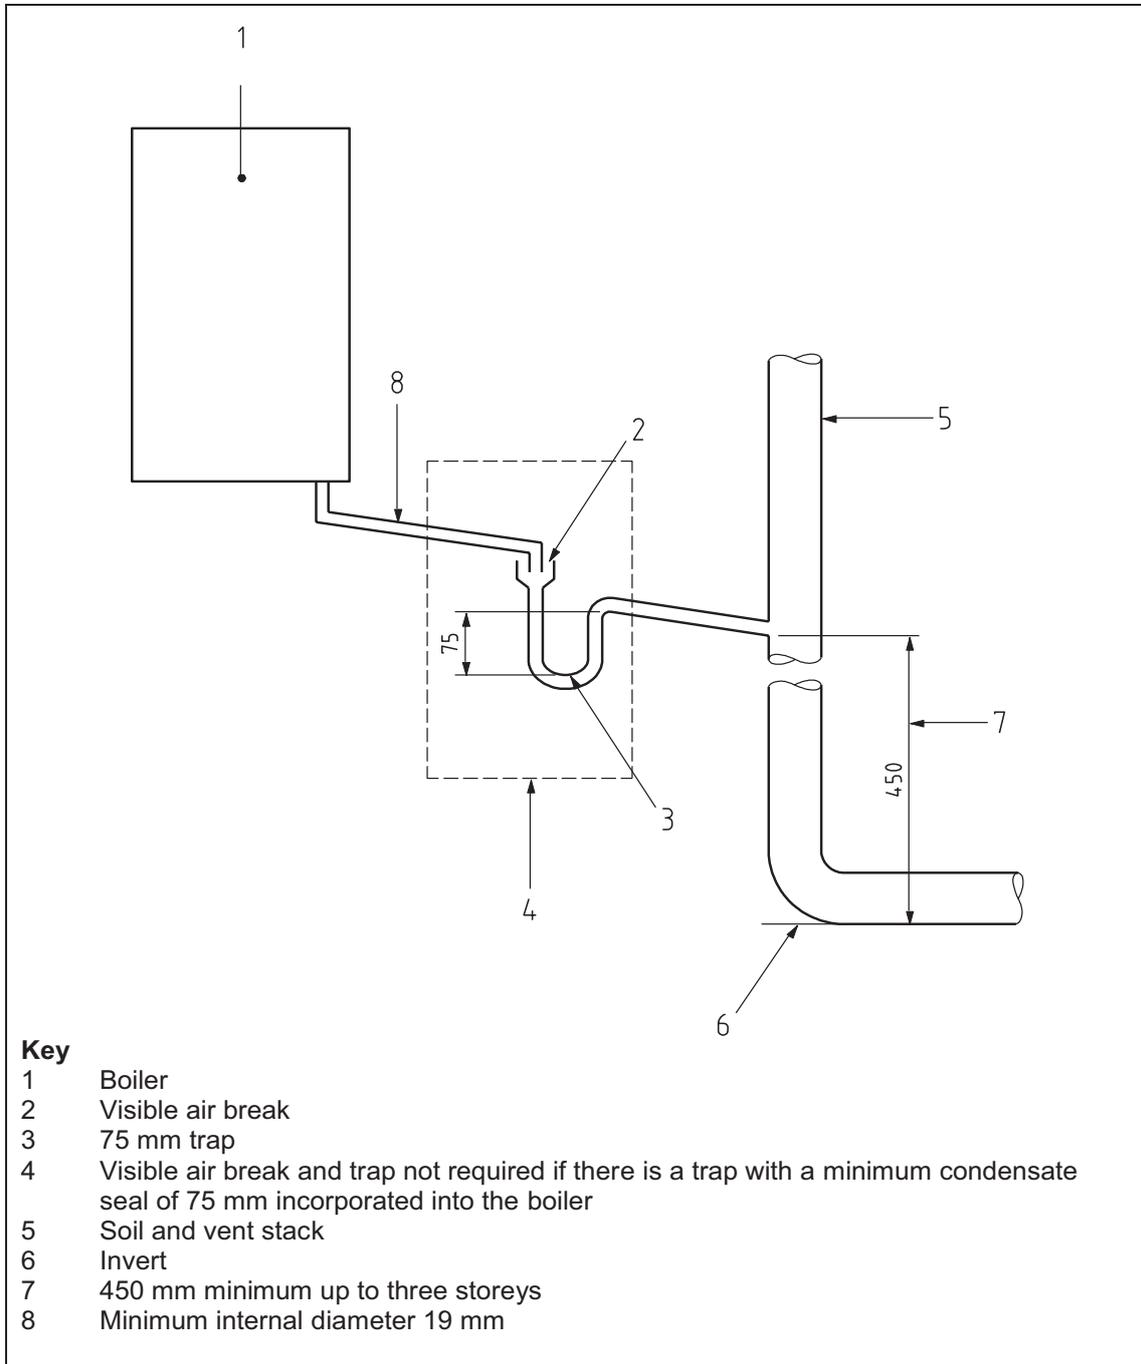


Figure 2(a) – Connection of a condensate drainage pipe downstream of a sink, basin, bath or shower waste trap

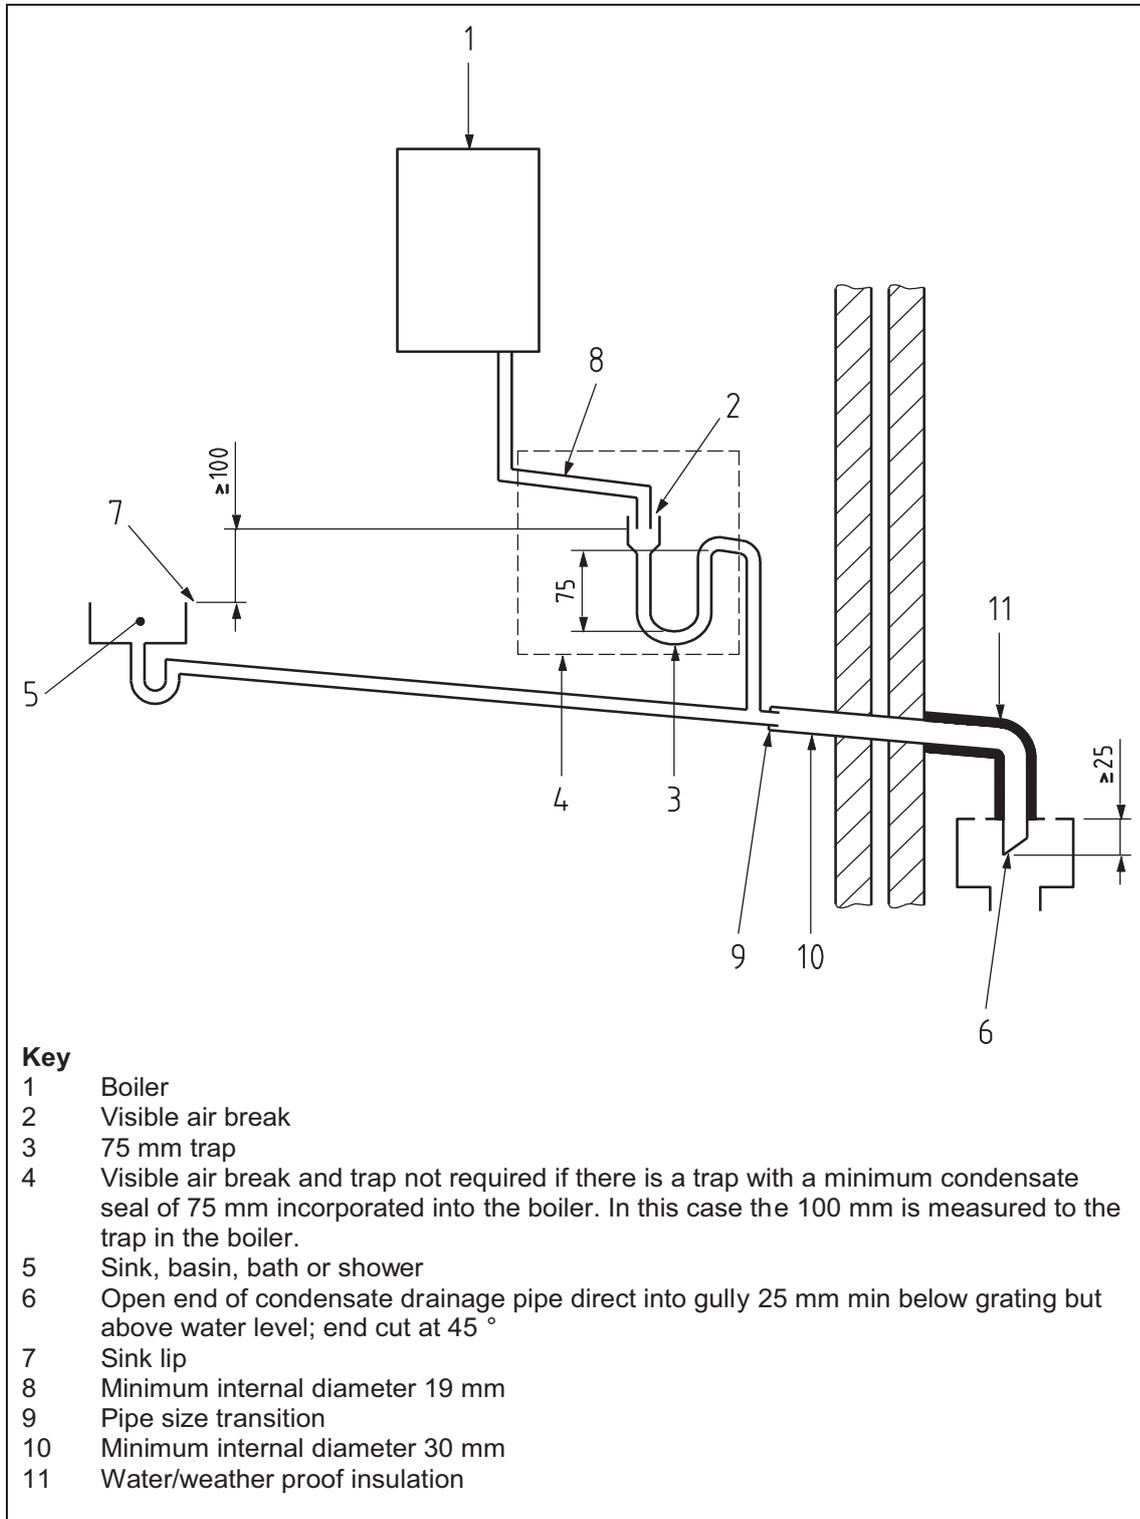


Figure 2(b) – Connection of a condensate drainage pipe upstream of a sink, basin, bath or shower waste trap

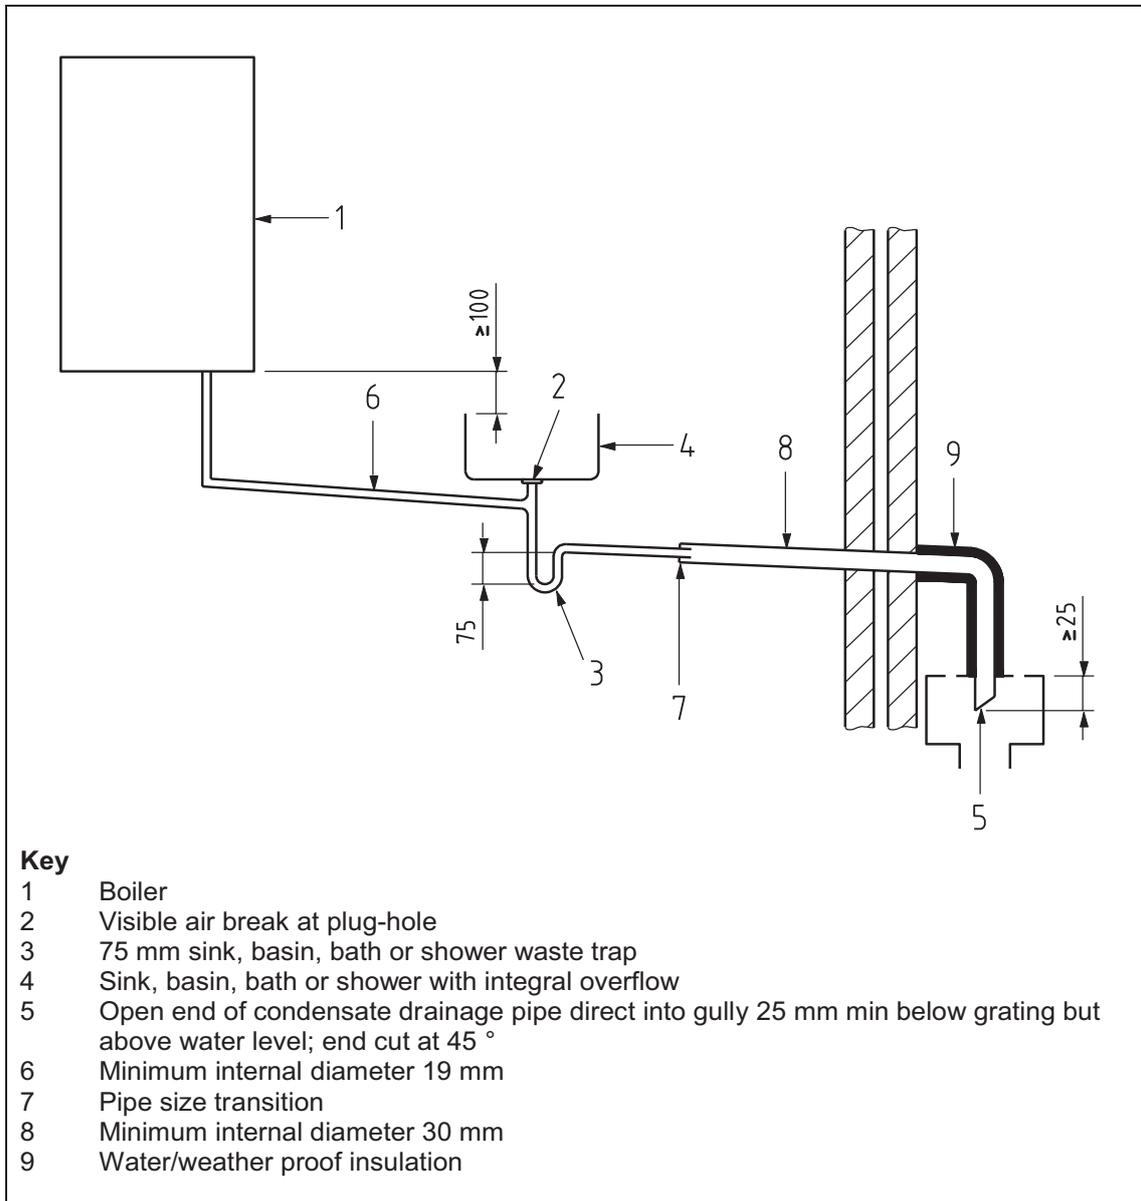


Figure 3 – Connection of a condensate pump - typical method (NB manufacturer’s detailed instructions should be followed).

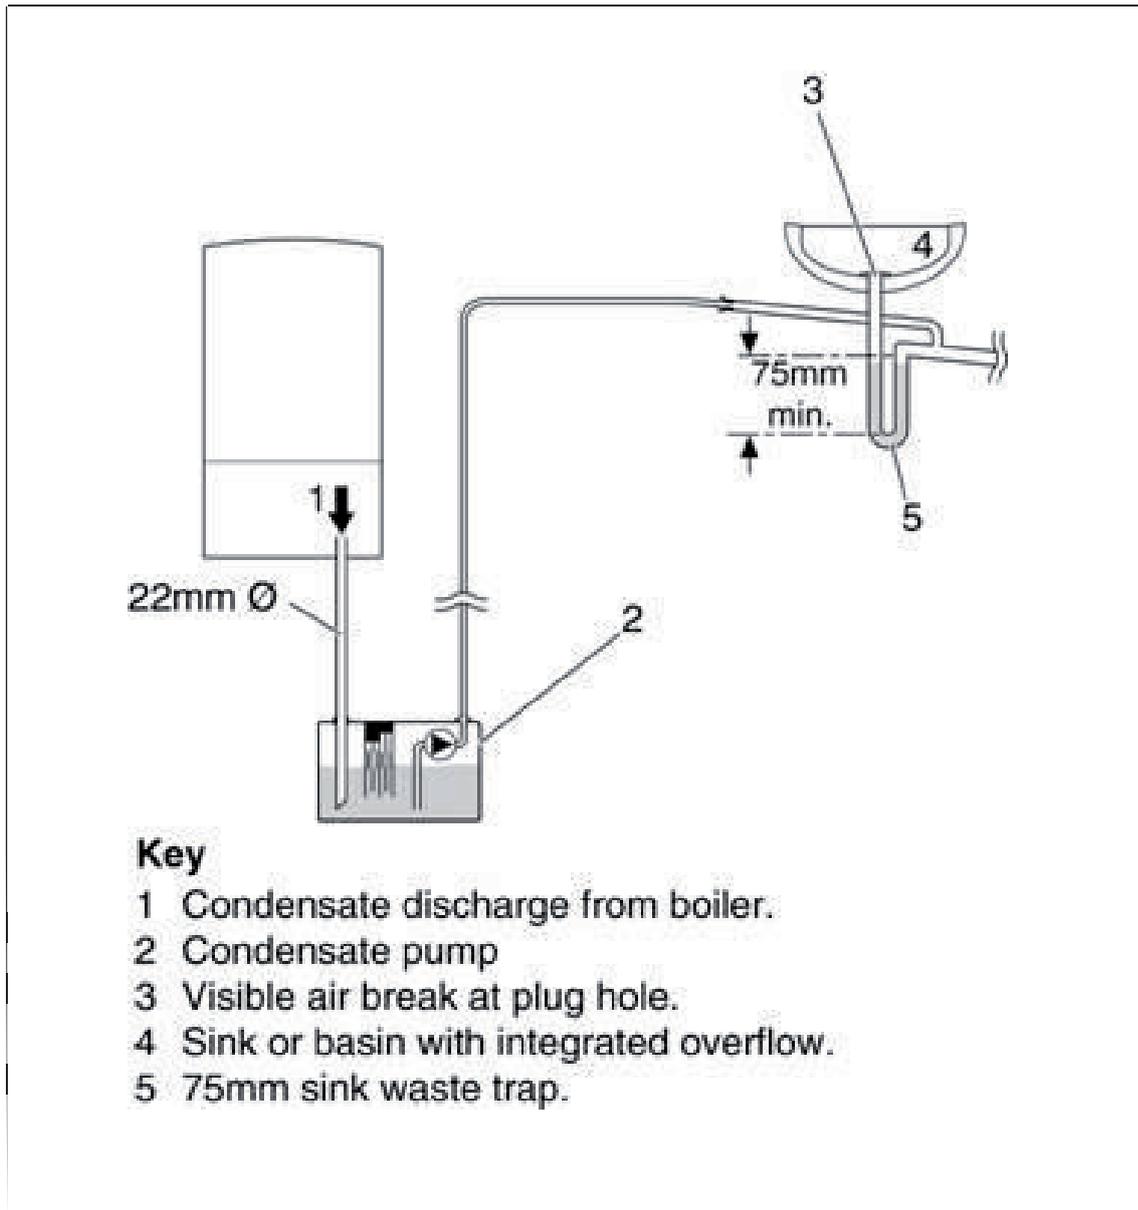


Figure 4 – Connection of condensate drainage pipe to external soil and vent stack

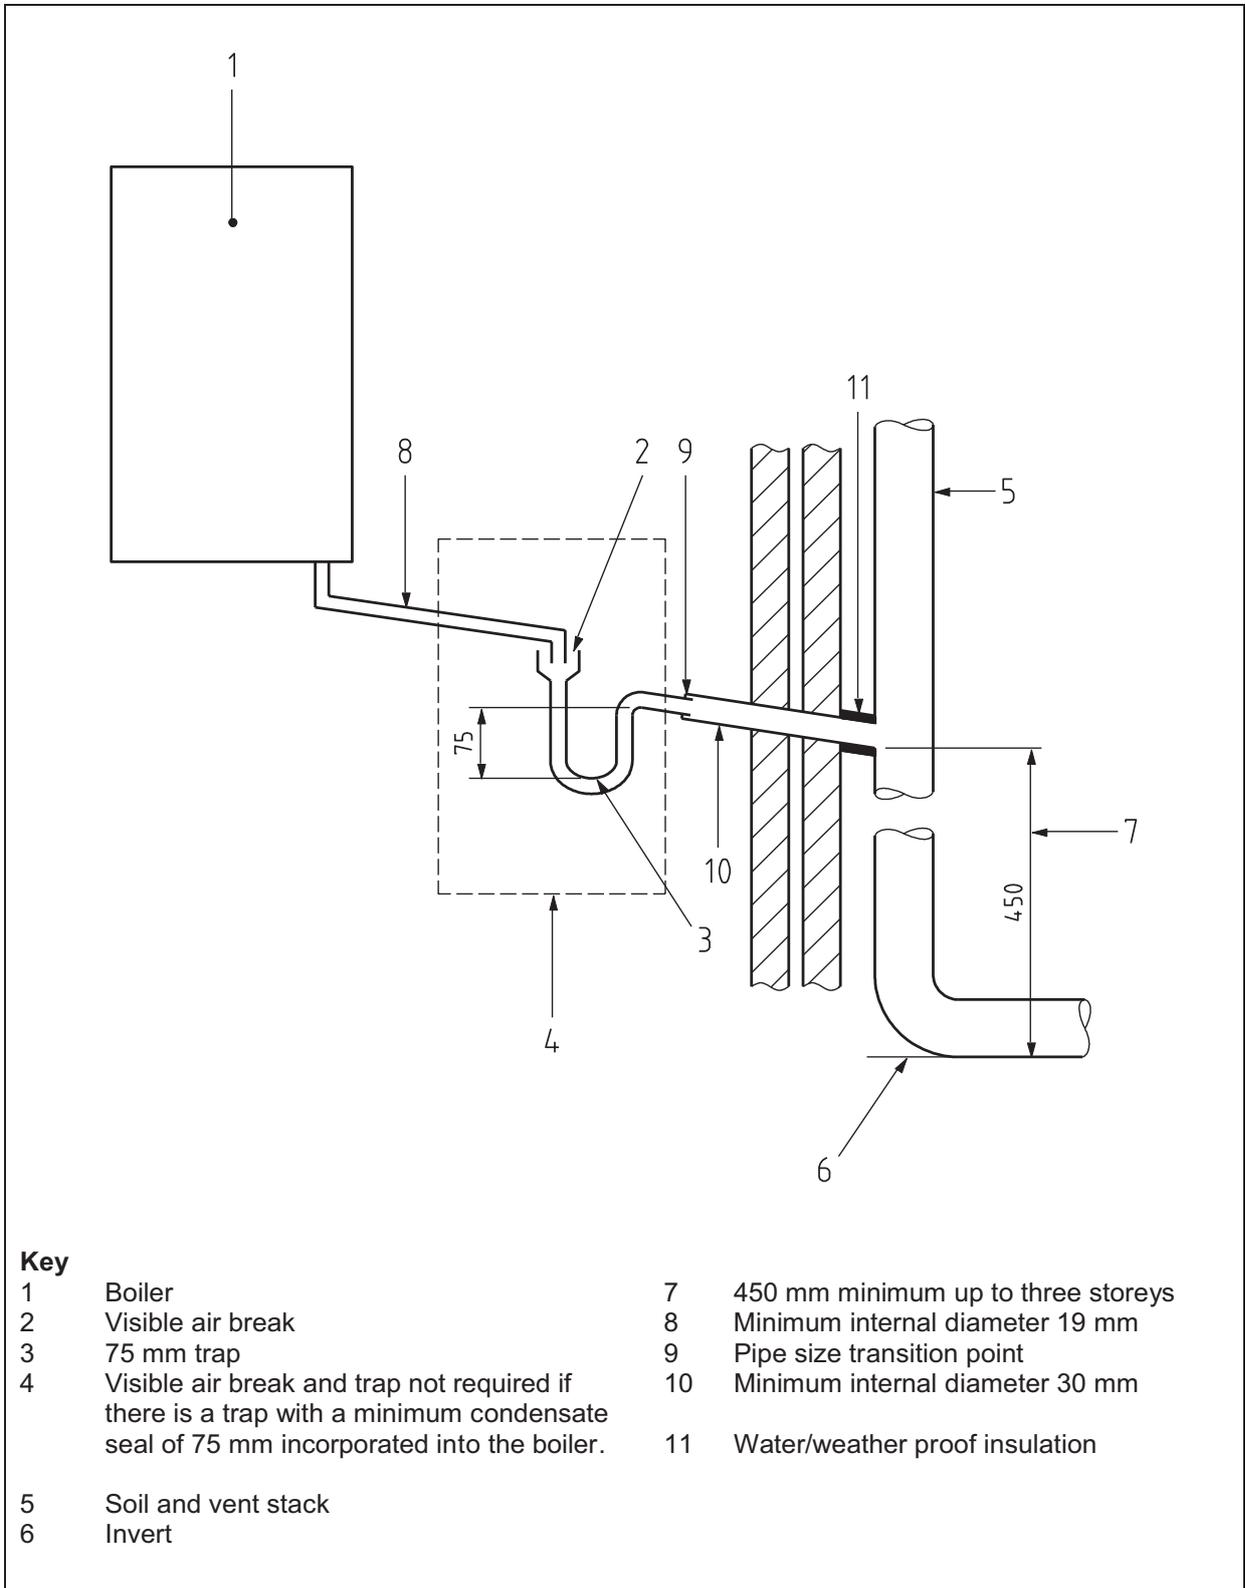


Figure 5 – External termination to rainwater downpipe (NB only combined foul/rainwater drain)

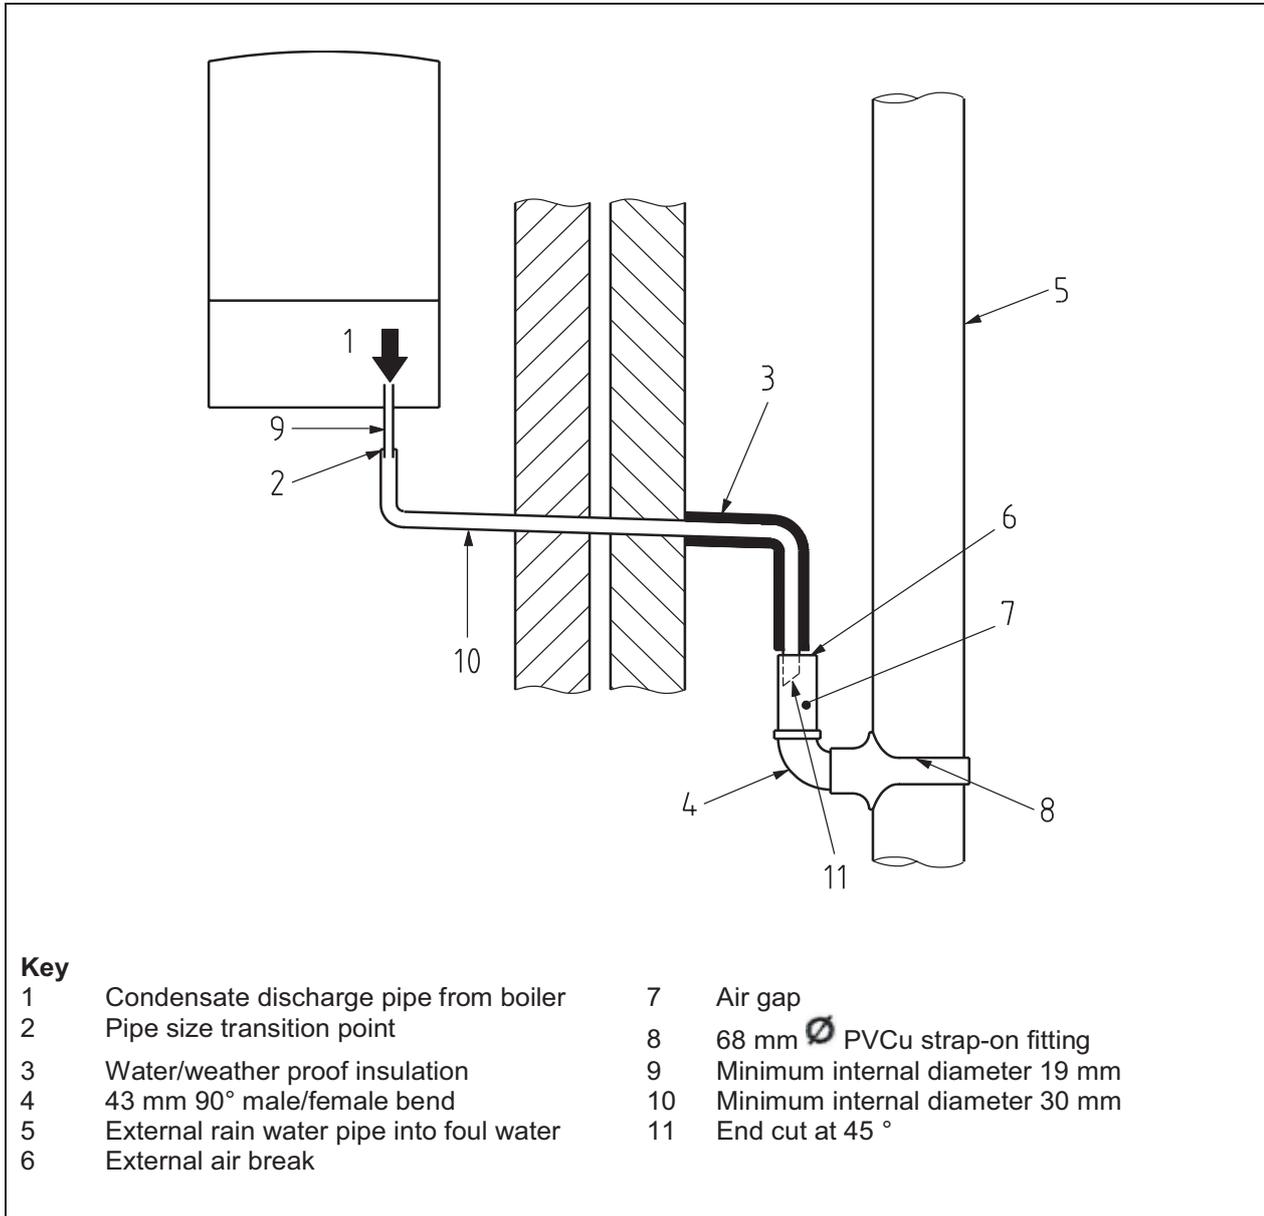


Figure 6 – External drain, gully or rainwater hopper


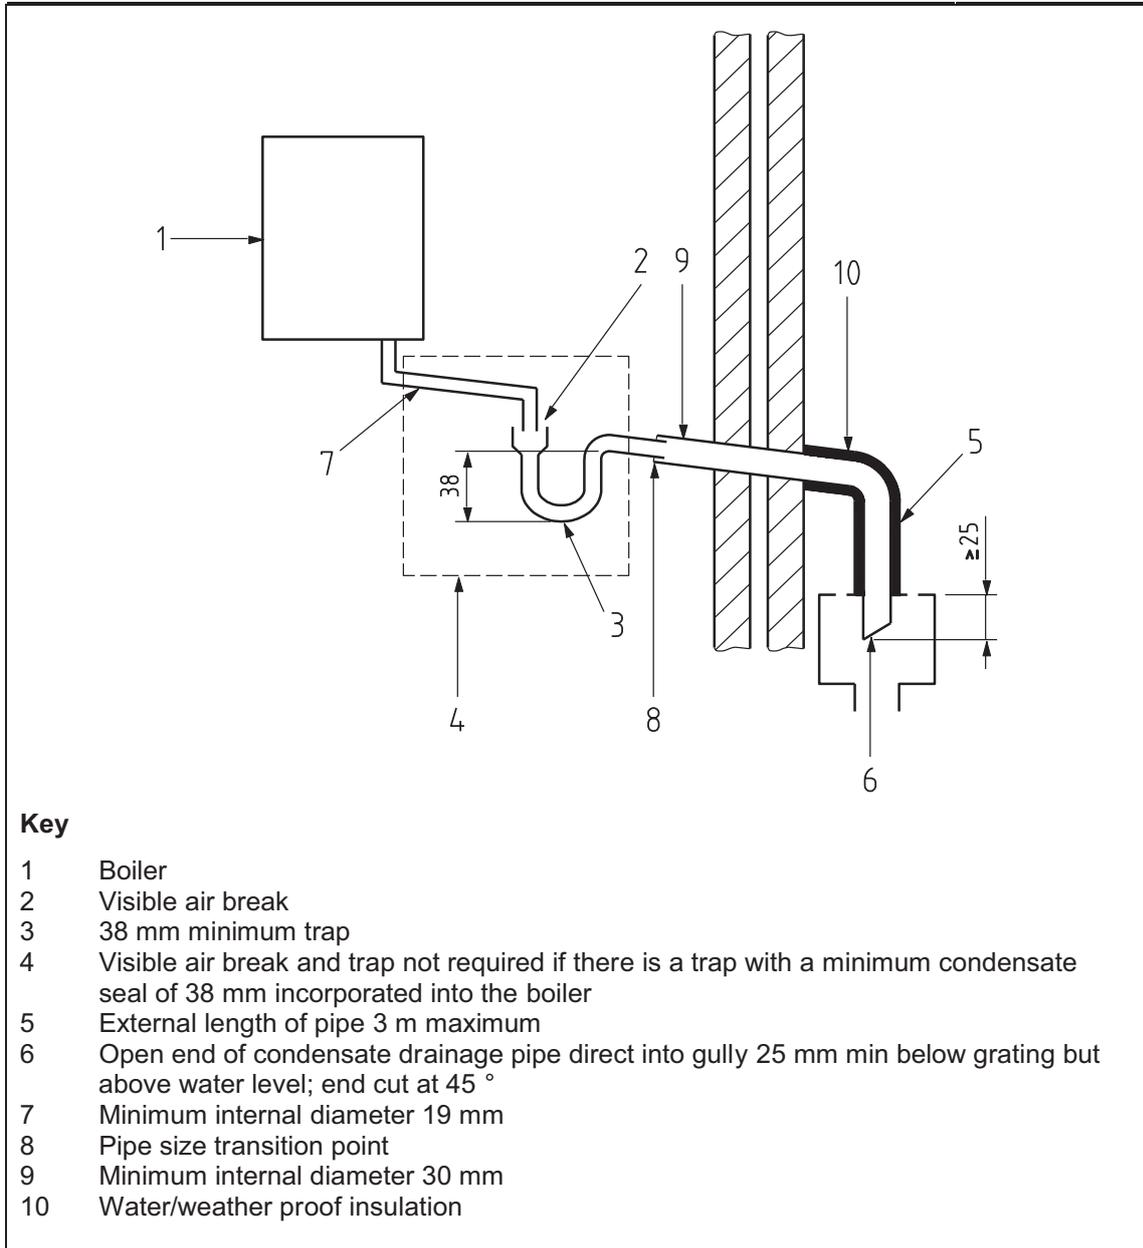


Figure 7 – Example of a purpose-made soakaway



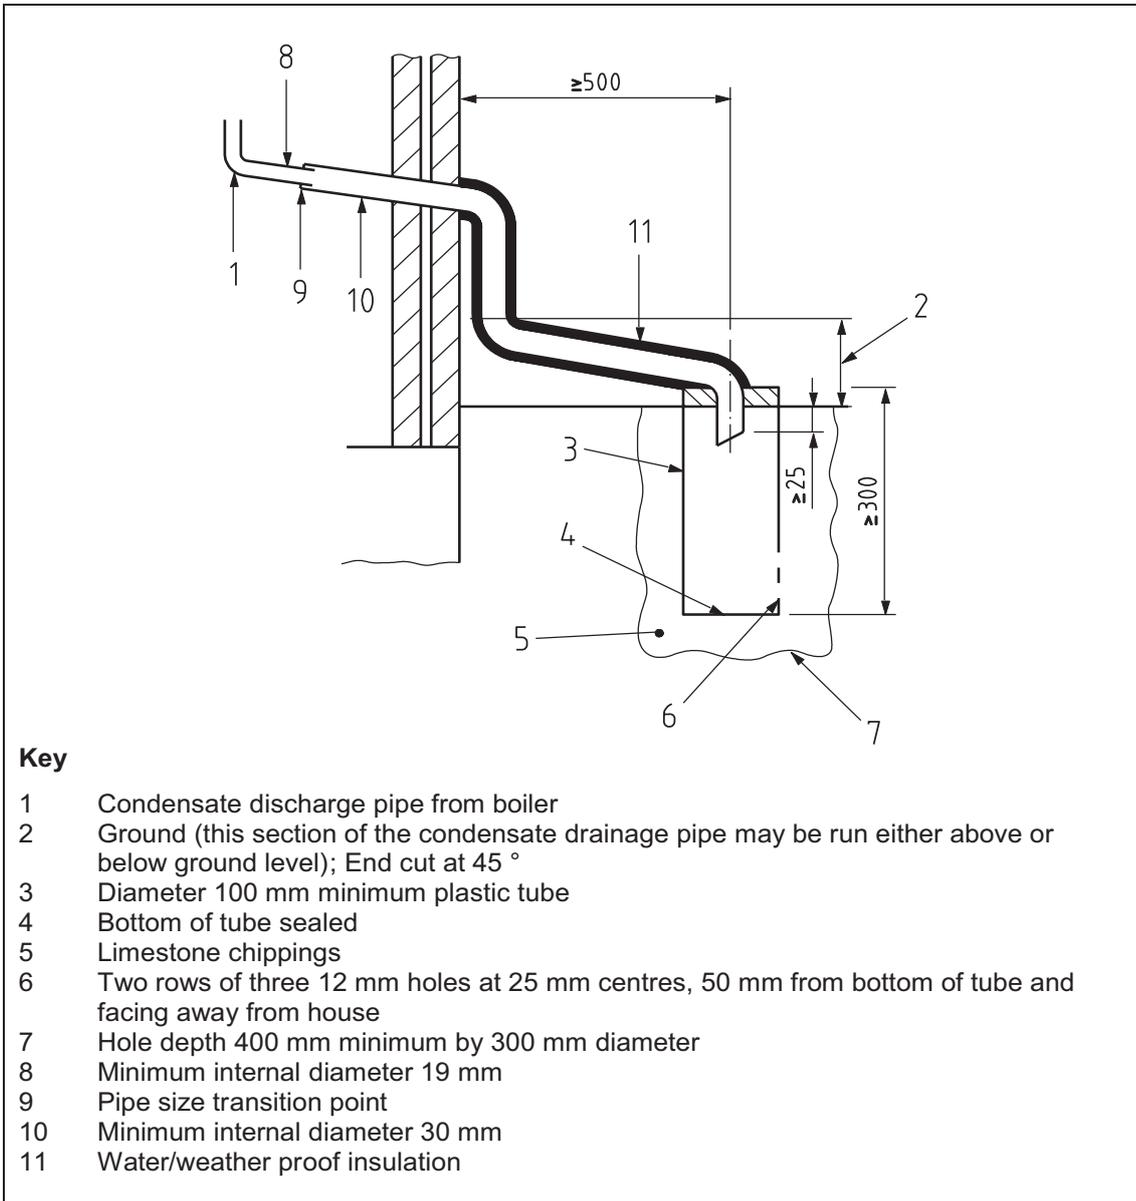

Sime Ltd

1a Blue Ridge Park
Thunderhead Ridge
Glasshoughton, Castleford, WF10 4UA

Phone: 0845 9011114

Fax: 0845 9011115

www.sime.co.uk

Email: enquiries@sime.co.uk